


RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

PARTS ENCLOSED:

- (A) TUBE
- (B) BALL SWIVEL
- (C) ARM
- (D) ADJUSTMENT KNOB
- (E) ADJUSTMENT KEY
- (F) SOCKET
- (G) SHADE
- (H) POLARIZED PLUG
- (I) PROTECTIVE PLASTIC

FRANKLIN PHARMACY TABLE LAMP

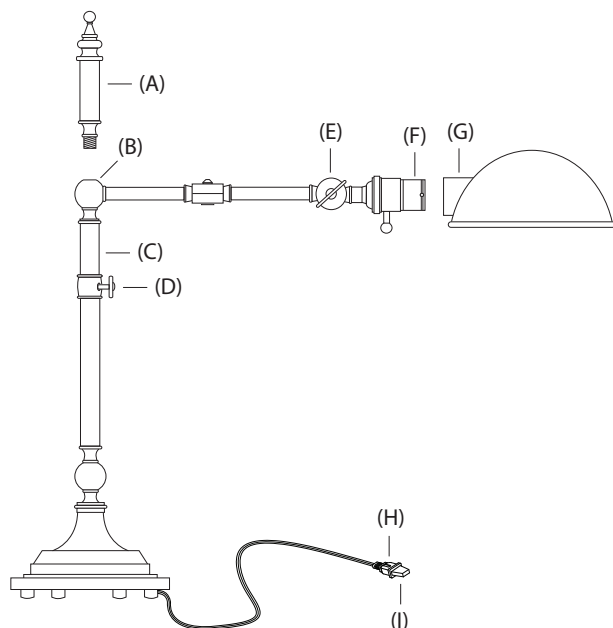

IMPORTANT SAFETY INSTRUCTIONS:

For safety purposes, this lamp is equipped with a polarized plug (one blades is wider then the other). If the plug does not fit securely into outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for up to (1) 60W MAX. Type A, medium base bulb. To avoid risk of fire, do not exceed the recommended wattage.

WARNINGS:

Turn off power (unplug from the wall outlet) before replacing the bulb(s), making sure the bulb(s) had sufficient time to cool down.

DO NOT subject the lamp to any shock while lit as shattering of bulb may result.

TO ASSEMBLE:

NOTE: Do not connect the electricity until lamp is fully assembled.

1. Remove all parts from carton. Remove protective wrapping.
2. Place base (D) on a level surface.
3. Thread tube (A) into the top of ball swivel (B).
4. Place shade (G) over socket (F). GENTLY press shade (G) onto socket (F) until it slides into place.
5. Insert one (1) 60W MAX, Type A, medium base bulb into socket (F).
6. Remove protective plastic (I) from polarized plug (H).
7. Insert polarized plug (H) into outlet.

HEIGHT ADJUSTMENT

1. To adjust the height of your lamp, loosen adjustment knob (D) and move arm (C) into desired position. NOTE: Pull cord from below base when adjusting height to prevent damage to wire.
2. Once desired height is reached, turn adjustment knob (D) until hand tight.

SHADE ADJUSTMENT

1. To adjust the angle of your shade, loosen adjustment key (E) and move shade (G) into desired position.
2. Once desired position is reached, turn adjustment key (E) until hand tight.

CARE INSTRUCTIONS:

To clean, use a soft cloth only. DO NOT use any chemical or abrasive cleaners.