


# RESTORATION HARDWARE

## INDUSTRIAL SINGLE PULLEY PENDANT

### PARTS ENCLOSED

- (A) Mounting Strap (1)
- (B) Threaded Rod (2)
- (C) Mounting Screws (2)
- (D) Canopy Base (1)
- (E) Cap Nut (2)
- (F) Larger Pulley (1)
- (G) Smaller Pulley with ball (1)
- (H) Cord (1)
- (J) Thumbscrews (3)
- (K) Socket (1)
- (L) Glass Shade (1)

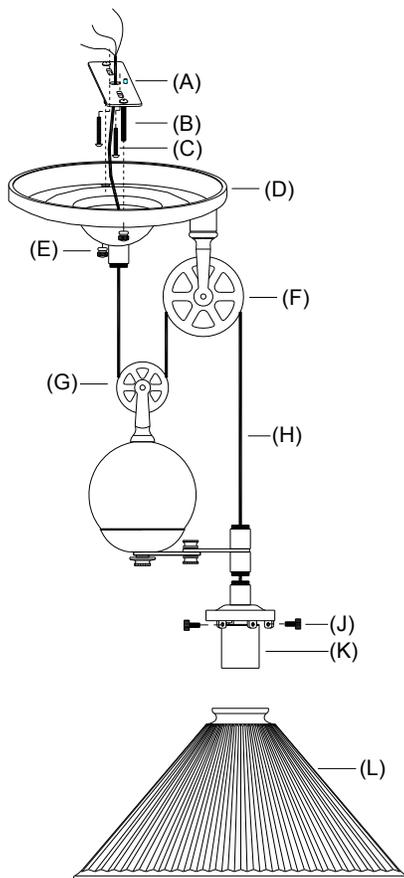

### IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to one (1) 60-watt maximum Type A bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

### WARNINGS:

1. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.
2. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
3. Do not connect electricity until your lamp is fully assembled.
4. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
5. Do not touch bulb when fixture is turned on or look directly at lit bulb.
6. Keep flammable materials away from lit bulb.

### TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Remove the mounting strap (A) from canopy base (D) by unscrewing the cap nuts (E).
3. Attach mounting strap (A) to ceiling outlet box with mounting screws (C).
4. Attach the fixture grounding wire (green wire) and house grounding wire (usually green or copper) to the mounting strap with the green grounding screw.
5. Connect the hot wire (black) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape.
6. Connect the neutral wire (white) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
7. Tuck these wire connections neatly into the ceiling outlet box.
8. Carefully attach the canopy base (D) to the ceiling outlet box, letting rods (B) pass through the holes of canopy base (D) and secure with cap nuts (E).
9. Loosen the thumbscrews (J), place the glass shade (L) over the socket (K) and secure with thumbscrews (J). **Do not over-tighten the screws or the shade could be damaged.**
10. Insert the recommended bulb (not included) into socket.
11. Assembly is complete.

### TO ADJUST HEIGHT:

Adjust height by sliding the cord (H) on the larger pulley (F) and smaller pulley (G) to desired height.

*NOTE: If the shade will not hold position, you may increase the tension in the pulley wheels by tightening the bolts in the center of the wheels with an adjustable wrench. Use a cloth when making adjustments to protect the finish.*

### CARE INSTRUCTIONS:

Wipe all surfaces with a soft dry cloth. Clean glass with a mild soap and water mixture. Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.