



RESTORATION HARDWARE


OUTDOOR FURNITURE COVERS

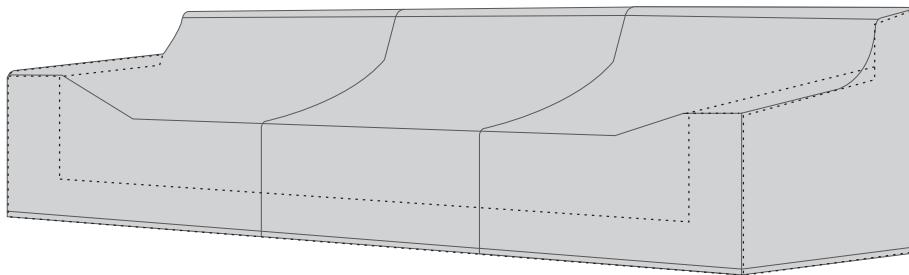


Sofa Cover

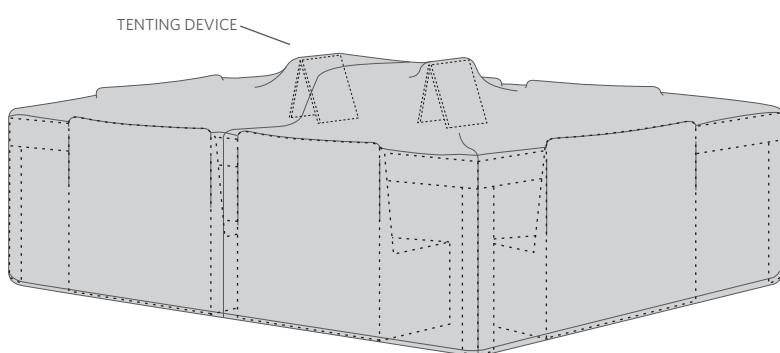


Dining Set Cover

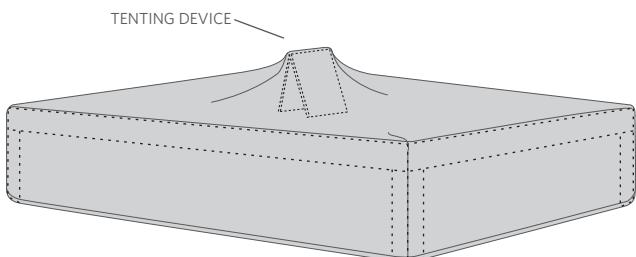


Coffee Table Cover

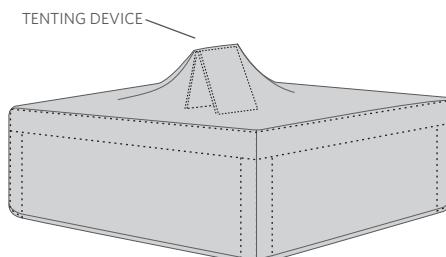

Side Table Cover

 

Full Umbrella Cover

 

Umbrella Canopy Cover

FEATURES

Custom-made to fit our outdoor furniture, our covers offer superior performance and are made of breathable Sur Last® fabric that's highly resistant to mold, tearing and fading. They're the design industry's choice for protecting furniture from dust and dirt, harsh ultraviolet rays and inclement weather.

- Custom-made for our outdoor furniture collections
- Durable Sur Last® fabric is 100% solution-dyed polyester
- Breathable fabric resists mold and mildew
- Resists shrinkage, fading, UV rays and harsh weather
- Holds its shape without tearing or stretching
- Highly water-resistant
- Secures with straps and a self-release buckle
- 3-year limited warranty on fabric
- Available in 6 colors

RESTORATION HARDWARE

OUTDOOR FURNITURE COVERS

HOW TO USE

1. Dining set covers require all the dining chairs to be pushed under the table as far as possible.
2. All covers for dining tables, dining sets, coffee tables, side tables and console tables should be placed over the tenting devices that are included. These devices provide elevation, allowing water to run off and not puddle. When one tent is included, place it in the center of the table; when your cover comes with two tents, space them evenly along the length of the table top.
3. If your furniture has back cushions, lay them down flat on the seat(s) before putting the cover on. This will allow the cover to fit properly.
4. Place cover over furniture; the side that has the long strap attached goes in the back. If your cover has a zipper, cover the furniture with the zipper open, then zip closed for a secure fit.
5. Bring straps underneath the furniture from back to front and buckle to keep covers secure.

CARE

Before placing covers on furniture, spray off any debris with a hose and wipe furniture dry with a soft cloth; residue trapped on the surface can create mold.

For ongoing care of covers, spray off any dirt or debris with a hose once a month. A more rigorous cleaning will be needed every 2-3 years; use a soft bristle brush and a cleaning mixture of cold or lukewarm water (under 100°F) and mild, natural soap. Avoid harsh detergents.

For stubborn stains, apply a mixture of diluted chlorine bleach and water. Lightly spray mixture on the fabric (non-coated side). Do not soak fabric for more than 2 minutes; prolonged exposure to harsh chemicals can damage the interior lining.

Rinse thoroughly. Air dry only.

WARRANTY

One-year limited warranty covering manufacturing defects that include seam separation and/or zipper failure. The fabric carries a three-year limited warranty against loss of function due to loss of color or strength from normal usage and exposure conditions, including sunlight, mildew and atmospheric chemicals. Consumer is responsible for normal care and cleaning of the fabric.