
RESTORATION HARDWARE

NEWCASTLE LARGE PENDANT

PARTS:		
ITEM	DESCRIPTION	QTY.
(A)	CORD GRIP	1
(B)	CEILING BOLT WITH GROUNDING SCREW	1
(C)	CEILING ROSE	1
(D)	RETAINING NUT	1
(E)	CEILING LOOP	1
(F)	HOOK	1
(G)	METAL CHAIN	1
(H)	POWER CORD	1
(I)	GROUND WIRE	1
(J)	KNOB	1
(K)	KNOB	1
(L)	QUICK LINK	1

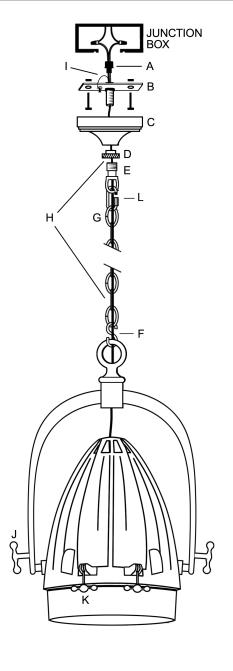

IMPORTANT SAFETY INSTRUCTIONS:

These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

Turn off electricity at the main circuit breaker panel before beginning installation.

This direct wire fixture must be installed by a certified and licensed electrician. Customer should not attempt to install.

This fixture has been rated for one 100W Incandescent Edison bulb per socket (2). To avoid risk of fire, do not exceed the recommended wattage.

If any special control devices are used with this fixture, follow the instructions carefully to assure full compliance with the N.E.C. requirements. If there are any questions. contact a licensed electrical contractor.

INSTRUCTIONS:

- Shut off electrical supply at main fuse box / circuit breaker. A licensed electrician should install this fixture.
- 2. Unscrew the ceiling bolt (B) from the ceiling loop (E). Attach ceiling bolt (B) to junction box using mounting screws provided.
- 3. Unroll power cord (H) and ground wire (I) so they lay parallel on the floor.
- Loosen knobs (K) and open the pendant. Screw two, type A 100W bulbs into the sockets. Close and re-tighten knobs.
- 5. Attach chain (G) to the pendant with hook (F).
- 6. Weave the power cord (H) and ground wire (I) through the chain (G).
- 7. Lift Pendant and guide the wires through the ceiling loop (E), retaining nut (D), ceiling rose (C), through the threaded tube of the ceiling bolt (B).
- 8. Connect the grounding wire (silver colored, un-laminated) to the grounding screw in the ceiling bolt (B).
- Connect the wires from the lamp to the wires in the junction box, neutral to neutral, live wire to live wire, with plastic wire connectors (not provided) and wrap with electrical tape.
- Push ceiling rose (C) up to ceiling bolt (B) and screw the ceiling loop (E) and retaining nut (D) to the threaded pipe on the ceiling bolt (B). Tighten until ceiling rose (C) is flush with the ceiling.
- 11. Attach quick link (L) at the top of the chain to the ceiling loop (E).
- 12. Gently pull the chain to make sure the attachment is secure.
- 13. Carefully lower chain and pendant until the chain is taught. Straighten the links.

CARE INSTRUCTIONS:

To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners.