


RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

PARTS ENCLOSED

- (A) Lamp shade (1)
- (B) Thumbscrews (3)
- (C) Shade holder (1)
- (D) Adjustment key (1)
- (E) Adjustment handle (1)
- (F) Upper pole (1)
- (G) Lower pole (1)
- (H) Lamp base (1)

1900s MACHINIST'S FLOOR LAMP

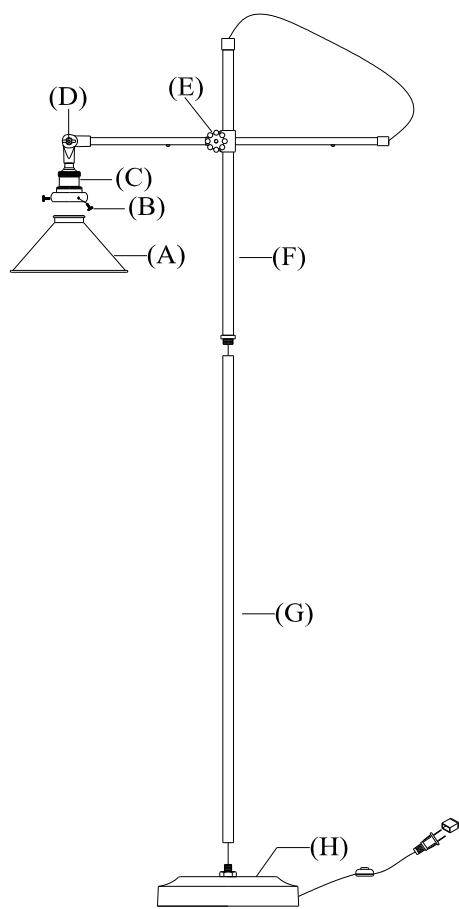

IMPORTANT SAFETY INSTRUCTIONS:

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for one (1) 40-watt maximum TYPE A standard bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

1. All wires are connected.
2. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
3. Do not connect electricity until your lamp is fully assembled.
4. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
5. Do not touch bulb when fixture is turned on or look directly at lit bulb.
6. Keep flammable materials away from lit bulb.

TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Screw lower pole (G) into top opening of upper pole (F).
3. Screw lower pole (G) onto top threaded nipple of lamp base (H).
4. Loosen thumbscrews (B) on shade holder (C).
5. Carefully insert top of Lamp shade (A) into the shade holder (C), and tighten the thumbscrews (B).
6. Insert bulb (not included) into threaded socket.
7. Plug into proper electrical outlet and test fixture.
8. Assembly is complete.

TO ADJUST HEIGHT:

1. Loosen adjustment key (D) or adjustment handle (E) in the counter-clockwise direction.
2. Adjust lamp to desired height or position.
3. Tighten the adjustment key (D) and adjustment handle (E) in the clockwise direction.

CARE INSTRUCTIONS:

Avoid the use of all polishers, cleaners, and abrasives, as they will damage the finish of your lamp. To remove dust or fingerprints, wipe gently with a soft, clean cloth.