
RESTORATION HARDWARE

20TH C. FOUNDRY TASK TABLE LAMP

PARTS ENCLOSED

- (A) Lamp shade (1)
- (B) Set screw (1)
- (C) Lamp holder (1)
- (D) Lamp pole (1)
- (E) (F) Adjustment keys (2)
- (F) Upper pole (1)
- (G) Halogen bulb (1)

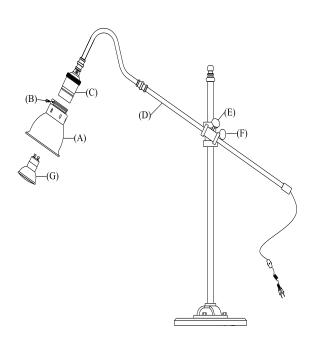

IMPORTANT SAFETY INSTRUCTIONS:

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for one (1) GU-10 60-watt maximum halogen bulb (included). To avoid the risk of fire, do not exceed the recommended wattage.

CAUTION---RISK OF FIRE, MAX 60 W TYPE MR16. USE LAMP MARKED "SUITABLE FOR USE IN OPEN LUMINAIRES"

WARNINGS:

- . All wires are connected.
- 2. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
- 3. Do not connect electricity until your lamp is fully assembled.
- 4. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
- 5. Do not touch bulb when fixture is turned on or look directly at lit bulb.
- 6. Keep flammable materials away from lit bulb.

TO ASSEMBLE:

- 1. Carefully remove all parts from the box and remove all plastic covering.
- 2. Loosen set screw (B) from lamp shade (A).
- 3. Place lamp shade (A) onto top of lamp holder (C), and secure with set screw (B).
- 4. Insert the recommended bulb into threaded socket.
- 5. Plug into proper electrical outlet and test fixture.
- 6. Assembly is complete.

TO ADJUST HEIGHT:

- 1. Loosen adjustment key (E).
- 2. Slide lamp pole (D) to desired height, and secure tightening by adjustment key (E).

OR

- 3. Loosen adjustment key (F).
- 4. Slide lamp pole (D) to desired position and angle, and secure tightening by adjustment key (F).

CARE INSTRUCTIONS:

Avoid the use of all polishers, cleaners, and abrasives, as they will damage the finish of your lamp. To remove dust or fingerprints, wipe gently with a soft, clean cloth.