

# RESTORATION HARDWARE

## SPUTNIK FLOOR LAMP

### PARTS ENCLOSED

- (A) Lamp Base
- (B) Lower Pole
- (C) Upper Pole
- (D) Light bulbs (12)
- (E) 13W CFL bulbs (12)

### IMPORTANT SAFETY INSTRUCTIONS

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for twelve (12) 40-watt maximum TYPE A standard bulbs (D) OR (12) 13W Compact Fluorescent bulbs (E) (included in box). To avoid the risk of fire, do not exceed the recommended wattage.

### WARNINGS

1. All wires are connected.
2. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
3. Do not connect electricity until your lamp is fully assembled.
4. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
5. Do not touch bulb when fixture is turned on or look directly at lit bulb.
6. Keep flammable materials away from lit bulb.

### TO ASSEMBLE

1. Carefully remove all parts from the box and remove all plastic covering.
2. Screw upper pole (C) into top opening of lower pole (B). Tighten by hand.
3. Screw lower pole (B) into top threaded nipple of lamp base (A).
4. Insert bulbs (D or E) into threaded sockets.
5. Plug into proper electrical outlet and test fixture.
6. Assembly is complete.

### CARE INSTRUCTIONS

Avoid the use of all polishers, cleaners, and abrasives, as they will damage the finish of your lamp. To remove dust or fingerprints, wipe gently with a soft, clean cloth.

