 


RESTORATION HARDWARE

PARISIAN BRASSERIE PENDANT 9IN

PARTS ENCLOSED

- (A) Mounting strap (1)
- (B) Nipple (1)
- (C) Mounting screws (2)
- (D) Mounting loop (1)
- (E) Canopy (1)
- (F) Canopy ring (1)
- (G) Chain (1)
- (H) Socket assembly (1)
- (J) Thumbscrew (4)
- (K) Shade (1)

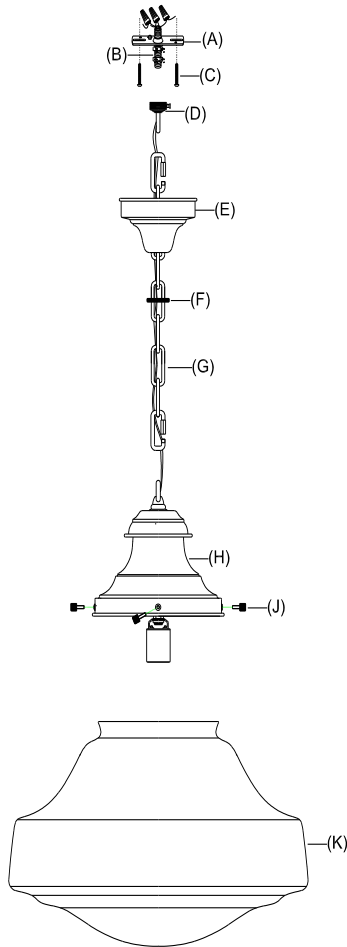

IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for one (1) 40-watt maximum TYPE A standard bulb (not included) OR 9-Watt Compact Fluorescent bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

1. All wires are connected. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
2. Do not connect electricity until your lamp is fully assembled.
3. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
4. Do not touch bulb when fixture is turned on or look directly at lit bulb.
5. Keep flammable materials away from lit bulb
6. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

TO ASSEMBLE:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!
2. Carefully remove all parts from the box and remove all plastic covering.
3. Hook the chain (G) to the top loop on socket assembly (H).
4. Feed wire through chain (G), canopy (E) and mounting loop (D).
5. Unscrewing canopy ring (F), slide canopy ring (F) and canopy (E) on chain (G).
6. Attach mounting strap (A) to ceiling outlet box with mounting screws (C) and insert top thread nipple (B) in mounting strap (A).
7. Attach mounting loop (D) to thread nipple (B) and tighten the set screw.
8. Attach chain (G) with fixture to chain mounting loop (D) at desired height.
9. Gently pull the wiring from the ceiling outlet box and allow the wires to hang. Thread the wires through the center hole in the mounting strap (A).
10. Attach the fixture ground wire and house ground wire (usually green) to ceiling outlet box with the green grounding screw. Connect fixtures to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
11. Connect the neutral wire (white wire) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
12. Connect the hot wire (black wire) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape.
13. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
14. Tuck these wire connections neatly into the ceiling outlet box.
15. Slip canopy (E) to ceiling and secure with canopy ring (F).
16. Insert the recommended bulbs into the sockets.
17. Loosen thumbscrews (J), carefully insert glass shade (K) into socket assembly (H) and secure with thumbscrews (J).
18. Restore power to outlet box and check operation of fixture.
19. Assembly is complete.

CARE INSTRUCTIONS:

 
Avoid the use of all polishers, cleaners, and abrasives, as they will damage the finish of your lamp. To remove dust or fingerprints, wipe gently with a soft, clean cloth.

RESTORATION HARDWARE

PARISIAN BRASSERIE PENDANT 12IN

PARTS ENCLOSED

- (A) Mounting strap (1)
- (B) Nipple (1)
- (C) Mounting screws (2)
- (D) Mounting loop (1)
- (E) Canopy (1)
- (F) Canopy ring (1)
- (G) Chain (1)
- (H) Socket assembly (1)
- (J) Thumbscrew (4)
- (K) Shade (1)

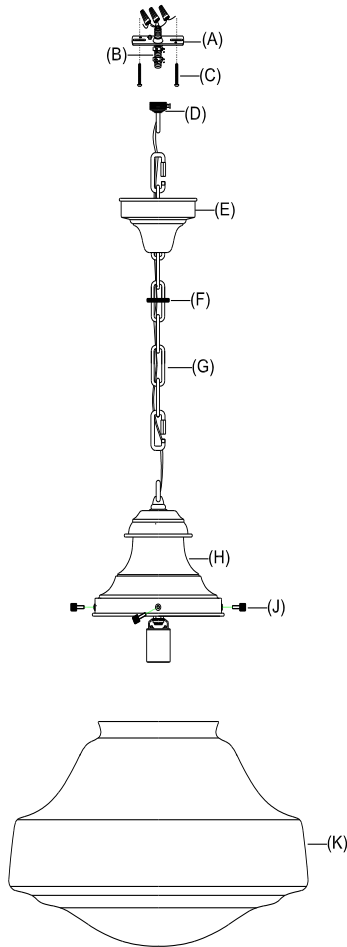

IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for one (1) 60-watt maximum TYPE A standard bulb (not included) OR 13-Watt Compact Fluorescent bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

1. All wires are connected. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
2. Do not connect electricity until your lamp is fully assembled.
3. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
4. Do not touch bulb when fixture is turned on or look directly at lit bulb.
5. Keep flammable materials away from lit bulb
6. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

TO ASSEMBLE:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!
2. Carefully remove all parts from the box and remove all plastic covering.
3. Hook the chain (G) to the top loop on socket assembly (H).
4. Feed wire through chain (G), canopy (E) and mounting loop (D).
5. Unscrewing canopy ring (F), slide canopy ring (F) and canopy (E) on chain (G).
6. Attach mounting strap (A) to ceiling outlet box with mounting screws (C) and insert top thread nipple (B) in mounting strap (A).
7. Attach mounting loop (D) to thread nipple (B) and tighten the set screw.
8. Attach chain (G) with fixture to chain mounting loop (D) at desired height.
9. Gently pull the wiring from the ceiling outlet box and allow the wires to hang. Thread the wires through the center hole in the mounting strap (A).
10. Attach the fixture ground wire and house ground wire (usually green) to ceiling outlet box with the green grounding screw. Connect fixtures to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
11. Connect the neutral wire (white wire) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
12. Connect the hot wire (black wire) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape.
13. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
14. Tuck these wire connections neatly into the ceiling outlet box.
15. Slip canopy (E) to ceiling and secure with canopy ring (F).
16. Insert the recommended bulbs into the sockets.
17. Loosen thumbscrews (J), carefully insert glass shade (K) into socket assembly (H) and secure with thumbscrews (J).
18. Restore power to outlet box and check operation of fixture.
19. Assembly is complete.

CARE INSTRUCTIONS:

 
Avoid the use of all polishers, cleaners, and abrasives, as they will damage the finish of your lamp. To remove dust or fingerprints, wipe gently with a soft, clean cloth.

RESTORATION HARDWARE

PARISIAN BRASSERIE PENDANT 15IN

PARTS ENCLOSED

- (A) Mounting strap (1)
- (B) Nipple (1)
- (C) Mounting screws (2)
- (D) Mounting loop (1)
- (E) Canopy (1)
- (F) Canopy ring (1)
- (G) Chain (1)
- (H) Socket assembly (1)
- (J) Thumbscrew (4)
- (K) Shade (1)

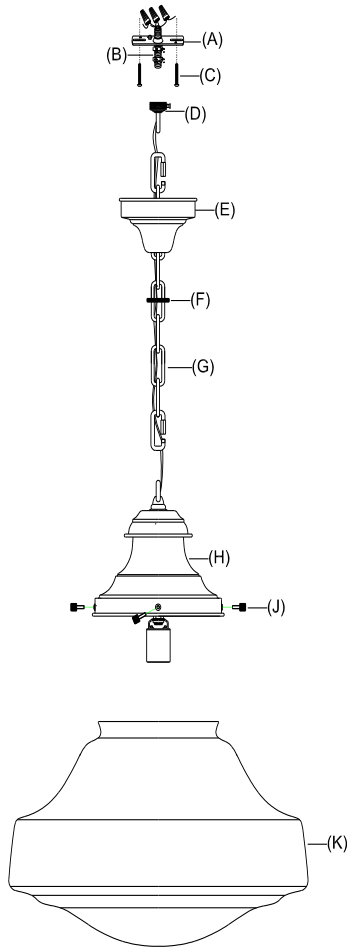

IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for one (1) 75-watt maximum TYPE A standard bulb (not included) OR 18-Watt Compact Fluorescent bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

1. All wires are connected. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
2. Do not connect electricity until your lamp is fully assembled.
3. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
4. Do not touch bulb when fixture is turned on or look directly at lit bulb.
5. Keep flammable materials away from lit bulb
6. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

TO ASSEMBLE:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!
2. Carefully remove all parts from the box and remove all plastic covering.
3. Hook the chain (G) to the top loop on socket assembly (H).
4. Feed wire through chain (G), canopy (E) and mounting loop (D).
5. Unscrewing canopy ring (F), slide canopy ring (F) and canopy (E) on chain (G).
6. Attach mounting strap (A) to ceiling outlet box with mounting screws (C) and insert top thread nipple (B) in mounting strap (A).
7. Attach mounting loop (D) to thread nipple (B) and tighten the set screw.
8. Attach chain (G) with fixture to chain mounting loop (D) at desired height.
9. Gently pull the wiring from the ceiling outlet box and allow the wires to hang. Thread the wires through the center hole in the mounting strap (A).
10. Attach the fixture ground wire and house ground wire (usually green) to ceiling outlet box with the green grounding screw. Connect fixtures to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
11. Connect the neutral wire (white wire) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
12. Connect the hot wire (black wire) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape.
13. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
14. Tuck these wire connections neatly into the ceiling outlet box.
15. Slip canopy (E) to ceiling and secure with canopy ring (F).
16. Insert the recommended bulbs into the sockets.
17. Loosen thumbscrews (J), carefully insert glass shade (K) into socket assembly (H) and secure with thumbscrews (J).
18. Restore power to outlet box and check operation of fixture.
19. Assembly is complete.

CARE INSTRUCTIONS:

 
Avoid the use of all polishers, cleaners, and abrasives, as they will damage the finish of your lamp. To remove dust or fingerprints, wipe gently with a soft, clean cloth.

RESTORATION HARDWARE

PARISIAN BRASSERIE PENDANT 18IN

PARTS ENCLOSED

- (A) Mounting strap (1)
- (B) Nipple (1)
- (C) Mounting screws (2)
- (D) Mounting loop (1)
- (E) Canopy (1)
- (F) Canopy ring (1)
- (G) Chain (1)
- (H) Socket assembly (1)
- (J) Thumbscrew (4)
- (K) Shade (1)

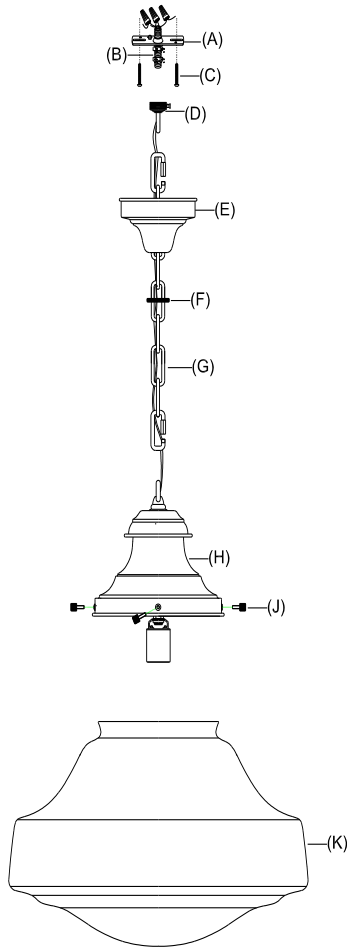

IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for one (1) 100-watt maximum TYPE A standard bulb (not included) OR 23-Watt Compact Fluorescent bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

1. All wires are connected. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
2. Do not connect electricity until your lamp is fully assembled.
3. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
4. Do not touch bulb when fixture is turned on or look directly at lit bulb.
5. Keep flammable materials away from lit bulb
6. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

TO ASSEMBLE:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!
2. Carefully remove all parts from the box and remove all plastic covering.
3. Hook the chain (G) to the top loop on socket assembly (H).
4. Feed wire through chain (G), canopy (E) and mounting loop (D).
5. Unscrewing canopy ring (F), slide canopy ring (F) and canopy (E) on chain (G).
6. Attach mounting strap (A) to ceiling outlet box with mounting screws (C) and insert top thread nipple (B) in mounting strap (A).
7. Attach mounting loop (D) to thread nipple (B) and tighten the set screw.
8. Attach chain (G) with fixture to chain mounting loop (D) at desired height.
9. Gently pull the wiring from the ceiling outlet box and allow the wires to hang. Thread the wires through the center hole in the mounting strap (A).
10. Attach the fixture ground wire and house ground wire (usually green) to ceiling outlet box with the green grounding screw. Connect fixtures to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
11. Connect the neutral wire (white wire) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
12. Connect the hot wire (black wire) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape.
13. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
14. Tuck these wire connections neatly into the ceiling outlet box.
15. Slip canopy (E) to ceiling and secure with canopy ring (F).
16. Insert the recommended bulbs into the sockets.
17. Loosen thumbscrews (J), carefully insert glass shade (K) into socket assembly (H) and secure with thumbscrews (J).
18. Restore power to outlet box and check operation of fixture.
19. Assembly is complete.

CARE INSTRUCTIONS:

Avoid the use of all polishers, cleaners, and abrasives, as they will damage the finish of your lamp. To remove dust or fingerprints, wipe gently with a soft, clean cloth.