


PARISIAN ARCHITECTURAL POSTE PENDANT 16"

PARTS ENCLOSED

- (A) Mounting Plate (1)
- (B) Mounting Screws (2)
- (C) Mounting Loop (1)
- (D) Canopy (1)
- (E) Canopy Ring (1)
- (F) Chain (1)
- (G) Threaded Ring (1)
- (H) Thumbscrews (4)
- (J) Glass Cap (1)
- (K) Top Loop (1)
- (L) Socket Assembly (1)
- (M) Glass Shade (1)

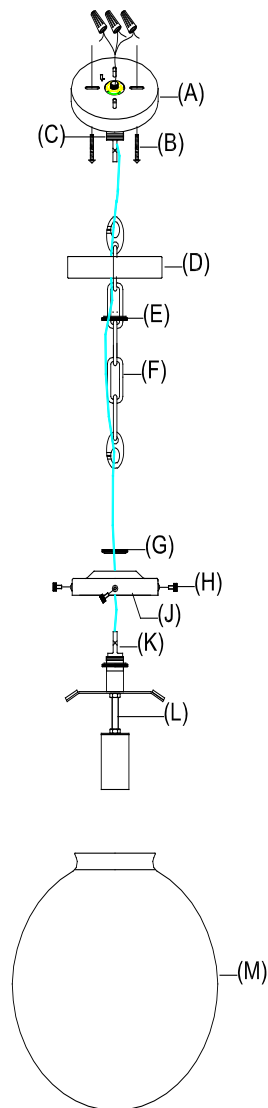

PARISIAN ARCHITECTURAL POSTE PENDANT 16"

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to one (1) 75-Watt maximum Type A standard bulb (not included) or one (1) 23-Watt Compact Fluorescent light bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.

**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

ASSEMBLY & INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic covering.
2. Remove Top Loop (K) from Glass Cap (J) by unscrewing Threaded Ring (G).
3. Insert the recommended bulb (not included) into socket.
4. Insert Socket Assembly (L) into Glass Shade (M).
5. Loosen Thumbscrews (H); carefully insert Glass Shade (M) with Socket Assembly (L) to Glass Cap (J) - letting the Top Loop (K) pass through the center hole on Glass Cap (J) and secure with Thumbscrews (H) and Threaded Ring (G). DO NOT OVERTIGHTEN; OTHERWISE, THE GLASS SHADE WILL BE DAMAGED.
6. Hook the Chain (F) to Top Loop (K).
7. Feed the wire through the Chain (F) and Mounting Loop (C).
8. Attach chain with fixture to Mounting Loop (C) at desired height.
9. Attach the fixture ground wire (GREEN) to the ground wire from the outlet box (usually green or bare wire) with a plastic wire connector and wrap the connection with electrical tape.
10. Connect the neutral wire (WHITE) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
11. Connect the hot wire (BLACK) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape.
12. Tuck the wire connection neatly into the ceiling outlet box.
13. Unscrewing Canopy (D) and Canopy Ring (E).
14. Attach Mounting Plate (A) to ceiling outlet box and secure with Mounting Screws (B).
15. Slip Canopy (D) to ceiling and secure with threaded Canopy Ring (E).
16. Assembly is complete.

CARE INSTRUCTIONS

Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth.