 


## VINTAGE FRENCH FARMHOUSE PENDANT 10"

### PARTS ENCLOSED

- (A) Mounting Strap (1)
- (B) Mounting Screws (2)
- (C) Threaded Nipple (1)
- (D) Canopy (1)
- (E) Rod (1)
- (F) Canopy Ring (1)
- (G) 8" Cord Cover (1)  
w/ Inner Connection Rod
- (H) 12" Cord Covers (2)  
w/ Inner Connection Rods
- (I) 18" Cord Covers (2)  
w/ Inner Connection Rods
- (J) Connectors (4)
- (K) Shade Assembly (1)

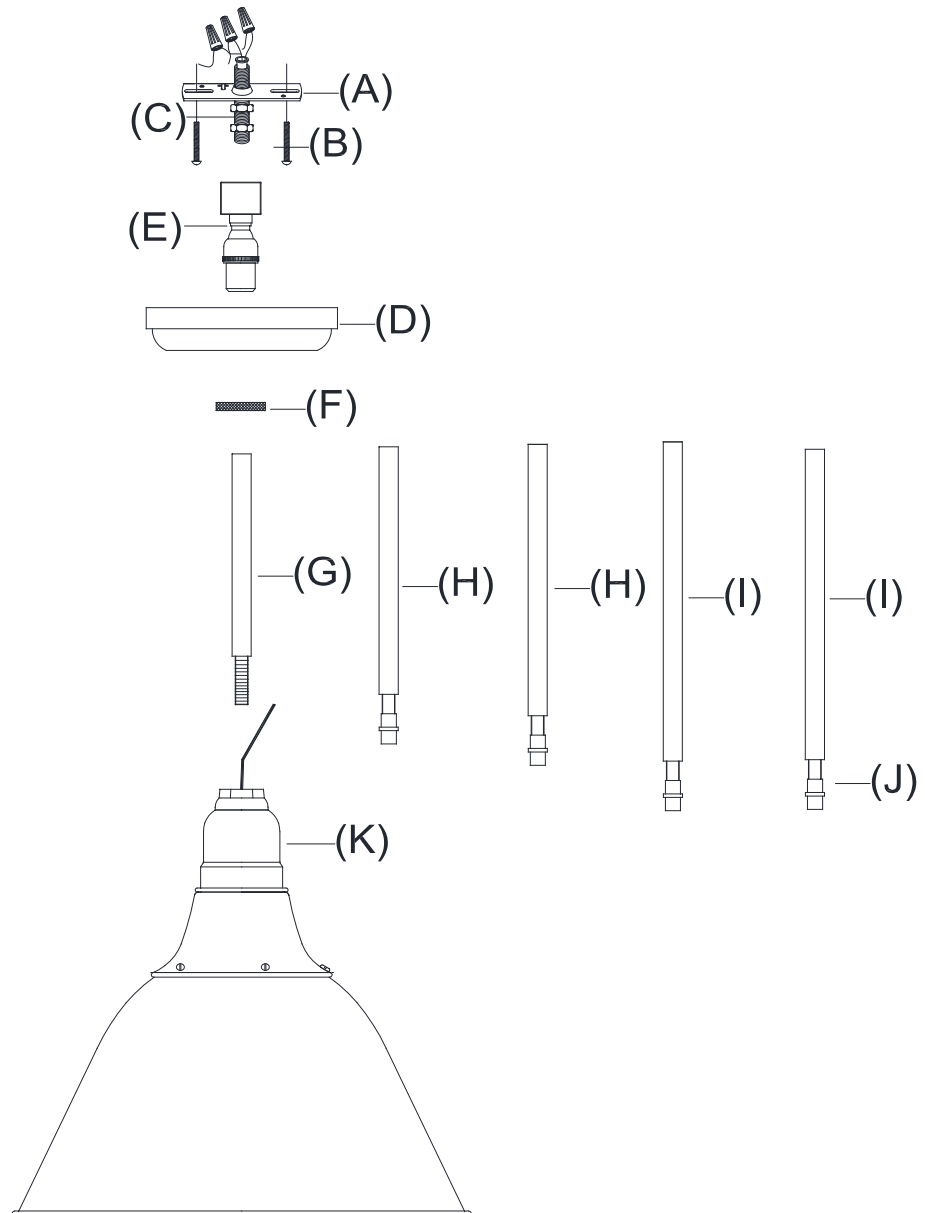

## IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to one (1) 60-Watt maximum Type G19-1/2 lightbulb (not included) or 13-Watt compact fluorescent lightbulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

## ASSEMBLY &amp; INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Determine the hanging length of the fixture. Connect Shade Assembly (K) to some or all Cord Covers (G) (H) (I) and Connectors (J) according to the height needed.
3. Thread Rod (E) onto the inner connection rod of the top Cord Cover (G) (H) (I).
4. Unscrew Canopy Ring (F). Slide Canopy Ring (F) and Canopy (D) over Cord Covers (G) (H) (I).
5. Feed wires through Cord Covers (G) (H) (I), Connectors (J), Canopy (D) and Rod (E).
6. Affix Mounting Strap (A) to the ceiling outlet box with Mounting Screws (B). Insert the top of Threaded Nipple (C) into Mounting Strap (A).
7. Thread Rod (E) to Threaded Nipple (C).
8. Attach fixture grounding wire (clear silver) and house grounding wire to back plate with the green screw. Connect fixture to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
9. Connect the hot wire (smooth wire) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS. OTHERWISE SAFETY WILL BE COMPROMISED.
10. Connect the neutral wire (fine ridges molded into wire insulation) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
11. Raise Canopy (D) to the ceiling and screw Canopy Ring (E) onto Rod (E) to secure in place.
12. Insert the recommended lightbulb (not included) into the socket.
13. Assembly is complete.

## CARE INSTRUCTIONS

 
Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.

# RH

## VINTAGE FRENCH FARMHOUSE PENDANT 14"

### PARTS ENCLOSED

- (A) Mounting Strap (1)
- (B) Mounting Screws (2)
- (C) Threaded Nipple (1)
- (D) Canopy (1)
- (E) Mounting Loop (1)
- (F) Top Loop (1)
- (G) Canopy Ring (1)
- (H) 8" Cord Cover (1)  
w/ Inner Connection Rod
- (I) 12" Cord Covers (2)  
w/ Inner Connection Rods
- (J) 18" Cord Covers (2)  
w/ Inner Connection Rods
- (K) Connectors (4)
- (L) Shade Assembly (1)

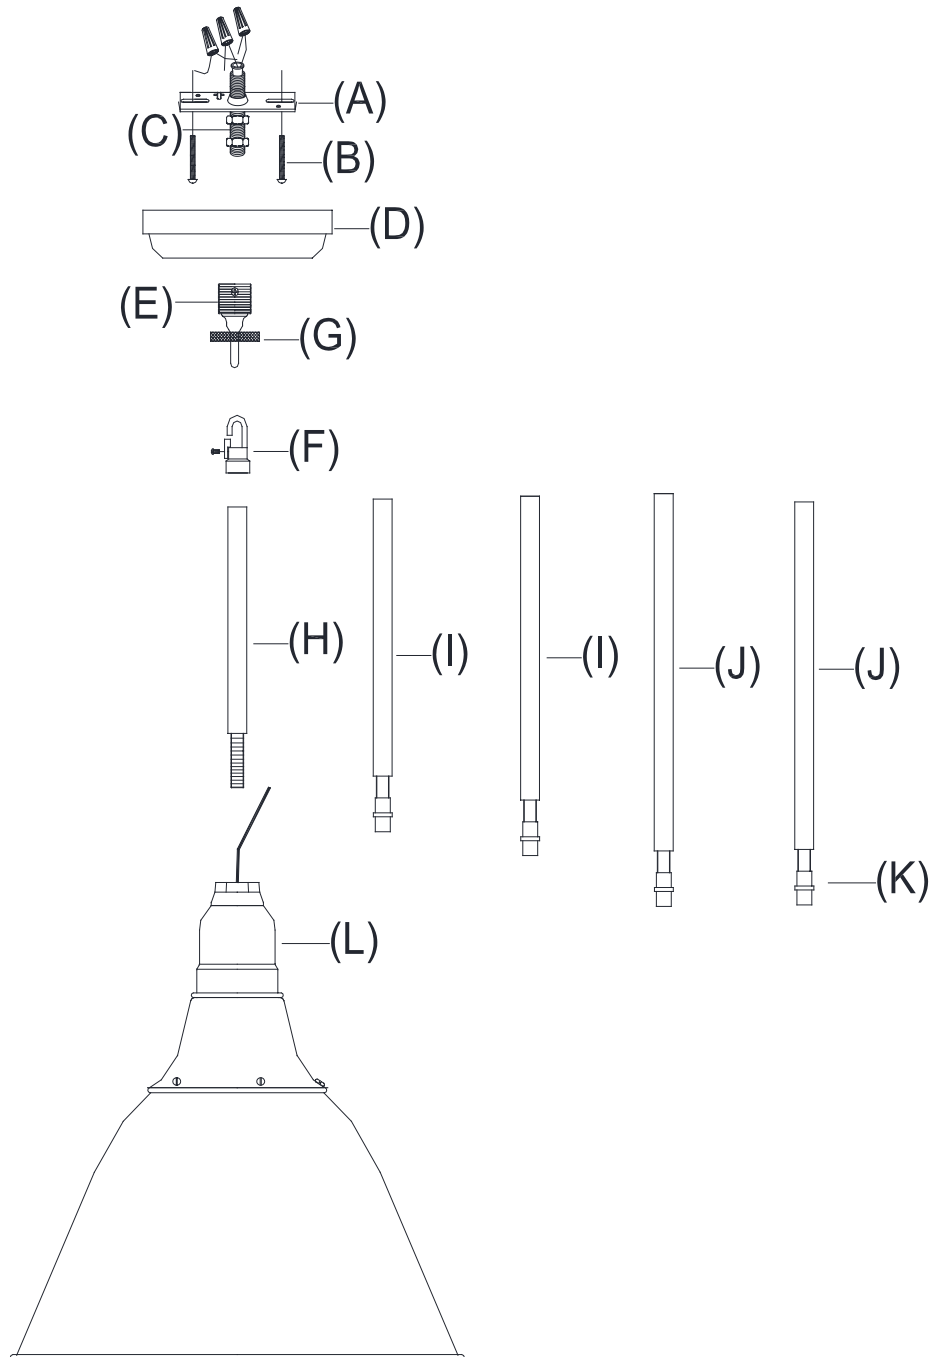

## IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to one (1) 60-Watt maximum Type G19-1/2 lightbulb (not included) or one (1) 13-Watt compact fluorescent lightbulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

## ASSEMBLY &amp; INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Determine the hanging length of the fixture. Connect Shade Assembly (L) to some or all Cord Covers (H) (I) (J) and Connectors (K) according to the height needed.
3. Thread Top Loop (F) onto the inner connection rod of the top Cord Cover (H) (I) (J).

## ASSEMBLY &amp; INSTALLATION CONT.

4. Loosen set screw on the side of Top Loop (F). Remove the tab and set aside. Hook Top Loop (F) to Mounting Loop (E), then replace the tab and set screw to lock Mounting Loop (E) onto Top Loop (F).
5. Unscrew Canopy Ring (G). Slide Canopy Ring (G) and Canopy (D) over Cord Covers (H) (I) (J).
6. Feed wires through the some or all Cord Covers (H) (I) (J) and Connectors (K), Top Loop (F), Mounting Loop (E) and Canopy (D).
7. Affix Mounting Strap (A) to the ceiling outlet box with Mounting Screws (B). Insert the top of Threaded Nipple (C) into Mounting Strap (A).
8. Affix Mounting Loop (E) to Threaded Nipple (C) and lock with the set screw at the side.
9. Attach the fixture grounding wire (bare silver) and house grounding wire to back plate with the green screw. Connect fixture to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
10. Connect the hot wire (smooth wire) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS. OTHERWISE SAFETY WILL BE COMPROMISED.**
11. Connect the neutral wire (fine ridges molded into wire insulation) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
12. Raise Canopy (D) to the ceiling and screw Canopy Ring (F) onto Mounting Loop (E) to secure in place.
13. Insert the lightbulb (not included) into the socket.
14. Assembly is complete.

## CARE INSTRUCTIONS

 
Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.

# RH

## VINTAGE FRENCH FARMHOUSE PENDANT 18"

### PARTS ENCLOSED

- (A) Mounting Strap (1)
- (B) Mounting Screws (2)
- (C) Threaded Nipple (1)
- (D) Canopy (1)
- (E) Mounting Loop (1)
- (F) Top Loop (1)
- (G) Canopy Ring (1)
- (H) 8" Cord Cover (1)  
w/ Inner Connection Rod
- (I) 12" Cord Covers (2)  
w/ Inner Connection Rods
- (J) 18" Cord Covers (2)  
w/ Inner Connection Rods
- (K) Connectors (4)
- (L) Shade Assembly (1)

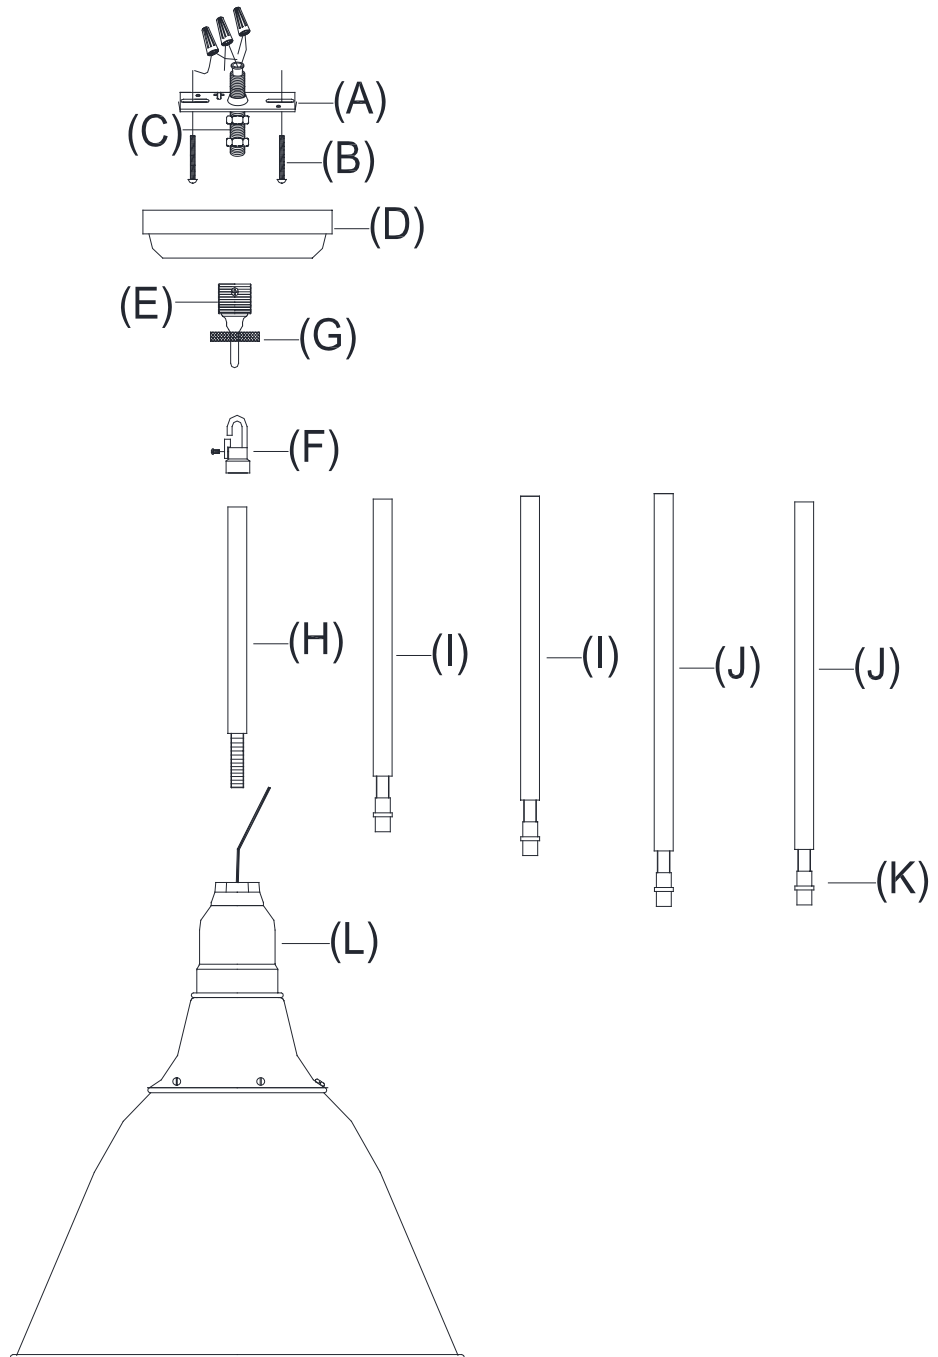

## IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to one (1) 100-Watt maximum Type G30 (not included) or 23-Watt compact fluorescent light bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

## ASSEMBLY &amp; INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Determine the hanging length of the fixture. Connect Shade Assembly (L) to some or all Cord Covers (H) (I) (J) and Connectors (K) according to the height needed.
3. Thread Top Loop (F) onto the inner connection rod of the top Cord Cover (H) (I) (J).

## ASSEMBLY &amp; INSTALLATION CONT.

4. Loosen set screw on the side of Top Loop (F). Remove the tab and set aside. Hook Top Loop (F) to Mounting Loop (E), then replace the tab and set screw to lock Mounting Loop (E) onto Top Loop (F).
5. Unscrew Canopy Ring (G). Slide Canopy Ring (G) and Canopy (D) over Cord Covers (H) (I) (J).
6. Feed wires through the some or all Cord Covers (H) (I) (J) and Connectors (K), Top Loop (F), Mounting Loop (E) and Canopy (D).
7. Affix Mounting Strap (A) to the ceiling outlet box with Mounting Screws (B). Insert the top of Threaded Nipple (C) into Mounting Strap (A).
8. Affix Mounting Loop (E) to Threaded Nipple (C) and lock with the set screw at the side.
9. Attach the fixture grounding wire (bare silver) and house grounding wire to back plate with the green screw. Connect fixture to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
10. Connect the hot wire (smooth wire) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS. OTHERWISE SAFETY WILL BE COMPROMISED.**
11. Connect the neutral wire (fine ridges molded into wire insulation) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
12. Raise Canopy (D) to the ceiling and screw Canopy Ring (F) onto Mounting Loop (E) to secure in place.
13. Insert the lightbulb (not included) into the socket.
14. Assembly is complete.

## CARE INSTRUCTIONS

 
Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.

# RH

## VINTAGE FRENCH FARMHOUSE PENDANT 22"

### PARTS ENCLOSED

- (A) Mounting Strap (1)
- (B) Mounting Screws (2)
- (C) Threaded Nipple (1)
- (D) Canopy (1)
- (E) Mounting Loop (1)
- (F) Top Loop (1)
- (G) Canopy Ring (1)
- (H) 8" Cord Cover (1)  
w/ Inner Connection Rod
- (I) 12" Cord Covers (2)  
w/ Inner Connection Rods
- (J) 18" Cord Covers (2)  
w/ Inner Connection Rods
- (K) Connectors (4)
- (L) Shade Assembly (1)

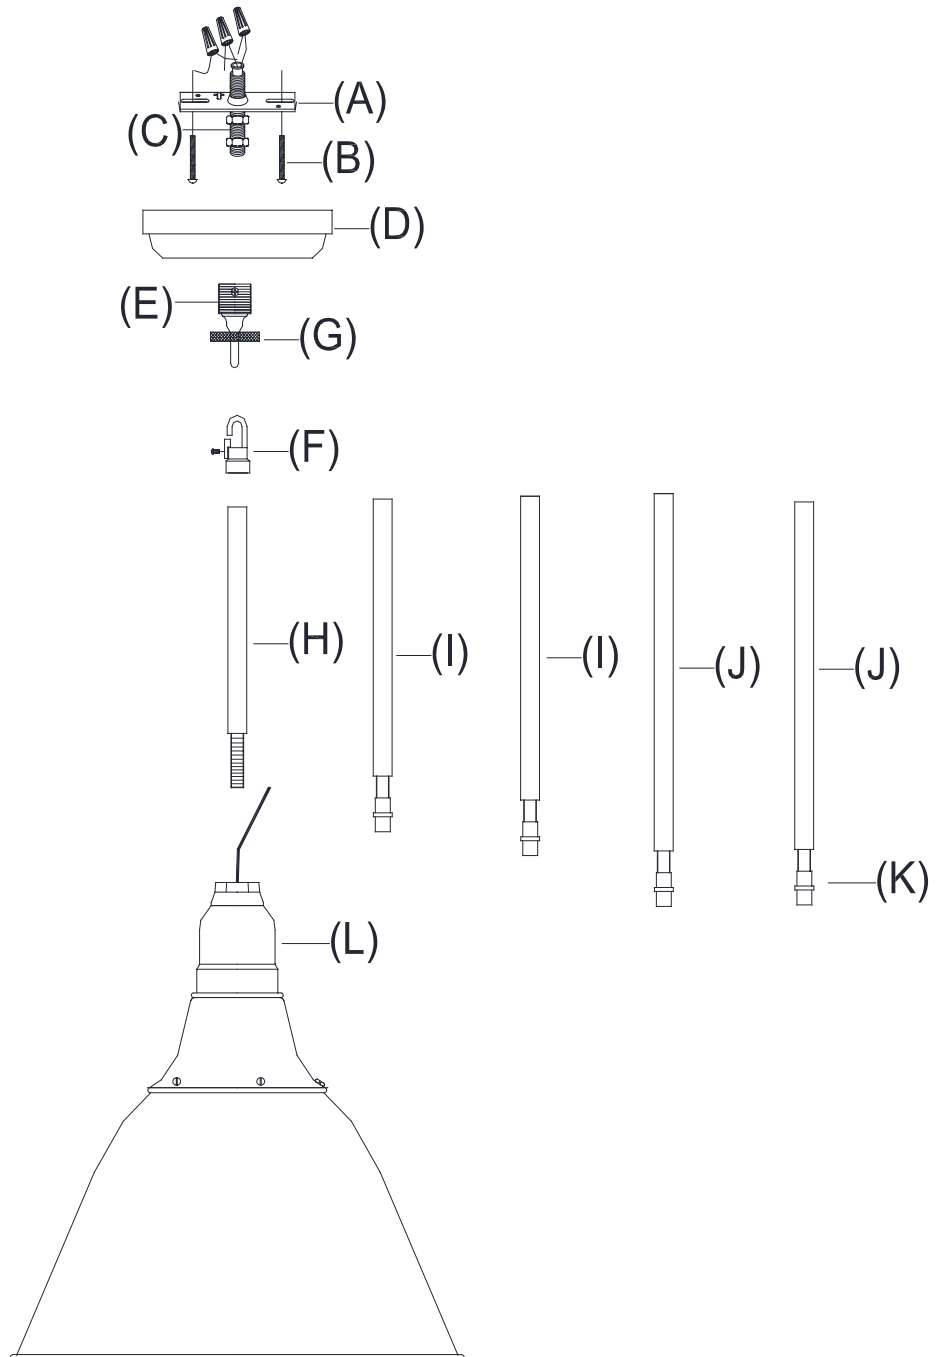

## IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to one (1) 100-Watt maximum Type G30 (not included) or 23-Watt compact fluorescent lightbulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

## ASSEMBLY &amp; INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Determine the hanging length of the fixture. Connect Shade Assembly (L) to some or all Cord Covers (H) (I) (J) and Connectors (K) according to the height needed.
3. Thread Top Loop (F) onto the inner connection rod of the top Cord Cover (H) (I) (J).

## ASSEMBLY &amp; INSTALLATION CONT.

4. Loosen set screw on the side of Top Loop (F). Remove the tab and set aside. Hook Top Loop (F) to Mounting Loop (E), then replace the tab and set screw to lock Mounting Loop (E) onto Top Loop (F).
5. Unscrew Canopy Ring (G). Slide Canopy Ring (G) and Canopy (D) over Cord Covers (H) (I) (J).
6. Feed wires through the some or all Cord Covers (H) (I) (J) and Connectors (K), Top Loop (F), Mounting Loop (E) and Canopy (D).
7. Affix Mounting Strap (A) to the ceiling outlet box with Mounting Screws (B). Insert the top of Threaded Nipple (C) into Mounting Strap (A).
8. Affix Mounting Loop (E) to Threaded Nipple (C) and lock with the set screw at the side.
9. Attach the fixture grounding wire (clear silver) and house grounding wire to back plate with the green screw. Connect fixture to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
10. Connect the hot wire (smooth wire) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS. OTHERWISE SAFETY WILL BE COMPROMISED.**
11. Connect the neutral wire (ridges molded wire) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
12. Raise Canopy (D) to the ceiling and screw Canopy Ring (F) onto Mounting Loop (E) to secure in place.
13. Insert the lightbulb (not included) into the socket.
14. Assembly is complete.

## CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.

 


# RH

## VINTAGE FRENCH FARMHOUSE PENDANT 26"

### PARTS ENCLOSED

- (A) Mounting Strap (1)
- (B) Mounting Screws (2)
- (C) Threaded Nipple (1)
- (D) Canopy (1)
- (E) Mounting Loop (1)
- (F) Top Loop (1)
- (G) Canopy Ring (1)
- (H) 8" Cord Cover (1)  
w/ Inner Connection Rod
- (I) 12" Cord Covers (2)  
w/ Inner Connection Rods
- (J) 18" Cord Covers (2)  
w/ Inner Connection Rods
- (K) Connectors (4)
- (L) Shade Assembly (1)

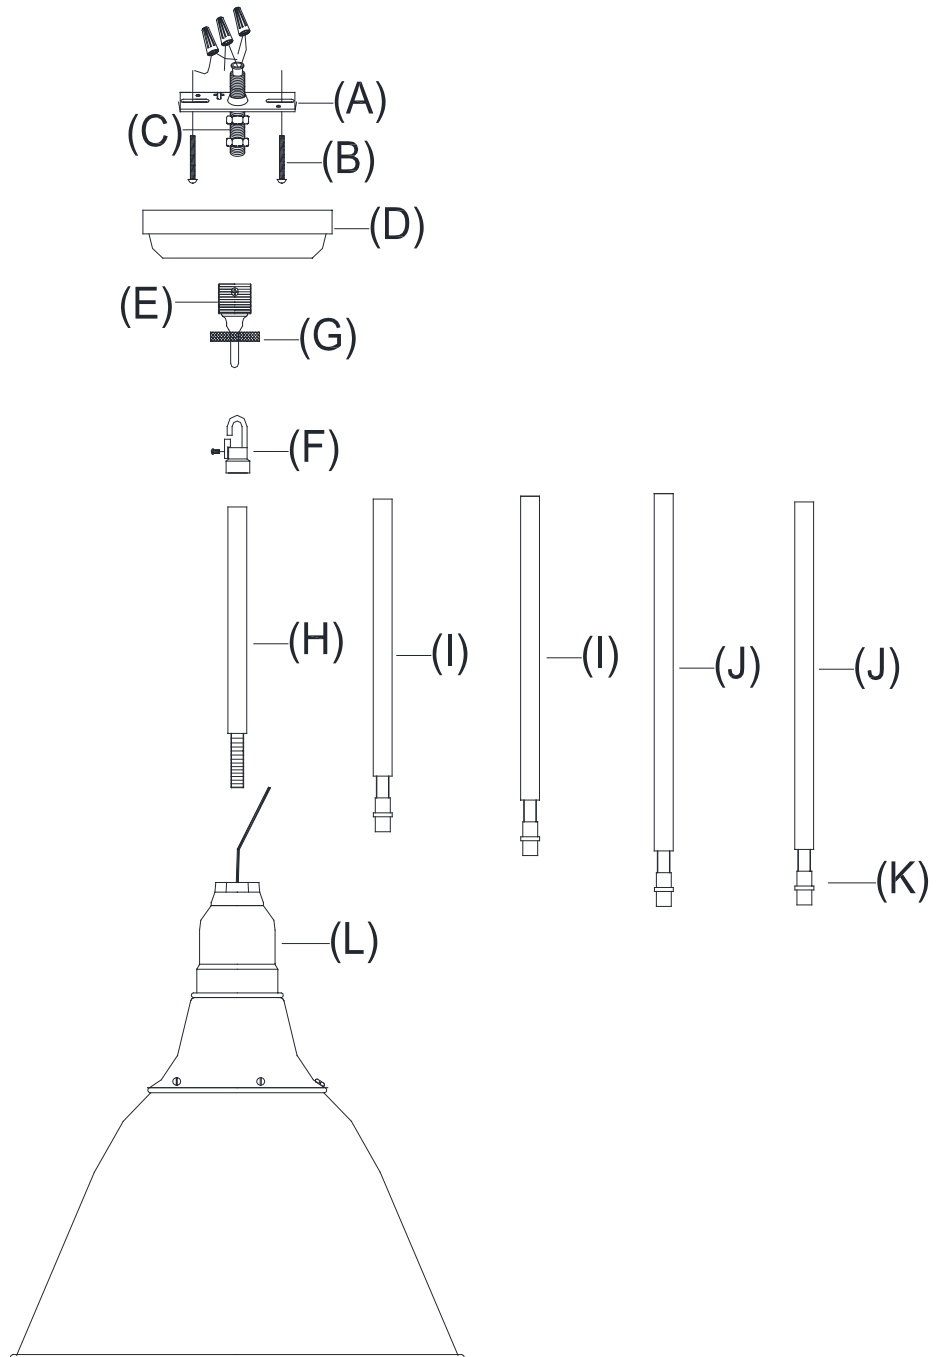

## IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to one (1) 150-Watt maximum Type G30 (not included) or 42-Watt compact fluorescent lightbulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

## ASSEMBLY &amp; INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Determine the hanging length of the fixture. Connect Shade Assembly (L) to some or all Cord Covers (H) (I) (J) and Connectors (K) according to the height needed.
3. Thread Top Loop (F) onto the inner connection rod of the top Cord Cover (H) (I) (J).

## ASSEMBLY &amp; INSTALLATION CONT.

4. Loosen set screw on the side of Top Loop (F). Remove the tab and set aside. Hook Top Loop (F) to Mounting Loop (E), then replace the tab and set screw to lock Mounting Loop (E) onto Top Loop (F).
5. Unscrew Canopy Ring (G). Slide Canopy Ring (G) and Canopy (D) over Cord Covers (H) (I) (J).
6. Feed wires through the some or all Cord Covers (H) (I) (J) and Connectors (K), Top Loop (F), Mounting Loop (E) and Canopy (D).
7. Affix Mounting Strap (A) to the ceiling outlet box with Mounting Screws (B). Insert the top of Threaded Nipple (C) into Mounting Strap (A).
8. Affix Mounting Loop (E) to Threaded Nipple (C) and lock with the set screw at the side.
9. Attach the fixture grounding wire (bare silver) and house grounding wire to back plate with the green screw. Connect fixture to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
10. Connect the hot wire (smooth wire) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS. OTHERWISE SAFETY WILL BE COMPROMISED.**
11. Connect the neutral wire (fine ridges molded into wire insulation) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
12. Raise Canopy (D) to the ceiling and screw Canopy Ring (F) onto Mounting Loop (E) to secure in place.
13. Insert the lightbulb (not included) into the socket.
14. Assembly is complete.

## CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.