







 



RESTORATION HARDWARE

RHYS GLASS PRISM CHANDELIER 12"

PARTS ENCLOSED

ITEMS	DIAGRAM	DESCRIPTION	QTY.
(A)		Junction Box (Not included) 50LB. MIN.FIXTURE RATED	1
(B)		Ceiling Hook	1
(C)		Mounting Screws (Not included)	2 Sets
(D1)		Canopy	1
(D2)			
(E1)		Collar	1
(E2)		Hang Straight	
(E3)		Chain	
(E4)		Quick link	
(F)		Wire Nut	3
(G)		Glass Drop+Spares	24+1
(H)		Bulb+Spares	3+1
(I)		Collar	1
(J)		Body	1

IMPORTANT SAFETY INSTRUCTIONS:

1. Use an authorized and certified electrician for consultation and installation.
2. This fixture has been rated for 3 x 25-watt maximum E12 standard bulb.
3. To avoid the risk of fire, do not exceed the recommended wattage.
4. The ceiling must have at least the capacity of 5 times the weight of the ceiling light. For this light at least a ceiling capacity of 33kg (72.75lb) is required.
5. The manufacturer and distributor accepts no liability for incorrect installation.
6. For indoor use only.
7. Keep away from children.

Warnings:

1. Turn-off electricity supply at main circuit panel before installing. Do not connect electricity supply until your ceiling light is fully assembled and installed.
2. All wires are connected. Do not remove the ceiling light from its packaging by pulling on the power cord, as a bad connection may result.
3. To reduce the risk of fire, electrical shock, or personal injury, always turn off the ceiling light and allow it to cool prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at light bulb. Keep flammable materials away from light bulb.
4. Deviation from instructions may result in a risk of fire or electric shock.

PRODUCT DESCRIPTION:

General material: Glass & Iron
 Height: 30.5 cm (12.00in)
 Diameter: 30.0 cm (11.81in)
 Weight: 6.6 kg (14.55lb)
 Grounded / Hardwired

TO ASSEMBLE:


1. Carefully remove all parts from the box and remove all plastic covering.
2. Turn OFF power to the junction box where the ceiling light will be installed.
3. Loosen the bolt of hang straight (E2) and remove the collar (E1) from the hang straight (E2) by unscrewing it. Then insert collar(E1) into canopy (D1) and re-attach collar (E1) to hang straight (E2). Tighten the bolt of the hang straight (E2).
4. Fasten collar (I) to chandelier body (J).
5. Unlock the quick link (E4) at the opposite end of the chain (E3) to attach the chandelier body (J).
6. Attach the ceiling hook (B) to the ceiling with mounting screws (C).
7. Attach end of the collar (E1) to the ceiling hook (B).
8. Connect the ground wire from the fixture to the ground junction box wire (A) (Usually the green or bare wire) with a wire nut (F) and wrap the connection with electrical tape. Connect the hot wire to the hot junction box wire (A) (Usually black or smooth) with a plastic wire nut (F) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (A) (Usually white or ribbed) with a plastic wire nut (F) and wrap the connection with electrical tape.
9. Move the canopy (D1) up to the ceiling, then fasten the bolt (D2).
10. Fasten lightbulbs (H) to the lampholders.
11. Hang the glass drops (G) from bottom layer to top layer and keep flat surface of glass drop inside. To ensure safety of chandelier during glass drop installation, please maintain level of chandelier by ensuring you install glass drops in balanced way on opposite ends of light.
12. Restore power to the junction box and test ceiling light fixture.

CARE INSTRUCTIONS:

1. Make sure that the power is turned off and bulb has cooled before handling.
2. Wipe clean with a dry cloth / mild soapy solution. Do not use corrosive cleaners.
3. The cable/cord of this ceiling light cannot be replaced: If the cable is damaged, do not use the light.

ENVIRONMENT:



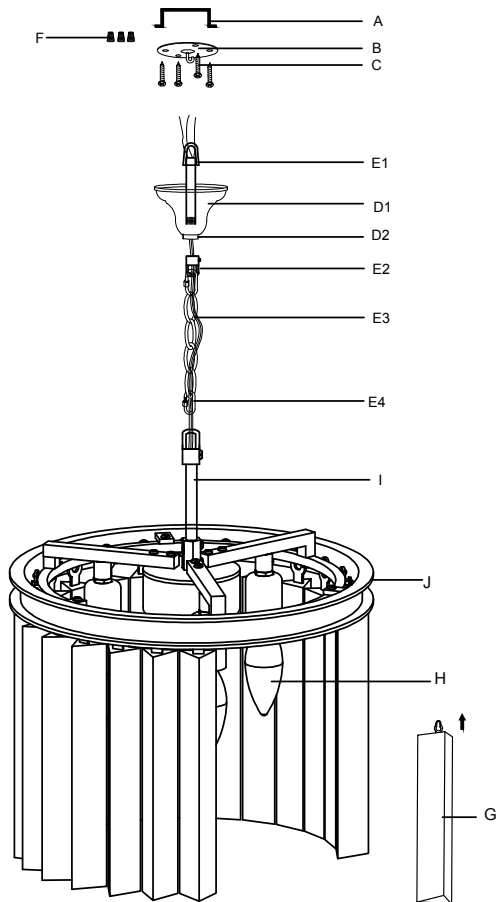





 

Special waste handling may be required. Please contact your local authorities for more information.



RESTORATION HARDWARE

RHYS GLASS PRISM CHANDELIER 20"

PARTS ENCLOSED

ITEMS	DIAGRAM	DESCRIPTION	QTY.
(A)		Junction Box (Not included) 50LB. MIN.FIXTURE RATED	1
(B)		Ceiling Hook	1
(C)		Mounting Screws (Not included)	2 Sets
(D1)		Canopy	1
(D2)			
(E1)		Collar	1
(E2)		Hang Straight	
(E3)		Chain	
(E4)		Quick link	
(F)		Wire Nut	3
(G)		Glass Drop+Spares	66+2
(H)		Bulb+Spares	6+2
(I)		Collar	1
(J)		Body	1

IMPORTANT SAFETY INSTRUCTIONS:

1. Use an authorized and certified electrician for consultation and installation.
2. This fixture has been rated for 6 x 25-watt maximum E12 standard bulb.
3. To avoid the risk of fire, do not exceed the recommended wattage.
4. The ceiling must have at least the capacity of 5 times the weight of the ceiling light. For this light at least a ceiling capacity of 120kg (264.55lb) is required.
5. The manufacturer and distributor accepts no liability for incorrect installation.
6. For indoor use only.
7. Keep away from children.

Warnings:


1. Turn-off electricity supply at main circuit panel before installing. Do not connect electricity supply until your ceiling light is fully assembled and installed.
2. All wires are connected. Do not remove the ceiling light from its packaging by pulling on the power cord, as a bad connection may result.
3. To reduce the risk of fire, electrical shock, or personal injury, always turn off the ceiling light and allow it to cool prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at light bulb. Keep flammable materials away from light bulb.
4. Deviation from instructions may result in a risk of fire or electric shock.

PRODUCT DESCRIPTION:

General material: Glass & Iron
 Height: 35.0 cm (13.78in)
 Diameter: 50.0 cm (19.68in)
 Weight: 24.0 kg (52.91lb)
 Grounded / Hardwired

TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Turn OFF power to the junction box where the ceiling light will be installed.
3. Loosen the bolt of hang straight (E2) and remove the collar (E1) from the hang straight (E2) by unscrewing it. Then insert collar(E1) into canopy (D1) and re-attach collar (E1) to hang straight (E2). Tighten the bolt of the hang straight (E2).
4. Fasten collar (I) to chandelier body (J). Tighten the bolt (K) on body(J).
5. Unlock the quick link (E4) at the opposite end of the chain (E3) to attach the chandelier body (J).
6. Attach the ceiling hook (B) to the ceiling with mounting screws (C).
7. Attach end of the collar (E1) to the ceiling hook (B).
8. Connect the ground wire from the fixture to the ground junction box wire (A) (Usually the green or bare wire) with a wire nut (F) and wrap the connection with electrical tape. Connect the hot wire to the hot junction box wire (A) (Usually black or smooth) with a plastic wire nut (F) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (A) (Usually white or ribbed) with a plastic wire nut (F) and wrap the connection with electrical tape.
9. Move the canopy (D1) up to the ceiling, then fasten the bolt (D2).
10. Fasten lightbulbs (H) to the lampholders.
11. Hang the glass drops (G) from the inner to the outer layer and keep flat surface of glass drop inside. To ensure safety of chandelier during glass drop installation, please maintain level of chandelier by ensuring you install glass drops in balanced way on opposite ends of light.
12. Restore power to the junction box and test ceiling light fixture.

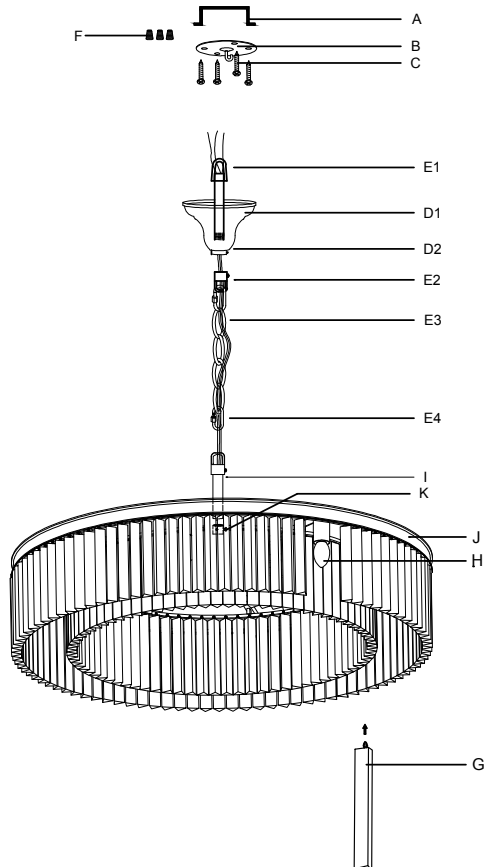

CARE INSTRUCTIONS:

1. Make sure that the power is turned off and bulb has cooled before handling.
2. Wipe clean with a dry cloth / mild soapy solution. Do not use corrosive cleaners.
3. The cable/cord of this ceiling light cannot be replaced: If the cable is damaged, do not use the light.

 

 


 
 





 


ENVIRONMENT:


Special waste handling may be required. Please contact your local authorities for more information.

RESTORATION HARDWARE

RHYS GLASS PRISM CHANDELIER 32"

PARTS ENCLOSED

ITEMS	DIAGRAM	DESCRIPTION	QTY.
(A)		Wooden Beam (Not included)	—
(B1)		Wooden Ceiling Mounting Hardware	1
(B2)		Quick Link	
(C)		Mounting Bolts & nuts (Not included)	1 Set
(D1)		Canopy	1
(D2)			
(E1)		Collar	
(E2)		Hang Straight	1
(E3)		Chain	
(E4)		Quick link	
(F)		Wire Nut	3
(G)		Glass Drop+ Spare	112+4
(H)		Bulb+ Spare	8+3
(I)		Collar	1
(J)		Body	1

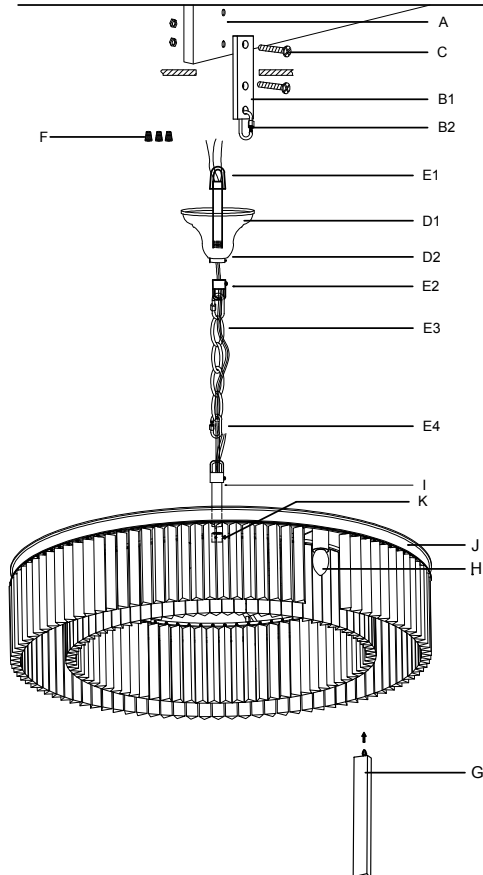

IMPORTANT SAFETY INSTRUCTIONS:

1. Use an authorized and certified electrician for consultation and installation.
2. This fixture has been rated for 8 x 25-watt maximum E12 standard bulb.
3. To avoid the risk of fire, do not exceed the recommended wattage.
4. The ceiling must have at least the capacity of 5 times the weight of the ceiling light. For this light at least a ceiling capacity of 195kg (429.90lb) is required.
5. The manufacturer and distributor accepts no liability for incorrect installation.
6. For indoor use only.
7. Keep away from children.

Warnings:

1. Turn-off electricity supply at main circuit panel before installing. Do not connect electricity supply until your ceiling light is fully assembled and installed.
2. All wires are connected. Do not remove the ceiling light from its packaging by pulling on the power cord, as a bad connection may result.
3. To reduce the risk of fire, electrical shock, or personal injury, always turn off the ceiling light and allow it to cool prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at light bulb. Keep flammable materials away from light bulb.
4. Deviation from instructions may result in a risk of fire or electric shock.

PRODUCT DESCRIPTION:

General material: Glass & Iron
 Height: 35.0 cm (13.78in)
 Diameter: 80.0 cm (31.50in)
 Weight: 39.0 kg (86.0lb)
 Grounded / Hardwired

TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Turn OFF power to the junction box where the ceiling light will be installed.
3. Loosen the bolt of hang straight (E2) and remove the collar (E1) from the hang straight (E2) by unscrewing it. Then insert collar(E1) into canopy (D1) and re-attach collar (E1) to hang straight (E2). Tighten the bolt of the hang straight (E2).
4. Fasten collar (I) to chandelier body (J). Tighten the bolt (K) on body(J).
5. Unlock the quick link (E4) at the opposite end of the chain (E3) to attach the chandelier body (J).
6. Attach the wooden ceiling mounting hardware (B1) to the wooden beam (A) with mounting bolts and nuts (C).
7. Unlock quick link (B2) to attach the end of the collar (E1).
8. Connect the ground wire from the fixture to the ground junction box wire (A) (Usually the green or bare wire) with a wire nut (F) and wrap the connection with electrical tape. Connect the hot wire to the hot junction box wire (A) (Usually black or smooth) with a plastic wire nut (F) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (A) (Usually white or ribbed) with a plastic wire nut (F) and wrap the connection with electrical tape.
9. Move the canopy (D1) up to the ceiling, then fasten the bolt (D2).
10. Fasten lightbulbs (H) to the lampholders.
11. Hang the glass drops (G) from the inner to the outer layer and keep flat surface of glass drop inside. To ensure safety of chandelier during glass drop installation, please maintain level of chandelier by ensuring you install glass drops in balanced way on opposite ends of light.
12. Restore power to the junction box and test ceiling light fixture.

CARE INSTRUCTIONS:

1. Make sure that the power is turned off and bulb has cooled before handling.
2. Wipe clean with a dry cloth / mild soapy solution. Do not use corrosive cleaners.
3. The cable/cord of this ceiling light cannot be replaced: If the cable is damaged, do not use the light.

 
 
 


 
 








ENVIRONMENT:


Special waste handling may be required. Please contact your local authorities for more information.

RESTORATION HARDWARE

RHYS GLASS PRISM CHANDELIER 43"

PARTS ENCLOSED

ITEMS	DIAGRAM	DESCRIPTION	QTY.
(A)		Wooden Beam (Not included)	—
(B1)		Wooden Ceiling Mounting Hardware	1
(B2)		Quick Link	
(C)		Mounting Bolts & nuts (Not included)	1 Set
(D1)		Canopy	1
(D2)			
(E1)		Collar	
(E2)		Hang Straight	
(E3)		Chain	1
(E4)		Quick link	
(F)		Wire Nut	3
(G)		Glass Drop+Spare	160+6
(H)		Bulb+Spare	10+3
(I)		Collar	1
(J)		Body	1

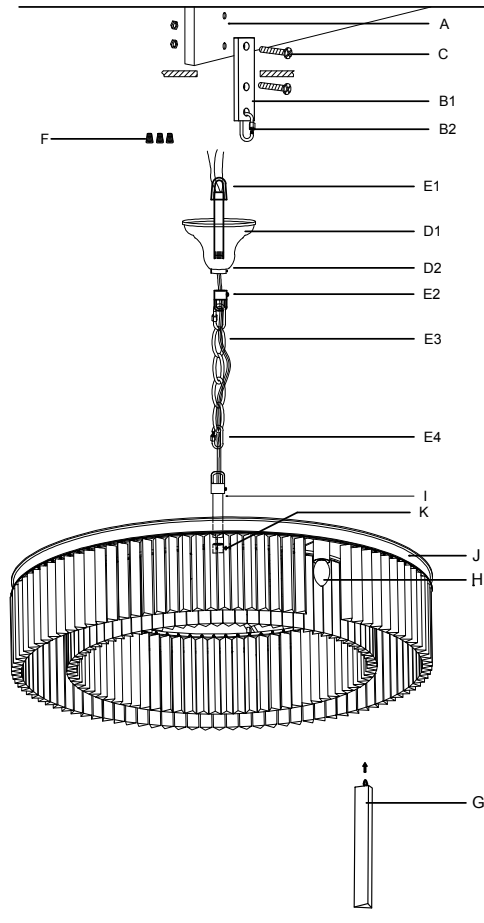

IMPORTANT SAFETY INSTRUCTIONS:

1. Use an authorized and certified electrician for consultation and installation.
2. This fixture has been rated for 10 x 25-watt maximum E12 standard bulb.
3. To avoid the risk of fire, do not exceed the recommended wattage.
4. The ceiling must have at least the capacity of 5 times the weight of the ceiling light. For this light at least a ceiling capacity of 260kg (573.19lb) is required.
5. The manufacturer and distributor accepts no liability for incorrect installation.
6. For indoor use only.
7. Keep away from children.

Warnings:

1. Turn-off electricity supply at main circuit panel before installing. Do not connect electricity supply until your ceiling light is fully assembled and installed.
2. All wires are connected. Do not remove the ceiling light from its packaging by pulling on the power cord, as a bad connection may result.
3. To reduce the risk of fire, electrical shock, or personal injury, always turn off the ceiling light and allow it to cool prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at light bulb. Keep flammable materials away from light bulb.
4. Deviation from instructions may result in a risk of fire or electric shock.

PRODUCT DESCRIPTION:

General material: Glass & Iron
 Height: 35.0 cm (13.78in)
 Diameter: 110.0 cm (43.31in)
 Weight: 52.0 kg (114.64lb)
 Grounded / Hardwired

TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Turn OFF power to the junction box where the ceiling light will be installed.
3. Loosen the bolt of hang straight (E2) and remove the collar (E1) from the hang straight (E2) by unscrewing it. Then insert collar(E1) into canopy (D1) and re-attach collar (E1) to hang straight (E2). Tighten the bolt of the hang straight (E2).
4. Fasten collar (I) to chandelier body (J). Tighten the bolt (K) on body(J).
5. Unlock the quick link (E4) at the opposite end of the chain (E3) to attach the chandelier body (J).
6. Attach the wooden ceiling mounting hardware (B1) to the wooden beam (A) with mounting bolts and nuts (C).
7. Unlock quick link (B2) to attach the end of the collar (E1).
8. Connect the ground wire from the fixture to the ground junction box wire (A) (Usually the green or bare wire) with a wire nut (F) and wrap the connection with electrical tape. Connect the hot wire to the hot junction box wire (A) (Usually black or smooth) with a plastic wire nut (F) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (A) (Usually white or ribbed) with a plastic wire nut (F) and wrap the connection with electrical tape.
9. Move the canopy (D1) up to the ceiling, then fasten the bolt (D2).
10. Fasten lightbulbs (H) to the lampholders.
11. Hang the glass drops (G) from the inner to the outer layer and keep flat surface of glass drop inside. To ensure safety of chandelier during glass drop installation, please maintain level of chandelier by ensuring you install glass drops in balanced way on opposite ends of light.
12. Restore power to the junction box and test ceiling light fixture.

CARE INSTRUCTIONS:

1. Make sure that the power is turned off and bulb has cooled before handling.
2. Wipe clean with a dry cloth / mild soapy solution. Do not use corrosive cleaners.
3. The cable/cord of this ceiling light cannot be replaced: If the cable is damaged, do not use the light.

ENVIRONMENT:

Special waste handling may be required. Please contact your local authorities for more information.