

 

 
 

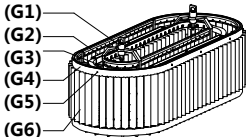


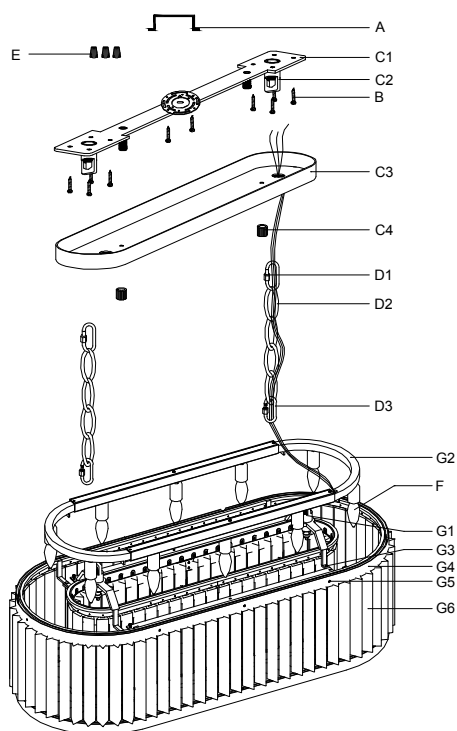


RESTORATION HARDWARE

WELLES CLEAR CRYSTAL RECTANGULAR CHANDELIER 60"

PARTS ENCLOSED

ITEMS	DIAGRAM	DESCRIPTION	QTY.
(A)		Junction Box (Not included) 50LB. MIN. FIXTURE RATED	1
(B)		Mounting Screws (Not included)	10 Sets
(C1)		Ceiling Plate	1
(C2)		Hang Straight	2
(C3)		Ceiling Box	1
(C4)		Screw Cap	2
(D1)		Hang Straight Chain	2
(D2)			
(D3)		Quick link	
(E)		Wire Nut	3
(F)		Bulb+Spare	12+4
(G)		Body	1
(G1)		Hang Straight Lampholder Frame	
(G2)			
(G3)		Bolt A	
(G4)		Metal Ring	
(G5)		Bolt B	
(G6)	Glass Drop		
(H1)		Spare Glass Drop	6
(H2)		Spare Glass Drop	2



IMPORTANT SAFETY INSTRUCTIONS:

1. Use an authorized and certified electrician for consultation and installation. Electrician must be familiar with commercial-type applications of very heavy chandeliers.
2. The screws need to be screwed into a solid support structure inside the ceiling, which would require professional.
3. This fixture has been rated for 12 x 25-watt maximum E12 standard bulb.
4. To avoid the risk of fire, do not exceed the recommended wattage.
5. The ceiling must have at least the capacity of 5 times the weight of the ceiling light. For this light at least a ceiling capacity of 393.5kg (867.50lb) is required.
6. The manufacturer and distributor accepts no liability for incorrect installation.
7. For indoor use only.
8. Keep away from children.

Warnings:

1. Turn-off electricity supply at main circuit panel before installing. Do not connect electricity supply until your ceiling light is fully assembled and installed.
2. All wires are connected. Do not remove the ceiling light from its packaging by pulling on the power cord, as a bad connection may result.
3. To reduce the risk of fire, electrical shock, or personal injury, always turn off the ceiling light and allow it to cool prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at light bulb. Keep flammable materials away from light bulb.
4. Deviation from instructions may result in a risk of fire or electric shock.

PRODUCT DESCRIPTION:

General material: Glass & Iron
 Height: 49.0 cm (19.3in)
 Width: 45.0 cm (17.7in)
 Length: 150.0 cm (59.05in)
 Weight: 78.7kg (173.50lb)
 Grounded / Hardwired

TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Turn OFF power to the junction box where the ceiling light will be installed.
3. Loosen Bolt A (G3) and remove lampholder frame (G2) from body (G). Fasten lightbulbs (F) to the lampholders. Attach lampholder frame (G2) to body (G) and secure with Bolt A (G3).
4. Unlock quick link (D3) to attach the hang straight (G1) on the body (G).
5. Loosen the screw cap (C4) from ceiling box (C3) and remove ceiling plate (C1) from ceiling box (C3).
6. Attach the ceiling plate (C1) to the ceiling with mounting screws (B).
7. Then insert quick link (D1) into ceiling box (C3).
8. Unlock quick link (D1) to attach the hang straight (C2) on the ceiling plate (C1).
9. Connect the ground wire from the fixture to the ground junction box wire (Usually the green or bare wire) with a wire nut (E) and wrap the connection with electrical tape. Connect the hot wire to the hot junction box wire (Usually black or smooth) with a plastic wire nut (E) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (Usually white or ribbed) with a plastic wire nut (E) and wrap the connection with electrical tape.
10. Move the ceiling box (C2) up to the ceiling, then fasten the screw cap (C4).
11. Restore power to the junction box and test ceiling light fixture.
12. When replacing the glass, loosen the bolt B (G5) and detach the metal ring (G4). Loosen the bolts at both ends of glass (G6) and remove glass (G6). Fasten glass (H1) or (H2) at both ends with the bolts of glass (G6). Place metal ring (G4) and fasten bolts B (G5).

CARE INSTRUCTIONS:

1. Make sure that the power is turned off and bulb has cooled before handling.
2. Wipe clean with a dry cloth / mild soapy solution. Do not use corrosive cleaners.
3. The cable/cord of this ceiling light cannot be replaced: If the cable is damaged, do not use the light.

ENVIRONMENT:

Special waste handling may be required. Please contact your local authorities for more information.