


RESTORATION HARDWARE

1910 MACHINIST BOOM TASK FLOOR LAMP

PARTS ENCLOSED

- | | |
|------------------------|--------------------|
| (A) Socket housing (1) | (J) Washer (1) |
| (B) Upper pole (B) | (K) Nut (1) |
| (C) Break (1) | (L) Felt paper (1) |
| (D) Adjustment key (1) | (M) Wrench (1) |
| (E) Lower pole (E) | (N) CFL bulb (1) |
| (F) Adjustment key (1) | |
| (G) Lamp base (1) | |
| (H) Base weight (1) | |

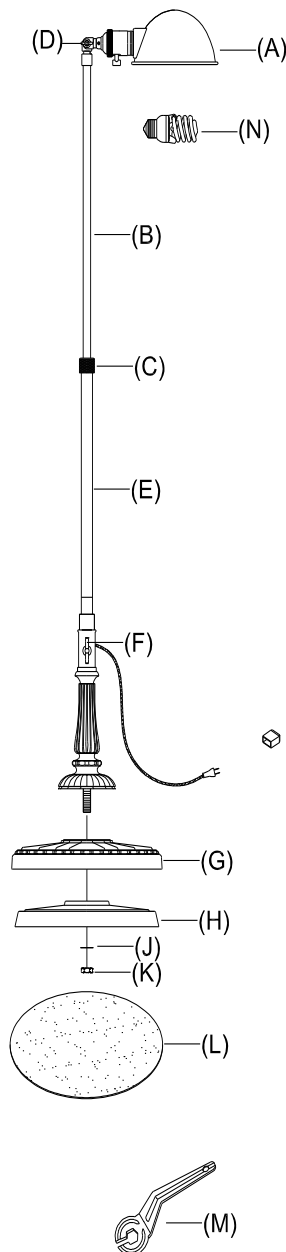

IMPORTANT SAFETY INSTRUCTIONS:

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for one (1) 60-watt maximum TYPE A standard bulb (not included) OR 13W Compact Fluorescent bulb (N) (included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

1. All wires are connected.
2. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
3. Do not connect electricity until your lamp is fully assembled.
4. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
5. Do not touch bulb when fixture is turned on or look directly at lit bulb.
6. Keep flammable materials away from lit bulb.
7. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Join lower pole (E), lamp base (G) & base weight (H) together, and slide washer (J) over the threaded pipe which protrudes from bottom of base weight (H).
3. Screw nut (K) onto the threaded pipe to secure lamp base to lamp pole, and tighten with wrench (M) provided.
4. Remove backing sheet from felt paper (L), affix felt paper (L) underneath the base weight (H).
5. Insert the recommended bulb into socket housing (A).
6. Plug into proper electrical outlet and test fixture.
7. Assembly is complete.

TO ADJUSTMENT:

1. Loosen adjustment key (D) and (F).
 2. Adjust lamp by swinging lower pole (E) or socket housing (A) to desired angle.
 3. Tighten adjustment key (D) and (F)
- OR –
1. Loosen break (C) by turning counter-clockwise direction
 2. Adjust lamp by pulling or pushing upper pole (B) up or down to desired height.
 3. Tightening by turning break (C) clockwise direction.

CARE INSTRUCTIONS:

Avoid the use of all polishers, cleaners, and abrasives, as they will damage the finish of your lamp. To remove dust or fingerprints, wipe gently with a soft, clean cloth.