


# RESTORATION HARDWARE

## VINTAGE SEWING TASK FLOOR LAMP

### PARTS ENCLOSED

- |                          |                        |
|--------------------------|------------------------|
| (A) Lamp pole (1)        | (J) Upper pole (1)     |
| (B) Lamp base (1)        | (K) Swivel             |
| (C) Base weight (1)      | (L) Adjustment key (1) |
| (D) Washer (1)           | (M) Lamp arm (1)       |
| (E) Nut (1)              | (N) Wire rings (2)     |
| (F) Wrench (1)           | (O) Adjustment key (1) |
| (G) Felt paper (1)       | (P) Socket housing (1) |
| (H) Adjustment break (1) | (Q) Light bulb (1)     |

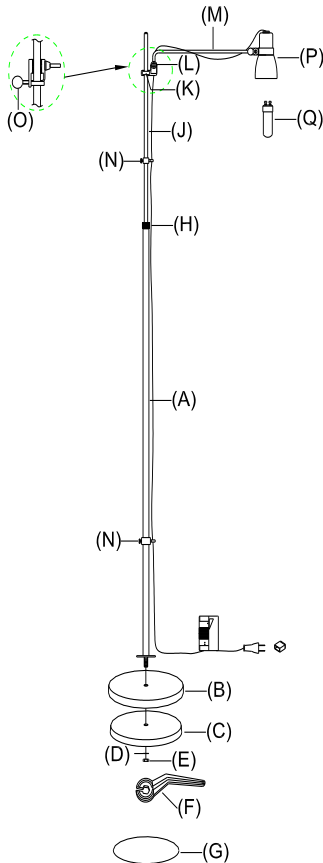

### IMPORTANT SAFETY INSTRUCTIONS:

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for one (1) 20-watt maximum DJD bulb (Q) (included). To avoid the risk of fire, do not exceed the recommended wattage.

### WARNINGS:

1. SAVE THESE INSTRUCTIONS
2. Lighted lamp is HOT! Turn off/ unplug and allow to cool before replacing bulb (lamp).
3. Bulb (lamp) gets HOT quickly! Only contact switch/plug when turning on.
4. Do not touch hot lens. Do not remain in light if skin feels warm.
5. Do not look directly at lighted lamp. Keep lamp away from materials that may burn. Use only with a 20 watt or smaller bulb (lamp).
6. Do not touch the bulb (lamp) at any time. Use a soft cloth. Oil from skin may damage bulb (lamp).
7. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

### TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Join lamp pole (A), lamp base (B) and base weight (C) together by tightening washer (D) and nut (E) to threaded rod on bottom nipple of pole (A). Tighten with wrench (F) provided.
3. Remove backing sheet from felt paper (G), affix felt paper underneath the base weight (C).
4. Insert the recommended bulb (Q) into socket housing (P).
5. Plug into proper electrical outlet and test fixture.
6. Assembly is complete.

### TO ADJUST:

1. Loosen adjustment break (H) in counter-clockwise direction.
2. Adjust lamp by pulling or pushing upper pole (J) up or down to get desired height.
3. Tighten adjustment break (H) in clockwise direction.
4. Loosen adjustment keys (L) and (O).
5. Adjust lamp by swing lamp arm (M) or socket housing (P) to desired angle.
6. Pull the swivel (K) up or down to desired height.
7. Tighten adjustment keys (L) and (O).
8. To adjust the location of both wire rings (N), loosen the adjustment knobs at side, pull up or push down (N) to desired height, tighten the adjustment knobs.

### CARE INSTRUCTIONS:

Avoid the use of all polishers, cleaners, and abrasives, as they will damage the finish of your lamp. To remove dust or fingerprints, wipe gently with a soft, clean cloth.