

# RESTORATION HARDWARE

## MCCROSKEY SWING-ARM TASK TABLE

### PARTS ENCLOSED:

- (A) Bottom knob
- (B) Arm knob 1
- (C) Arm knob 2
- (D) 13W CFL bulb (included)

### IMPORTANT SAFETY INSTRUCTIONS:

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into your outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way. This fixture has been rated for up to (1) 13W max CFL bulb (included) or (1) 60W max Type A bulb. To avoid the risk of fire, do not exceed the recommended wattage.

### WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until your lamp is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off the lamp and allow it to cool prior to replacing the light bulb. Do not touch bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.

**THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.**



### WARNING: STRANGULATION HAZARD

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

### ASSEMBLY & INSTALLATION:

1. Carefully remove all parts from the box and remove plastic covering.
2. Place the lamp base on tabletop carefully.
3. Adjust the knobs (A), (B) and (C) to get desired direction and height.
4. Insert the 13W CFL bulb (D) into the threaded socket.
5. Plug into proper electrical outlet and test the lamp.
6. Assembly is complete.

### CARE INSTRUCTIONS:

Wipe clean with soft dry cloth.  
Do not use polishes or cleaners, as it may damage the finish.

