

# RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options.

## PARTS ENCLOSED:

- (A) Harp 1"
- (B) Finial Screw Plate
- (C) Riser 1/2"
- (D) Riser 1"
- (E) Riser 1/2"
- (F) Threaded Socket
- (I) Finial


## IMPORTANT SAFETY INSTRUCTIONS:

- Please read the instructions carefully. Only after understanding it completely you should start assembling the article.
- Attempting to assemble the product without understanding the instructions may result in damaging the product and can also harm your safety.

## WARNINGS :

1. For safety purpose this lamp is equipped with a polarized plug (one blade is wider than the other).
2. If the plug does not fit securely into the outlet into the outlet, do not force it – contact a professional electrician.
3. Use the plug with an extension cord only if it can be fully inserted into the cord socket. Never alter the plug in anyway.

## French Rococo Gate Artifact Table Lamp

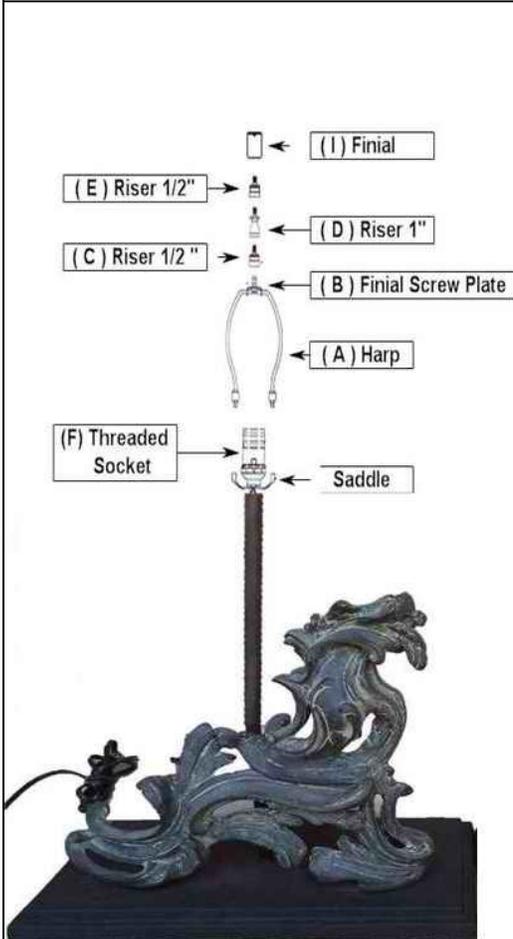


## TO ASSEMBLE :

1. Take out the complete assembly carefully out of the box.
2. Insert Harp (A) into the saddle of the lamp.
3. Insert bulb (not included), into Threaded Socket (F)
4. Place the recommended shade in straight position as per below mentioned "Shade Instructions" over the Harp (A) and on to the Finial Screw Plate (B).
5. If shade sits too low on the lamp base, remove the shade and thread Shade Risers (C or D or E) onto the Finial Screw Plate (B) as needed to achieve the desired shade height. Shade risers (C, D or E) can be used individually or all of the three can be used at the same time to achieve the desired result.
6. Shade Risers may not be necessary at times when the height of the lamp alone allows for proper lampshade fitting.
7. When Shade fitting is complete, attach the Finial (I) to secure the shade in place.
8. Your product is now ready for use.

## SHADE INSTRUCTIONS :

1. To reduce the risk of fire, use maximum 150 Watt, type A Bulb or CFL lamp maximum 23 Watt.
2. Use Open Top, Open Bottom type of shade.
3. For 150 Watt type A Bulb or CFL lamp maximum 23 Watt, the minimum lamp shade spacings are as specified.  
E = 3.25 inches  
F = 4.75 inches  
G = 4.50 inches  
Shade minimum opening area is 16 square inches.
4. Do not use the shade in this position.
5. Shade material other than metal, glass or porcelain shall be of slow burning type.

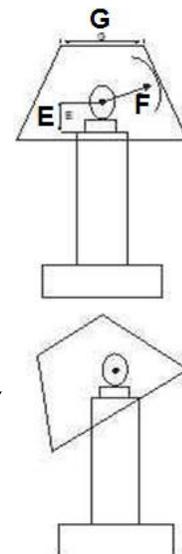

## CARE INSTRUCTIONS :

1. Disconnect the appliance by unplugging it from the electric outlet when not in use.
2. Never pull the cord to disconnect. Always pull the plug gently.
3. To clean use soft dry cloth only.

