


RESTORATION HARDWARE

PYRAMID TELESCOPING FLOOR LAMP

PARTS ENCLOSED

- (A) Socket ring (1)
- (B) Socket (1)
- (C) Upper pole (1)
- (D) Break (1)
- (E) Lower pole (1)
- (F) Lamp base (1)
- (G) CFL bulb (1)

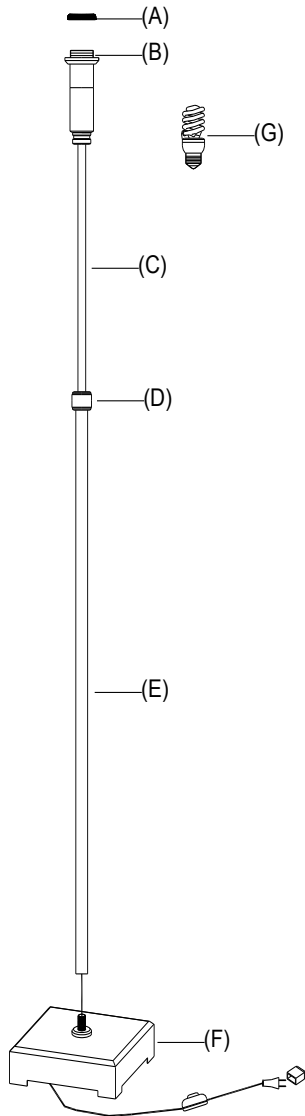

IMPORTANT SAFETY INSTRUCTIONS

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into outlet, do not force it; contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for one (1) 40-watt maximum TYPE A bulb (not included) OR 9-watt Compact Fluorescent bulb (included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNING

1. All wires are connected.
2. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
3. Do not connect electricity until your lamp is fully assembled.
4. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
5. Do not touch bulb when fixture is turned on or look directly at lit bulb.
6. Keep flammable materials away from lit bulb.
7. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

TO ASSEMBLE

1. Carefully remove all parts from the box and remove all plastic covering.
2. Thread lower pole (E) onto the top nipple of lamp base (F).
3. Remove socket ring (A) from socket (B), place lamp shade (sold separately) onto the threaded section of socket (B) and secure with socket ring (A).
4. Insert the recommended bulb into the socket.
5. Plug into proper electrical outlet and test fixture.
6. Assembly is complete.

TO ADJUST

1. Loosen break (D) by turning counter-clockwise direction.
2. Adjust lamp by pulling or pushing upper pole (C) up or down to desired height.
3. Tighten break (D) by turning clockwise direction.

CARE INSTRUCTIONS

Avoid the use of all polishers, cleaners, and abrasives, as they will damage the finish of your lamp. To remove dust or fingerprints, wipe gently with a soft, clean cloth.