


RESTORATION HARDWARE

ALSACE ARCHITECTURAL RAILING SCONCE

PARTS ENCLOSED

- | | |
|-------------------------|------------------------|
| (A) Mounting plate (1) | (J) Inner rod (1) |
| (B) Mounting screws (2) | (K) Lower pole (1) |
| (C) Fixture base (1) | (L) Lower base (1) |
| (D) Base screw (3) | (M) Finial (1) |
| (E) Upper rod (1) | (N) Plastic anchor (1) |
| (F) Socket ring (2) | (O) Set screw (1) |
| (G) Socket (2) | (P) Washer (1) |
| (H) Lamp pole (1) | |

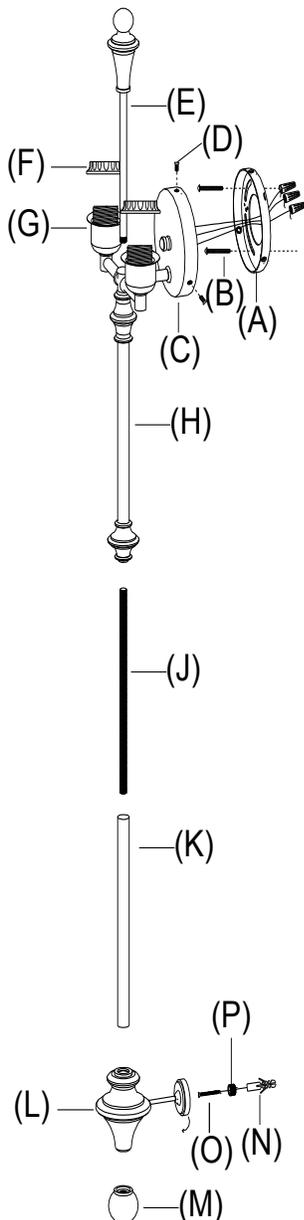

IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for two (2) 40-watt maximum Type A bulb (not included) OR 9W Compact Fluorescent light bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

1. All wires are connected.
2. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
3. Do not connect electricity until your lamp is fully assembled.
4. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
5. Do not touch bulb when fixture is turned on or look directly at lit bulb.
6. Keep flammable materials away from lit bulb.
7. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Thread upper rod (E) into the center hole in between of the sockets (G).
3. Thread inner pole (J) into the bottom threaded opening of pole (H)
4. Slide lower pole (K) over the inner rod (J), followed with (L) and screw finial (M) onto the end of (J) to secure (L) and (K) to (H). Make sure the bottom plate of (L) is at the same direction with (C).
5. Remove mounting plate (A) from fixture base (C) by removing base screws (D).
6. Affix mounting plate (A) to wall outlet box with mounting screws (B) provided.
7. Place fixture base (C) onto the mounting plate (A). Make sure the whole fixture base is vertical, mark the out line of bottom plate of (L) on the wall. Remove the light fixture.
8. Drill small hole on the center point of the marked circle on the wall, the hole should be large enough to accommodate the plastic anchor (N). Push plastic anchor (N) into the hole on the wall.
9. Insert screw (O) and washer (P) to plastic anchor, make sure screwhead 1/8" threads are visible.
10. Attach the fixture ground wire (green) to the ground wire from the outlet box (usually green or bare wire) with a plastic wire connector and wrap the connection with electrical tape.
11. Connect the neutral wire (white) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
12. Connect the hot wire (black) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape.
13. Attach fixture base (C) to mounting plate (A) and tighten with base screws (D).
14. Thread the bottom plate of (L) to washer (P).
15. Remove socket rings (F) from top of sockets (G). Attach lamp shades (not included) to the threaded sockets (G) and secure with socket rings (F).
16. Insert the recommended bulbs into sockets.
17. Restore power to outlet box and check operation of fixture.

CARE INSTRUCTIONS:

Wipe all surfaces with a soft dry cloth. Clean glass with a mild soap and water mixture. Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.