


RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting.
Our assortment is crafted with the highest quality details in mind.

PARTS ENCLOSED

- (A) Base (1)
- (B) Lower Tube (1)
- (C) Tube Connector (1)
- (D) Upper Tube (1)
- (E) Arm Connector (1)
- (F) Arm (1)
- (G) Cap Screw (1)
- (H) Shade Ring (1)
- (I) Shade (1)

COUNTERWEIGHT TASK FLOOR LAMP

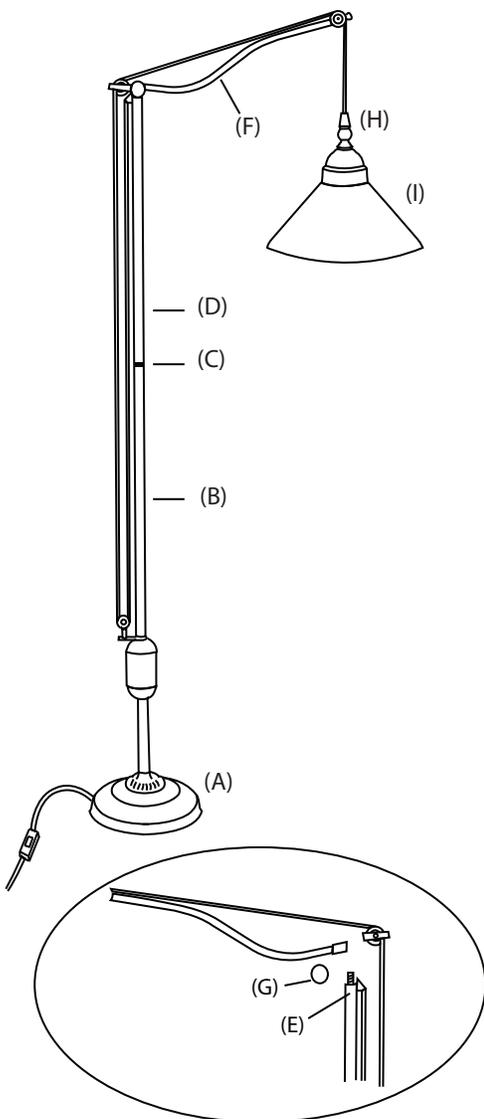

IMPORTANT SAFETY INSTRUCTIONS:

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for one (1) 40-watt maximum TYPE A standard bulb (not-included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

All wires are connected. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result. Do not connect electricity until your lamp is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.

TO ASSEMBLE:

Be careful when unpacking lamp. The parts are all connected by cord. They consist of the Base with attached Lower Tube and sliding counterweight, The Upper Tube, and the Arm.

1. While supporting Lower Tube, remove Base from main carton. Remember that counterweight is heavy and can slide freely up and down Base.
2. Lay base and tube horizontally. Use the foam packing from top of main carton to support Lower Tube while it is on its side.
3. Lay Upper Tube in line above Lower Tube, and arm above Upper Tube. Remove cap screw from top of Upper Tube and keep safe for later (see fig. 2).
4. Pull excess cord between Upper and Lower Tubes out through the bottom of the Base.
5. There is a length of thread running all the way through the Upper Tube. This needs to screw into the inner "female" neck of the Tube Connector. To do this, hold Upper Arm by the Arm Connector at the top end and rotate clockwise. It may take a few tries to get the thread to align and take hold of the female neck. Once it does, continue to tighten till the two tubes are snug and solid. The cord will wrap around the tubes, but you can unwrap it in the next step.
6. While holding the arm, gently stand the lamp upright. Using the arm, you can now unwrap the cord.
9. Be aware most parts are brass and relatively soft. Use caution when tightening.
10. Make sure cord rides centered on all pulleys
11. Attach glass shade by first removing metal shade ring from socket. Lift the shade so the socket enters the shade through the top opening and reattach metal shade ring.
12. Install medium base bulb, 40 WATT MAX, and your lamp is ready to be plugged in
13. IMPORTANT! Periodically tighten Cap Screw, it can loosen overtime with normal use.

CARE INSTRUCTIONS:

Do not use polishes or cleaners on your lamp.
JUST WIPE CLEAN WITH A SOFT, DRY CLOTH.