 
RESTORATION HARDWARE


Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind.

PARTS ENCLOSED

- (A) Hanger Bar (1)
- (B) Hook (1)
- (C) Nut (1)
- (D) Lamp (1)
- (E) Socket Ring (2)
- (F) Shades (2)

CARTESIAN DOUBLE PULLEY PENDANT



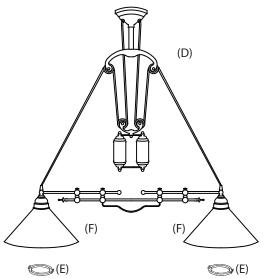

IMPORTANT SAFETY INSTRUCTIONS:

This fixture has been rated for two (2) 40-watt maximum TYPE A standard bulb (not-included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

All wires are connected. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result. Do not connect electricity until your lamp is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.

TO ASSEMBLE:

(Professional Installation Recommended)

- 1. Carefully remove the light from the box
- 2. Screw hook into hanger bar and attach nut to the top side
- 3. Attach hanger bar to junction box in ceiling
- 4. Hang the light from the hook and attach wires
- 5. Slide canopy towards ceiling. Slide the canopy ring underneath the canopy, tighten the screws to hold the canopy against the ceiling. Do not over tighten or screws can strip
- 6. Unscrew socket rings
- 7. Slide shades over sockets and screw socket rings back on to hold shades in place

CARE INSTRUCTIONS:

Do not use polishes or cleaners on your lamp. JUST WIPE CLEAN WITH A SOFT, DRY CLOTH.