


RESTORATION HARDWARE

NERO CHANDELIER 29"

PARTS ENCLOSED

- (A) Mounting Plate
- (B) Mounting Screws (2)
- (C) Canopy Screws (3)
- (D) Canopy
- (E) Chain
- (F) Top Loop
- (G) Light bulb (48)

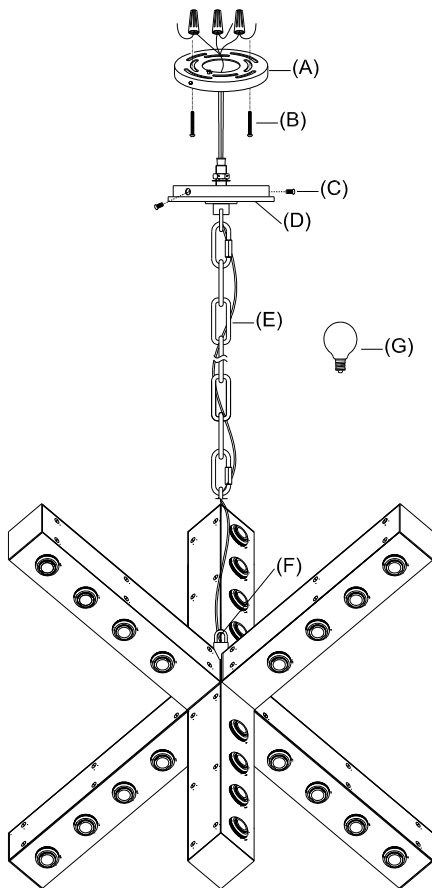

IMPORTANT SAFETY INSTRUCTIONS

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for forty-eight (48) 25-watt maximum TYPE G12 bulb (L) (included) OR forty-eight (48)-9-watt compact fluorescent bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

1. All wires are connected. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
2. Do not connect electricity until your lamp is fully assembled.
3. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
4. Do not touch bulb when fixture is turned on or look directly at lit bulb.
5. Keep flammable materials away from lit bulb
6. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

TO ASSEMBLE

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!
2. Carefully remove all parts from the box and remove all plastic covering.
3. Remove mounting plate (A) from canopy (D) by removing canopy screws (C).
4. Hook the chain (E) to the top loop (F) on light fixture.
5. Feed wire through chain (E) and canopy (D); come out from back side of canopy (D).
6. Attach mounting plate (A) to ceiling outlet box with mounting screws (B) provided.
7. Gently pull the wiring from the ceiling outlet box and allow the wires to hang. Thread the wires through the center hole in the mounting plate (A).
8. Attach the fixture ground wire and house ground wire (usually green insulation or bare wire) to ceiling outlet box with the green grounding screw. Connect fixtures to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
9. Connect the neutral wire (white wire) to the neutral outlet wire (usually white insulation) with a plastic wire connector and wrap the connection with electrical tape.
10. Connect the hot wire (black wire) to the hot outlet box wire (usually black insulation) with a plastic wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
11. Tuck these wire connections neatly into the ceiling outlet box.
12. Attach canopy (D) to affixed mounting plate (A) and secure with canopy screws (C).
13. Insert the recommended bulbs (G) into the sockets.
14. Restore power to outlet box and check operation of fixture.
15. Assembly is complete.

CARE INSTRUCTIONS

Avoid the use of all polishers, cleaners, and abrasives, as they will damage the finish of your lamp. To remove dust or fingerprints, wipe gently with a soft, clean cloth.