


RESTORATION HARDWARE

PRISMATIC GLOBE PENDANT

PARTS ENCLOSED:

- (A) Mounting strap
- (B) Nipple
- (C) Mounting screws (2)
- (D) Mounting loop
- (E) Canopy
- (F) Canopy ring
- (G) Chain
- (H) Socket Assembly
- (J) Set Screws
- (K) Cage Shade

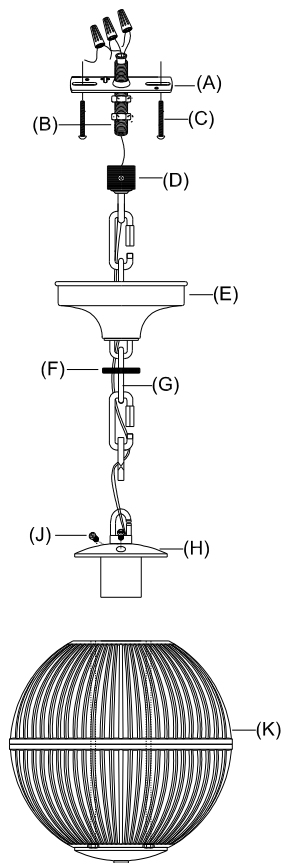

IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

The fixture has been rated for the following: 9" Pendant - one (1) 60-watt maximum TYPE B TORDEDO bulb (not included), 12" Pendant - (1) 75-watt maximum TYPE B TORDEDO bulb (not included), 16" Pendant - (1) 100-watt maximum TYPE B TORDEDO bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

1. All wires are connected. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
2. Do not connect electricity until your lamp is fully assembled.
3. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
4. Do not touch bulb when fixture is turned on or look directly at lit bulb.
5. Keep flammable materials away from lit bulb
6. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

TO ASSEMBLE:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!
2. Carefully remove all parts from the box and remove all plastic covering.
3. Remove Socket Assembly (H) from Cage Shade (K) by removing Set Screws (J).
4. Insert the recommended bulb (not included) into the socket.
5. Replace Socket Assembly (H) to Cage Shade (K) and secure with Set Screws (J).
6. Hook the Chain (G) to the Top Loop on Socket Assembly (H).
7. Feed wire through chain (G), canopy (E) and mounting loop (D).
8. Unscrewing canopy ring (F), slide canopy ring (F) and canopy (E) on chain (G).
9. Attach mounting strap (A) to ceiling outlet box with mounting screws (C) and insert top threaded nipple (B) in mounting strap (A).
10. Attach mounting loop (D) to the threaded nipple (B) and tighten the set screw.
11. Attach chain (G) with fixture to chain mounting loop (D) at desired height.
12. Gently pull the wiring from the ceiling outlet box and allow the wires to hang. Thread the wires through the center hole in the mounting strap (A).
13. Attach the fixture ground wire (green) to the ground wire from the outlet box (usually green insulation or bare wire) with a plastic wire connector and wrap the connection with electrical tape.
14. Connect the neutral wire (white) to the neutral outlet wire (usually white insulation) with a plastic wire connector and wrap the connection with electrical tape.
15. Connect the hot wire (black) to the hot outlet box wire (usually black insulation) with a plastic wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
16. Tuck these wire connections neatly into the ceiling outlet box.
17. Slip canopy (E) to ceiling and secure with canopy ring (F).
18. Restore power to outlet box and check operation of fixture.
19. Assembly is complete.

CARE INSTRUCTIONS:

Avoid the use of all polishers, cleaners, and abrasives, as they will damage the finish of your lamp. To remove dust or fingerprints, wipe gently with a soft, clean cloth.