 
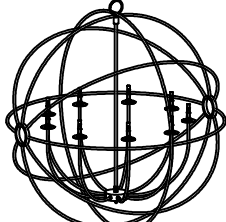


RESTORATION HARDWARE

FOUCAULT'S ORB OUTDOOR CHANDELIER 41"

PARTS ENCLOSED

ITEMS	DIAGRAM	DESCRIPTION	QTY.
(A)		Junction Box (Not included) 50LB. MIN.FIXTURE RATED	1
(B)		Mounting Screws (Not included)	2 Sets
(C1)		Ceiling Hook	1
(C2)		Bolts	4
(C3)		Canopy	1
(D1)		Quick link	1
(D2)		Chain	
(D3)		Quick link	
(E)		Wire Nut	3
(F)		Candle Sleeve	9
(G)		Bulb+Spare	9+3
(H)		Glass Cover + Spare	9+1
(I)		Body	1

IMPORTANT SAFETY INSTRUCTIONS:

1. Use an authorized and certified electrician for consultation and installation.
2. This fixture has been rated for 9 x 15-watt maximum E12 standard bulb.
3. To avoid the risk of fire, do not exceed the recommended wattage.
4. The ceiling must have at least the capacity of 5 times the weight of the ceiling light.
For this light at least a ceiling capacity of 60kg (132.3 lb) is required.
5. The manufacturer and distributor accepts no liability for incorrect installation.
- 6.Suitable for wet locations.
7. Keep away from children.

Warnings:

1. Turn-off electricity supply at main circuit panel before installing. Do not connect electricity supply until your ceiling light is fully assembled and installed.
2. All wires are connected. Do not remove the ceiling light from its packaging by pulling on the power cord, as a bad connection may result.
3. To reduce the risk of fire, electrical shock, or personal injury, always turn off the ceiling light and allow it to cool prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at light bulb. Keep flammable materials away from light bulb.
4. Deviation from instructions may result in a risk of fire or electric shock.

PRODUCT DESCRIPTION:

General material: Glass & Iron
Height: 109.0 cm (42.91in)
Diameter: 103.0 cm (40.55in)
Weight: 12.0 kg (26.46lb)
Grounded / Hardwired

TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Turn OFF power to the junction box where the ceiling light will be installed.
3. Unlock the quick link (D3) at the opposite end of the chain (D2) to attach the body(I).
4. Loosen the bolts (C3) and remove the ceiling hook (C1) from canopy (C2).
5. Attach the ceiling hook (C1) to the ceiling with mounting screws (B).
6. The grounding wire from the outlet box shall connect to the green wire of luminaire and wrap round the green headed grounding teminal on the ceiling hock (C1) and wrap the connection with electrical tape.Connect the hot wire to the hot junction box wire (A) (Usually black or smooth) with a plastic wire nut (E) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (A) (Usually white or ribbed) with a plastic wire nut (E) and wrap the connection with electrical tape.
- 7.Move the canopy (C2) up to the ceiling hook (C1), then fasten the bolts (C3).
8. Unlock the quick link (D1) at the opposite end of the chain (D2) to attach the canopy (C2).
9. Cover the lampholders with candle sleeves (F).
10. Fasten lightbulbs (G) to the lampholders, then Glass Cover (H) spin into body(I).
11. Restore power to the junction box and test ceiling light fixture.

CARE INSTRUCTIONS:

1. Make sure that the power is turned off and bulb has cooled before handling.
2. Wipe clean with a dry cloth / mild soapy solution. Do not use corrosive cleaners.
3. The cable/cord of this ceiling light cannot be replaced: If the cable is damaged, do not use the light.

ENVIRONMENT:

Special waste handling may be required. Please contact your local authorities for more information.

