

RESTORATION HARDWARE

CHARLTON FLOOR LAMP

PARTS ENCLOSED

- (A) Shade (1)
- (B) Adjustment Key (1)
- (C) Lamp Arm (1)
- (D) Adjustment Key (1)
- (E) Upper Pole (1)
- (F) Adjustment Key (1)
- (G) Lower Pole (1)
- (H) Lamp Base (1)
- (J) Base Weight (1)
- (K) Washer (1)
- (L) Nut (1)
- (M) Felt Paper (1)
- (N) T-wrench (1)
- (O) CFL Bulb (1)

IMPORTANT SAFETY INSTRUCTIONS

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for one (1) 60-watt maximum TYPE A standard bulb (not included) OR one (1) 13-watt compact fluorescent bulb (O) (included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

1. All wires are connected.
2. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
3. Do not connect electricity until your lamp is fully assembled.
4. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
5. Do not touch bulb when fixture is turned on or look directly at lit bulb.
6. Keep flammable materials away from lit bulb.
7. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

TO ASSEMBLE

1. Carefully remove all parts from the box and remove all plastic covering.
2. Remove white plastic bushing from the threaded hole of Lamp Base (H).
3. Join Lower Pole (G), Lamp Base (H) & Base Weight (J) together, and slide Washer (K) over the threaded pipe which protrudes from bottom of Base Weight (J).
4. Screw Nut (L) onto the threaded pipe to secure Lamp Base (H) to Lower Pole (G). Tighten with T-wrench (N).
5. Pull the wire from the cord exit hole until tight.
6. Remove backing sheet from Felt Paper (M), affix the Felt Paper (M) to the underneath of the Base Weight (J).
7. Insert the recommended bulb (O) into the socket.
8. Plug into proper electrical outlet and test fixture.
9. Assembly is complete.

TO ADJUST

1. Loosen Adjustment Keys (B), (D) and (F).
2. Adjust lamp by pulling or pushing upper pole (E) up or down to desired height. or swing lamp shade (A) and lamp arm (C) to desired position.
3. Tighten Adjustment Keys (B), (D) and (F).

CARE INSTRUCTIONS

Avoid the use of all polishers, cleaners, and abrasives, as they will damage the finish of your lamp. To remove dust or fingerprints, wipe gently with a soft, clean cloth.

