


RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

PARTS:

- (A) Lamp
- (B) Saddle
- (C) Harp
- (D) ThreadedNipple
- (E) Finial

AXELLE TABLE LAMP

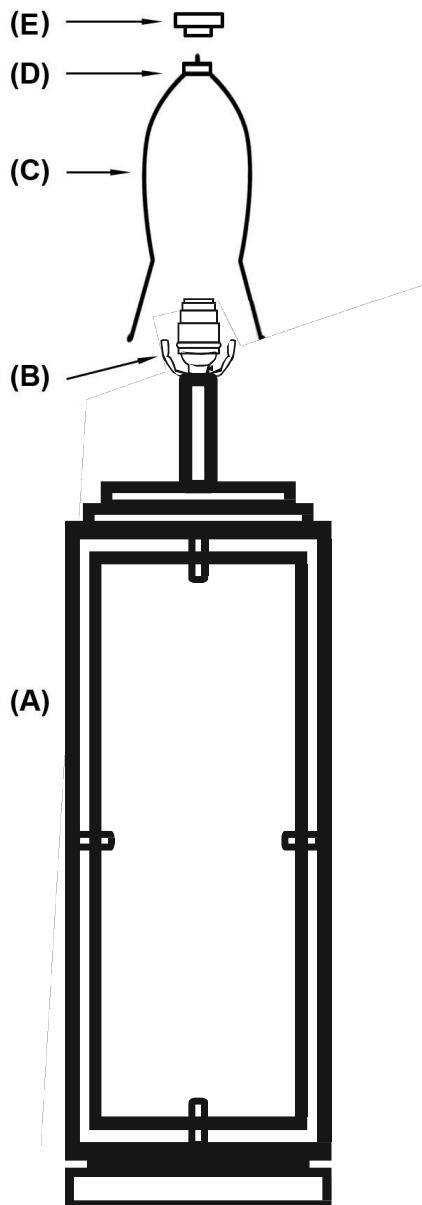

IMPORTANT SAFETY INSTRUCTIONS:

These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

For safety purposes this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into the outlet, do not force it- contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in anyway.

This fixture has been rated for up to one (1) 150W max TYPE A 2-way bulb. To avoid risk of fire, do not exceed the recommended wattage.

WARNING:


1. All wires are connected.
2. Do not remove the lamp from it's packaging by pulling the power cord, as a bad connection may result.
3. Do not connect electricity until your lamp is fully assembled.
4. To reduce the risk of fire electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing the light bulb.
5. Do not touch the bulb while the lamp is turned on, or look directly at the lit bulb.
6. Keep flammable material away from the lit bulb.
7. Do not tilt the shade, keep it level.

TO ASSEMBLE:

1. Carefully remove all parts from the box and remove plastic covering.
2. Insert the Harp(C) into the saddle(B).
3. Insert the recommended bulb into the threaded socket.
4. Remove the Finial (E) from the threaded Nipple(D) by unscrewing in counter clockwise direction.
5. Place the shade on the Harp(C) in such a way that the top of the Harp matches the top of the shade.
6. Reattach the Finial (E) and tighten to secure the Shade (not included) by screwing in a clockwise direction.
7. Plug into proper electrical outlet and test fixture.
8. Assembly is complete.

SHADE INSTRUCTIONS :

1. To reduce the risk of fire, use maximum 150 watt, type A Bulb or CFL Lamp maximum 23 watt.
2. Use Open Top, Open Bottom type of shade.
3. For 150 Watt type A Bulb, or CFL lamp maximum 23 watt, the minimum lamp shade spacings are as specified.
E = 3.25 inches
F = 4.75 inches
G = 4.50 inches
Shade minimum opening area is 16 square inches.
4. Do not use the shade in this position.
5. Shade material other than metal, glass or porcelain shall be of slow burning type.

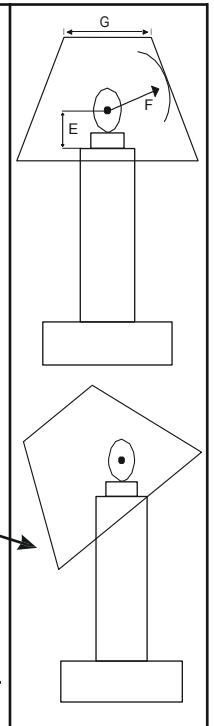

CARE INSTRUCTIONS:

Avoid the use of all polishers, cleaners, and abrasives as they will damage the finish of your lamp. To remove dust or fingerprints, wipe gently with a soft, clean cloth.

CAUTION :

Any Deviation from the recommended type of shade may constitute a fire hazard.