


## BISTRO GLOBE GLASS CHANDELIER 42"

### PARTS ENCLOSED

- (A) Mounting Plate (1)
- (B) Mounting Screws (2)
- (C) Canopy (1)
- (D) Mounting Loop (1)
- (E) Canopy Screws (3)
- (F) Hanging Loop (1)
- (G) 18" Connection Rods (2)
- (H) 12" Connection Rods (2)
- (J) 6" Connection Rods (2)
- (K) Connective Tubes (5)
- (L) Light Fixture (1)
- (M) Thumbscrews (48)
- (N) Shade Holders (12)
- (O) Glass Shades (12)
- (P) Bulbs (12)

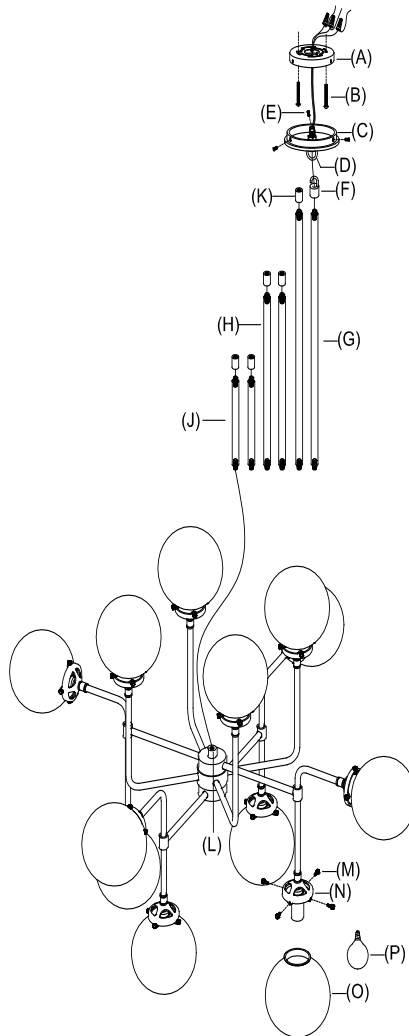

## IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to twelve (12) 40-Watt maximum Type G-16.5 Watt bulbs (P) (included) or twelve (12) 9-Watt compact fluorescent light bulbs (not included). To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

## ASSEMBLY &amp; INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic covering.
2. Determine the hanging length of pendant. Connect Light Fixture (L) to some or all Connection Rods (G) (H) (J) and Connective Tubes (K) according to the height needed.
3. Thread Hanging Loop (F) onto the inner connection rod of the top cord cover.

## ASSEMBLY &amp; INSTALLATION CONT.

4. Hook Hanging Loop (F) to Mounting Loop (D).
5. Remove Mounting Plate (A) from Canopy (C) by removing Canopy Screws (E).
6. Place Mounting Plate (A) to ceiling outlet box with Mounting Screws (B).
7. Feed wires through the Connection Rods, Hanging Loop (F), Mounting Loop (D), and Canopy (C).
8. Attach the fixture ground wire (GREEN) to the ground wire from the outlet box (usually green insulation or bare wire) with a plastic wire connector and wrap the connection with electrical tape.
9. Connect the neutral wire (WHITE) to the neutral outlet wire (usually white insulation) with a plastic wire connector and wrap the connection with electrical tape.
10. Connect the hot wire (BLACK) to the hot outlet box wire (usually black insulation) with a plastic wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS; OTHERWISE, SAFETY WILL BE COMPROMISED.
11. Tuck the wire connection neatly into the ceiling outlet box.
12. Attach Canopy (C) with light fixture to affixed Mounting Plate (A) and secure with Canopy Screws (E).
13. Insert Bulbs (P) into sockets.
14. Loosen Thumbscrews (M). Attach Glass Shades (O) to Shade Holders (N) and tighten with Thumbscrews (M). DO NOT OVERTIGHTEN; OTHERWISE, GLASS WILL BE DAMAGED.
15. Assembly is complete.

## CARE INSTRUCTIONS

Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth.