

# RH

## ARCHER TASK TABLE LAMP

### PARTS INCLUDED

- (A) Shade
- (B) Socket Tube
- (C) Pole
- (D) Base

### IMPORTANT SAFETY INSTRUCTIONS

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into your outlet, do not force it – contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way. These instructions are provided for your safety. It is important that it is read carefully and completely before assembling the fixture. To avoid risk of fire, do not exceed the recommended wattage.

### WARNINGS

To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing the light bulb. Do not touch bulb when fixture is turned on. Do not look directly at lit bulb. Keep flammable materials away from lit bulb.

### PRE-ASSEMBLY

Remove all parts and hardware from box along with any plastic protective packing. Do not discard any content until after assembly is complete to avoid accidentally discarding small parts or hardware.

### ASSEMBLY INSTRUCTIONS

Carefully remove all parts from the box and remove all plastic covering. Insert bulb (included) into socket. Plug into proper electrical outlet and test fixture. Assembly is complete.

### CARE INSTRUCTIONS

Clean with a soft, dry cloth. Avoid harsh chemicals or abrasive cleaners, as they may damage the lamp.

### SAVE THESE INSTRUCTIONS

