HOPPER OUTDOOR WALL LAMP

ASSEMBLY INSTRUCTIONS

RESTORATION HARDWARE

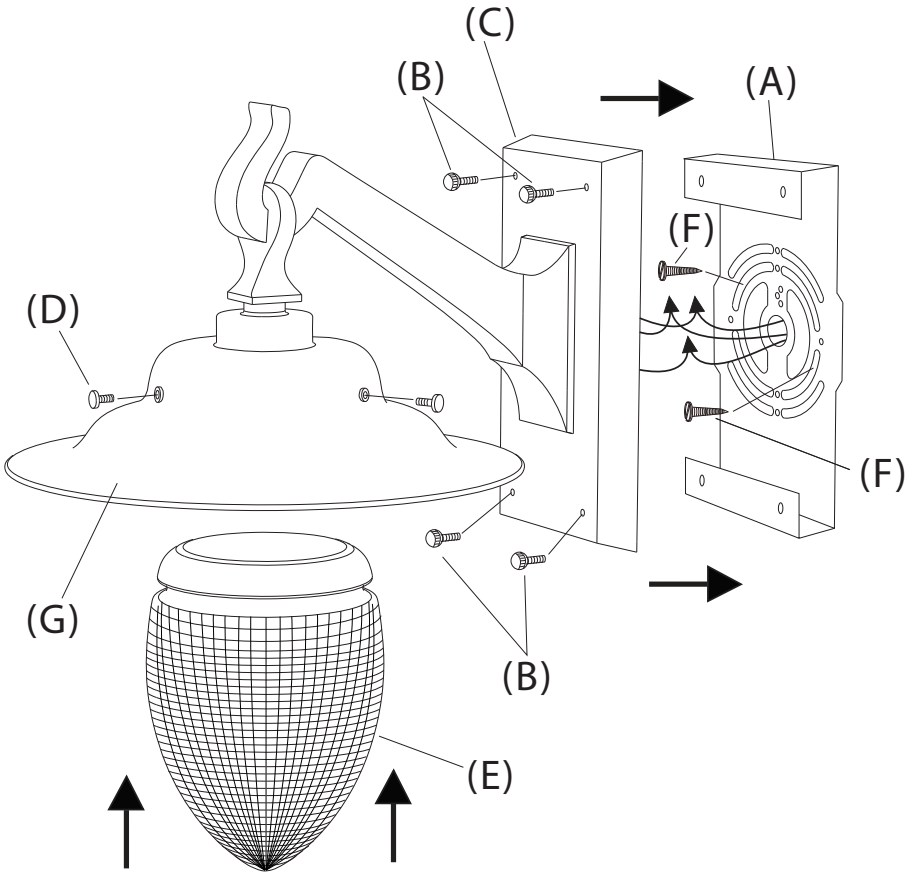

Assembly Instructions

1. Remove all parts carefully from the box.
2. Remove mounting plate (A) from the base of the fixture (C) by removing the base screws (B).
3. Insert the wires from the outlet box through the center hole of the mounting plate (A).
4. Affix the mounting plate (A) to the wall with mounting plate screws (F) provided.
5. Connect the grounding wire (green and yellow striped) from the fixture to the grounding wire in the outlet box. Connect the black wire of the fixture to the black wire (or smooth side of the wire) in outlet box (not shown here). Connect the other wire of the fixture to the white wire (or rough side of the wire) in outlet box.
6. Attach fixture (C) to mounting plate (A) using screws (B) to secure to mounting plate (A).
7. Insert recommended 60 watt Type A bulb into socket.
8. Carefully position glass (E) into canopy (G) and secure glass (E) with screws (D) provided.