

RESTORATION HARDWARE

Our lighting assortment is crafted from high quality materials such as cast brass and solid crystal. Each lamp is clad in one of our signature finish options and the surfaces sealed to eliminate the need for polishing.

PARTS ENCLOSED:

- | | |
|--------------------------|---------------------------|
| (A) Enclosed screw (2) □ | (a) Wire connector (2) |
| (B) Canopy (1) | (b) Mounting plate(1) |
| (C) Coupling(1) | (c) Dimple(2) |
| (D) Stem(3) | (d) Outlet box screw(2) |
| (E) Stem(1) | (e) Green ground screw(1) |
| (F) Coupling(1) | (f) Ground wire(1) |
| (G) Mounting screw (2) □ | |
| (H) Socket cup (1) □ | |
| (I) Glass shade (1) | |

IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to (3) 60-watt maximum Type A bulbs (the bulbs are not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug fixture and allow it to cool prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.


TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Turn OFF power to the junction box where the fixture will be installed.
3. Thread the stem (E) onto the coupling (F). Choose the suitable number of stems (D) and install the stems (D) into the stem (E), then thread the stems (D) onto the coupling (C).
4. Insert the wire through the center hole of the mounting plate (b).
5. Attach the ground wire (f) from the fixture to the ground junction box wire from the outlet box (usually green or bare wire) with a plastic wire connector (not supplied) and wrap the connection with electrical tape. Screw the green ground screw (e) onto the mounting plate (b) near the dimples (c), and wrap the fixture's bare ground wire around the ground screw. Then tighten the screw.
6. Connect the hot wire to the hot junction box wire (usually black) with a plastic wire connector (a) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction wire (usually white) with a plastic wire connector (a) and wrap the connection with electrical tape.
7. Attach the mounting plate (b) to the outlet box using the outlet box screws (d). Tighten with a screwdriver.
8. Attach the canopy (B) to the mounting plate (b) using the enclosed screws (A).
9. Put the glass shades (I) into the socket caps (H) and tighten the mounting screws (G).
10. Insert the recommended 60-watt Type A bulbs (not included) into the threaded sockets.
11. Restore power to the junction box and test lamp fixture.
12. Assembly is complete.

CARE INSTRUCTIONS:

Wipe all surfaces with a soft dry cloth. Clean glass with a mild soap. Do not use abrasive harsh cleansers or abrasives

Vintage Pendant

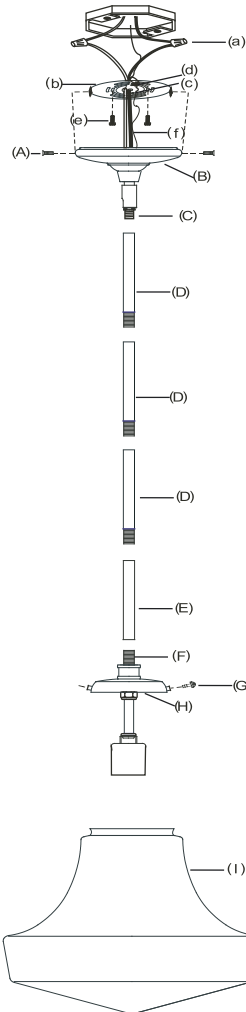

Direct Wire Installation