


## MONTAUK HANDWOVEN RATTAN TEARDROP PENDANT 20"

### PARTS ENCLOSED

(A)	Mounting Plate	(1)
(B)	Threaded Tube	(1)
(C)	Mounting Screws	(2)
(D)	Earthing Screw	(1)
(E)	Connectors	(3)
(F)	Canopy + Metal Wire Nut	(1)
(G)	Metal Wire	(1)
(H)	Bulb	(1)

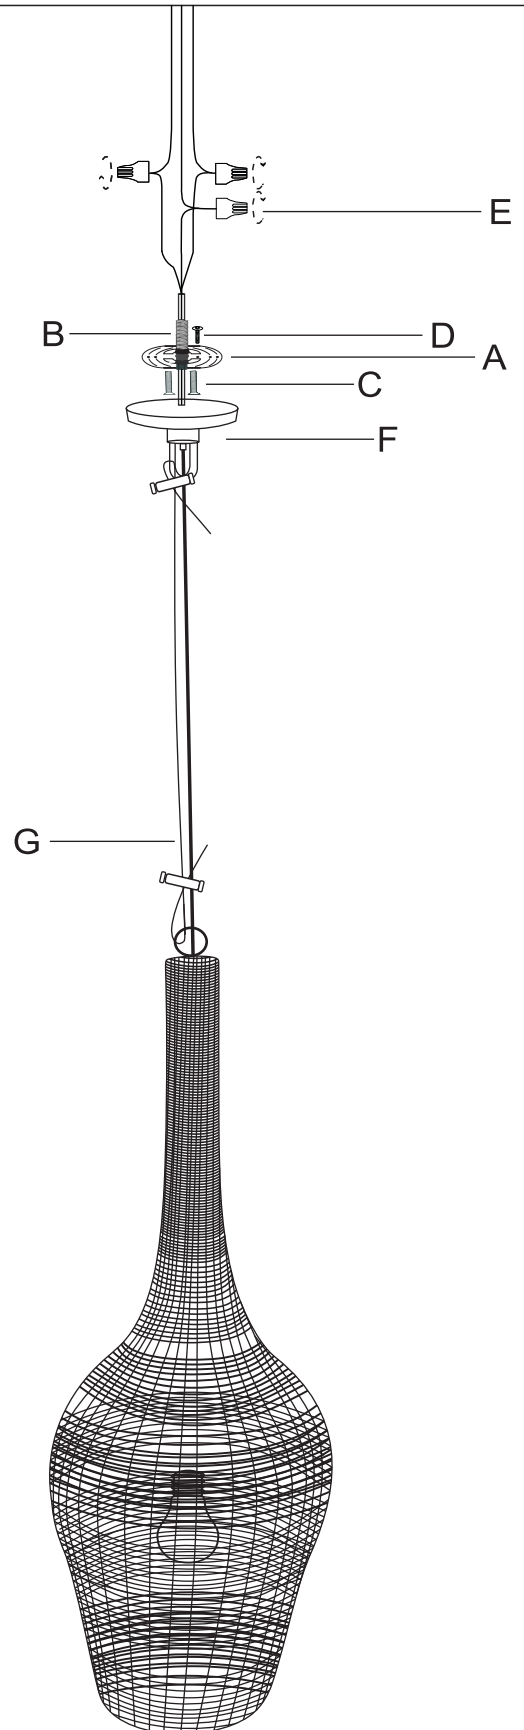



## MONTAUK HANDWOVEN RATTAN TEARDROP PENDANT 20"

### IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

#### WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

### ASSEMBLY & INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Turn off power to the junction box where the fixture will be installed.
3. Insert threaded tube (B) halfway into mounting plate (A) and attach mounting plate (A) to ceiling outlet box using mounting screws.
4. Pull wire from ceiling outlet box, and attach ground wire (usually green or bare wire) from ceiling box to ground wire on fixture with a plastic wire connector. Wrap this connection with electrical tape.
5. Attach hot wire from ceiling box (usually black or smooth) with hot wire on fixture with a plastic wire connector, and wrap this connection with electrical tape.
6. Attach neutral wire from ceiling box (usually white or ribbed) with neutral wire on fixture with a plastic wire connector, and wrap this connection with electrical tape.
7. Slide canopy (F) up and hold flush against ceiling. Screw the metal wire nut (F) onto the threaded tube (B) to hang the fixture.
8. Insert Type A bulb (H).
9. Restore power to the junction box and test Fixture.
10. Installation is complete.

### CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.