

RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

PARTS ENCLOSED:

- (A) MOUNTING PLATE
- (B) MOUNTING PLATE SCREW (X2)
- (C) WIRE NUTS
- (D) BACKPLATE SCREW (X4)
- (E) BACKPLATE
- (F) LANTERN CANOPY
- (G) INSIDE CAP LOCATION
- (H) EXTERIOR SHADE
- (I) EXTERIOR SHADE FRAME
- (J) EXTERIOR SHADE SCREW (X4)
- (K) INTERIOR SHADE SCREW (X3)
- (L) INTERIOR SHADE

IMPORTANT SAFETY INSTRUCTIONS:

*These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

*DIRECT WIRE FIXTURES: WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to (1) 60W MAX. B10 candelabra base bulb.


To avoid risk of fire, do not exceed the recommended wattage.

WARNINGS:

Turn off power (unplug from the wall outlet) before replacing the bulb(s), making sure the bulb(s) had sufficient time to cool down.

DO NOT subject the lamp to any shock while lit as shattering of bulb may result.

QUENTIN II PENDANT SCONCE

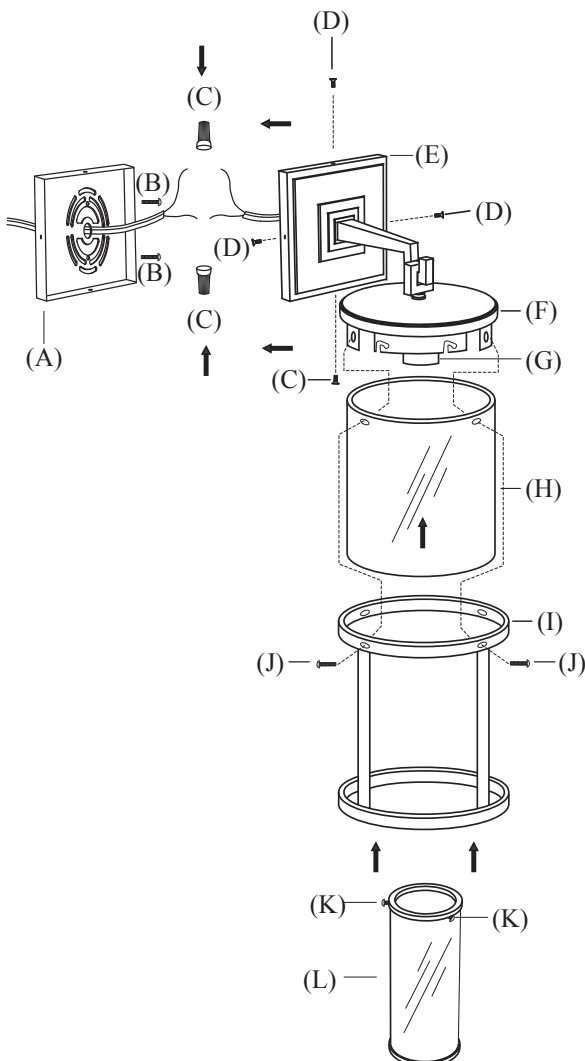

DIRECT WIRE ASSEMBLY INSTRUCTIONS

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/ CIRCUIT BREAKER.
2. Remove mounting plate (A) from backplate (E) by removing backplate screws (D). Guide wiring from outlet box through center hole in mounting plate (A).
3. Affix mounting plate (A) to the wall using mounting plate screws (B) provided.
4. Lift fixture to mounting plate (A) and make proper electrical connection.
5. Connect the copper wire from fixture to ground (green) wire. Connect white or rough side of wire from fixture to white wire from outlet box using wire nuts (C). Connect black or smooth side of wire from fixture to black wire from outlet box using wire nuts (C).
6. Align holes in backplate (E) with holes in mounting plate (A). Slide backplate (E) over mounting plate (A). Thread backplate screws (D) into backplate (E) to secure fixture to mounting plate (A).
7. Install one (1) 40W MAX. B10 candelabra base bulb into socket.
8. Align exterior shade frame (I) and exterior shade (H) so shade sits inside frame.
9. Lift both pieces to lantern canopy (F). Align holes in exterior shade frame (I) and holes in exterior shade (H) with holes in tabs on lantern canopy (F). Thread exterior shade screws (J) into holes until shade is securely attached.
10. Align interior shade screws (K) with channels in inside cap (G). Turn interior shade (L) so interior shade screws (K) rest securely in channels of inside cap (G), holding the interior shade (L) in place.

CARE INSTRUCTIONS:

To clean, use a soft cloth only. DO NOT use any chemical or abrasive cleaners.