

RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

PARTS ENCLOSED:

- | | |
|------------------------|--------------------|
| (A) WIRE NUT (X2) | (J) EXTERIOR SHADE |
| (B) MOUNTING PLATE | HOOK (X4) |
| (C) MOUNTING PLATE | (K) EXTERIOR SHADE |
| SCREW (X2) | SCREW (X4) |
| (D) CANOPY | (L) EXTERIOR SHADE |
| (E) CANOPY SCREW (X2) | (M) INTERIOR SHADE |
| (F) SQUARE LOOP (X4) | SHADE SCREW (X3) |
| (G) EXTENSION ARM (X4) | (N) INTERIOR SHADE |
| (H) LANTERN CANOPY | (O) SOCKET ARM |
| (I) SHADE GLASS (X4) | |

IMPORTANT SAFETY INSTRUCTIONS:

*These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

*DIRECT WIRE FIXTURES: WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to (3) 40W MAX. B10 Candelabra base bulbs. To avoid risk of fire, do not exceed the recommended wattage.

WARNINGS:

Turn off power (unplug from the wall outlet) before replacing the bulb(s), making sure the bulb(s) had sufficient time to cool down.

DO NOT subject the lamp to any shock while lit as shattering of bulb may result.

TO ASSEMBLE:

***TOOLS REQUIRED: CHAIN BREAK

FLUSH MOUNT ASSEMBLY


1. SHUT OFF ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/ CIRCUIT BREAKER
2. Remove all parts from carton. Do not throw away any parts.
3. Remove canopy screws (E) from canopy (D). Remove mounting plate (B) from canopy (D).
4. Guide wires from "J BOX" through center hole in mounting plate (B). Affix mounting plate (B) to "J BOX" using mounting screws (C) provided. Guide wiring through center hole in canopy (D).
5. Pulling up on wire firmly, thread socket arm (O) into opening in bottom of lantern canopy (H).
6. Make proper electrical connection. Attach ground fixture wire (GREEN) to either the ground screw on mounting plate (B) or to the ground wire in the wall outlet box (usually GREEN or COPPER in color). If attaching to ground wire in outlet box, fasten together with a plastic wire nut (A) and tightly wrap with electrical tape. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
7. Connect the neutral (WHITE or RIBBED BLACK) fixture wire to the neutral (usually WHITE) wire from the outlet box. Fasten wires together with a plastic wire nut (A) and tightly wrap connector with electrical tape.
8. Connect the hot (BLACK or SMOOTH BLACK) fixture wire to the hot (BLACK) wire from the outlet box. Fasten wires together with a plastic wire nut (A) and tightly wrap connector with electrical tape.
9. Align screw holes in canopy (D) with holes in mounting plate (B). Holding canopy over mounting plate (B), thread canopy screw (E) into canopy (D) and mounting plate (B) to secure fixture to "J BOX."
10. Carefully slide shade glass (I) down into slots in exterior shade frame (L).
11. Hook extension arm (G) onto exterior shade hook (J). Guide hook end of extension arm (G) into square loop (F). Repeat step for each extension arm (I).
12. Install (3) type B 40 watt maximum B10 Candelabra base bulbs into sockets.
13. Align holes in exterior shade frame (L) with holes in tabs on lantern canopy (J) and insert exterior shade frame screws (K) to secure shade to fixture.
14. Insert interior shade (N) into exterior shade. Align interior shade screws (M) with channels in lantern canopy (H). Turn until interior shade screws (M) are resting securely in channels of lantern canopy (H).

CARE INSTRUCTIONS:

To clean, use a soft cloth only. DO NOT use any chemical or abrasive cleaners.

QUENTIN II LARGE OUTDOOR PENDANT

FLUSH MOUNT ASSEMBLY

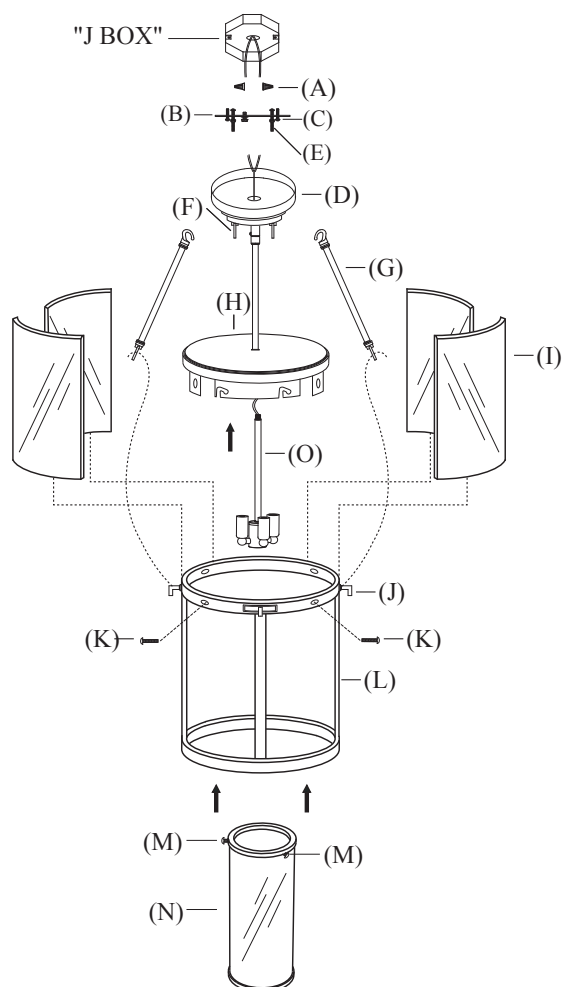

RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

PARTS ENCLOSED:

- | | |
|------------------------|----------------------|
| (A) WIRE NUT (X2) | (I) SHADE GLASS (X4) |
| (B) MOUNTING PLATE | (J) EXTERIOR SHADE |
| (C) MOUNTING PLATE | HOOK (X4) |
| SCREW (X2) | (K) EXTERIOR SHADE |
| (D) CANOPY | SCREW (X4) |
| (E) CANOPY SCREW (X2) | (L) EXTERIOR SHADE |
| (F) SQUARE LOOP (X4) | (M) INTERIOR SHADE |
| (G) EXTENSION ARM (X4) | SHADE SCREW (X3) |
| (H) LANTERN CANOPY | (N) INTERIOR SHADE |

IMPORTANT SAFETY INSTRUCTIONS:

*These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

*DIRECT WIRE FIXTURES: WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to (1) 60W MAX. Type A bulb.

To avoid risk of fire, do not exceed the recommended wattage.

WARNINGS:

Turn off power (unplug from the wall outlet) before replacing the bulb(s), making sure the bulb(s) had sufficient time to cool down.

DO NOT subject the lamp to any shock while lit as shattering of bulb may result.

TO ASSEMBLE:

***TOOLS REQUIRED: CHAIN BREAK

FLUSH MOUNT ASSEMBLY

1. SHUT OFF ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/ CIRCUIT BREAKER
2. Remove all parts from carton. Do not throw away any parts.
3. Remove canopy screws (E) from canopy (D). Remove mounting plate (B) from canopy (D).
4. Guide wires from "J BOX" through center hole in mounting plate (B). Affix mounting plate (B) to "J BOX" using mounting screws (C) provided. Guide wiring through center hole in canopy (D).
5. Make proper electrical connection. Attach ground fixture wire (GREEN) to either the ground screw on mounting plate (B) or to the ground wire in the wall outlet box (usually GREEN or COPPER in color). If attaching to ground wire in outlet box, fasten together with a plastic wire nut (A) and tightly wrap with electrical tape. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
6. Connect the neutral (WHITE or RIBBED BLACK) fixture wire to the neutral (usually WHITE) wire from the outlet box. Fasten wires together with a plastic wire nut (A) and tightly wrap connector with electrical tape.
7. Connect the hot (BLACK or SMOOTH BLACK) fixture wire to the hot (BLACK) wire from the outlet box. Fasten wires together with a plastic wire nut (A) and tightly wrap connector with electrical tape.
8. Align screw holes in canopy (D) with holes in mounting plate (B). Holding canopy over mounting plate (B), thread canopy screw (E) into canopy (D) and mounting plate (B) to secure fixture to "J BOX."
9. Hook extension arm (G) onto exterior shade hook (J). Guide hook end of extension arm (G) into square loop (F). Repeat step for each extension arm (I).
10. Install (1) type A 60 watt maximum bulb into socket.
11. Carefully slide shade glass (I) down into slots in exterior shade frame (L).
12. Align holes in exterior shade frame (L) with holes in tabs on lantern canopy (J) and insert exterior shade frame screws (K) to secure shade to fixture.
13. Insert interior shade (N) into exterior shade. Align interior shade screws (M) with channels in lantern canopy (H). Turn until interior shade screws (M) are resting securely in channels of lantern canopy (H).

CARE INSTRUCTIONS:

To clean, use a soft cloth only. DO NOT use any chemical or abrasive cleaners.

QUENTIN II OUTDOOR PENDANT

FLUSH MOUNT ASSEMBLY

