

RESTORATION HARDWARE


Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

PARTS ENCLOSED: HARDWARE INCLUDED:

- | | |
|------------------------|--------------------------------|
| (A) Mounting plate (1) | (a) Green ground screw (1) |
| (B) Canopy (1) | (b) Plastic wire connector (2) |
| (C) Ring (1) | (c) Tube screw (5) |
| (D) Hang-straight (1) | (d) Mounting screw (2) |
| (E) Tube (4) | (e) Screw driver (1) |
| (F) Base (1) | (f) Bulb (4) |
| (G) Extension pipe (3) | |

LUGARNO 4-ARM CHANDELIER

Direct Wire Installation

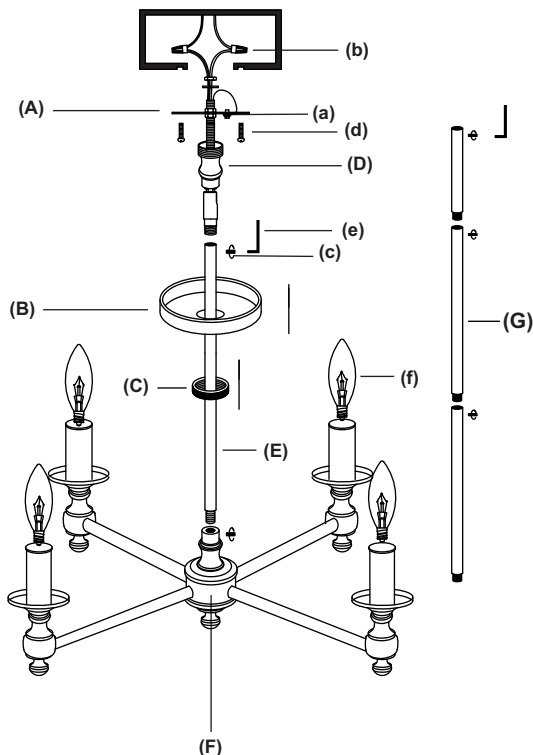

IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.
This fixture has been rated for up to (4) 60-watt maximum TYPE B candelabra bulbs.
To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until your lamp is fully assembled.
To reduce the risk of fire, electrical shock, or personal injury, always turn off lamp and allow it to cool prior to replacing light bulb.

Do not touch bulb when fixture is turned on or look directly at lit bulb.
Keep flammable materials away from lit bulb.

TO ASSEMBLE:

- Carefully remove all parts from the box and remove all plastic covering.
- Turn OFF power to the junction box where the lamp will be installed.
- Put the lamp Base(F) on to the tube(E) and turn clockwise to tighten. Insert tube(E) into hang-straight(D) and turn clockwise until the Tube(E) screws into the Hang-straight(D). Finally, tighten tube screws (c) with screw driver(e).
- Once the pipes are threaded together, push the fixture electrical wire back through the revised suspension pipe and connect as noted in these instructions. Recheck all revised mechanical and electrical connections to make sure they are secure.
- If needed, disassemble the existing suspension pipes by unscrewing the sections apart. Pull the wire back through the appropriate suspended pipe section(s) (D&E) that will be need to be extended. Locate the extension pipes(G) and check the actual suspension length conditions to the incremental fixture suspension length per number of extensions desired.
- Attach the ground wire from the fixture to the ground junction box wire from the outlet box (usually green or bare wire). Screw the green ground screw (a) into the mounting plate (A).
- Connect the hot wire to the hot junction box wire (usually black or smooth) with a plastic wire connector (b) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (usually white or ribbed) with a plastic wire connector (b) and wrap the connection with electrical tape.
- Attach the mounting plate (A) to the outlet box using the mounting screws (d). Tighten with a screwdriver.
- Attach the Canopy (B) to the mounting plate (A) using the ring (C) and tighten it.
- Insert four 60-watt Type B bulbs (included) into threaded sockets.
- Place four clip shades (not included) onto the bulbs.
- Restore power to the junction box and test lamp fixture.
- Installation is complete.

CARE INSTRUCTIONS:

Do not use polishes or cleaners on your lamp.
JUST WIPE CLEAN WITH SOFT CLOTH.