

RESTORATION HARDWARE

HUTTON LARGE/SMALL WALL MOUNTED MEDICINE CABINET ASSEMBLY

BEFORE YOU BEGIN:


Do not open cabinet door more than 90 degrees when unit is laying flat on any surface. The weight of the cabinet door opened beyond 90 degrees in a flat position may cause damage around the hinge areas. Cabinet door may be fully opened only when the cabinet is in an upright standing or installed position.

CLEANING INSTRUCTIONS

To maintain and protect the luster of all products, clean with a soft, damp cloth only.

PARTS LIST

A. Mounting hangman bracket	x 1
B. 12" Wall bracket	x 1
C. Metal anchor	x 2
D. Bubble level for wall bracket	x 1
E. Anchor screws	x 2
F. Wood screws	x 1

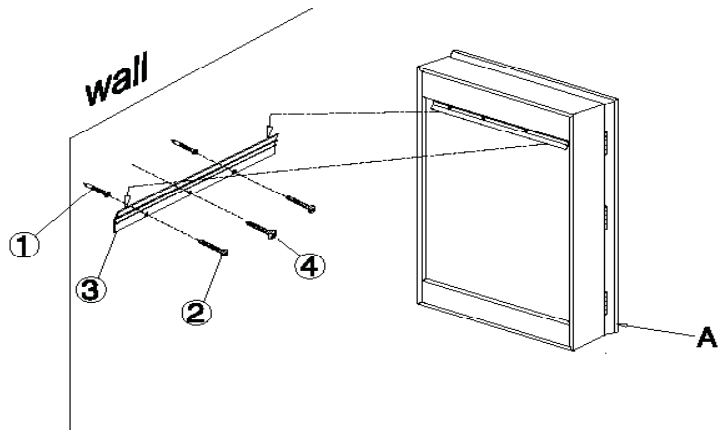

INSTRUCTIONS

1. Position cabinet in desired location on the wall and mark.
2. Position mounting bracket (Parts A) in desired location until the bubble (Parts D) is level and mark location of each drive wood screws (Part F) on the wood stud and wall anchor (Parts C) installation.
3. Remove mounting bracket (Parts A) from the wall.
4. Position drive wood screw (Parts F) on wood stud.
5. Drill 1/4" pilot holes in wall. Position drive wall anchor (Parts C) over hole and gently tap anchor (Parts C) into wall until cap prongs are embedded in wall and cap is snug against surface. Turn screw (Parts E) firmly to prevent anchor from rotating. Tighten screw until resistance is felt; this will fully expand the anchor (Parts C). Turn screw (Parts E) counterclockwise to remove screw. Anchor will remain embedded in wall.
6. Place mounting bracket (Parts A) over anchors and insert then tighten all screws (Parts E).
7. Hang cabinet on wall bracket (Parts B).

