
### **BRISTOL LARGE / SMALL INSET MEDICINE CABINET ASSEMBLY INSTRUCTIONS**

### **TOOLS AND MATERIALS REQUIRED:**

- I. Screwdriver
- 2. Carpenter's level

#### **PARTS LIST**

A. Cabinet

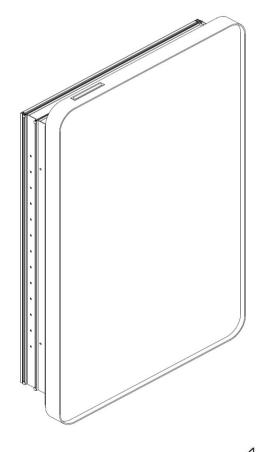

B. Wood Screw x4

JIIIII)

MADE IN TAIWAN Page I


### **BRISTOL LARGE / SMALL INSET MEDICINE CABINET ASSEMBLY INSTRUCTIONS**

#### **ASSEMBLY INSTRUCTIONS:**

1. Measure a space for the cabinet body (A). Blocking is recommended to ensure adequate support. Inset (recessed) box measurements will vary according to cabinet model (See Below).

Large size dimensions	Small size dimensions
22 7/8" wide	17 3/8" wide
32 3/4" high	23 7/8" high
3 3/4" deep	3 3/4" deep


2. Install the cabinet with recessed box set back within the wall cavity.

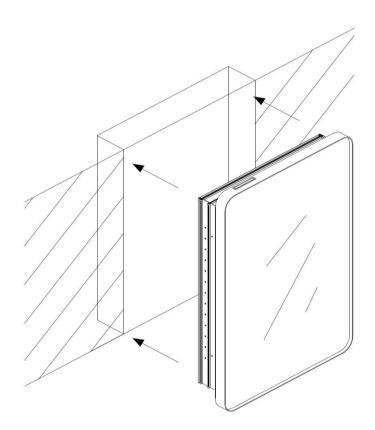

MADE IN TAIWAN Page 2

### **BRISTOL LARGE / SMALL INSET MEDICINE CABINET ASSEMBLY INSTRUCTIONS**


3. Mount cabinet by fastening the enclosed wood screws (B) to the inner side panels. Enclosed screws are to be used for installations into wood frames. For different wall material types, additional screws/anchors may need to be purchased.

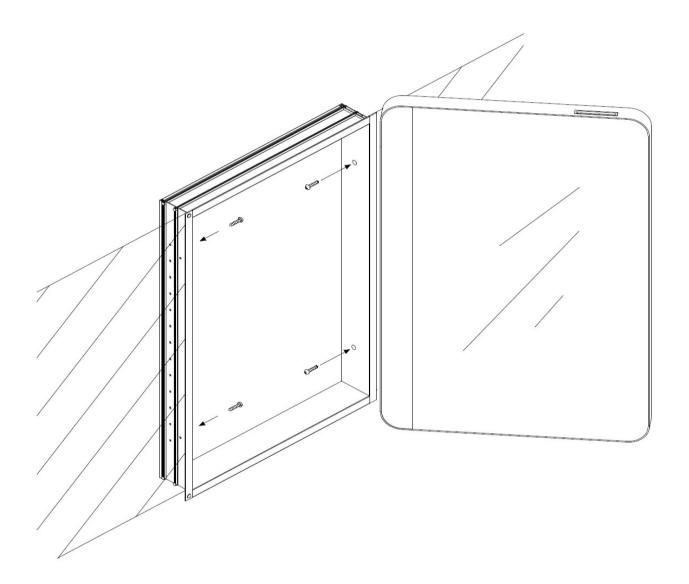

MADE IN TAIWAN Page 3

#### **BRISTOL LARGE / SMALL INSET MEDICINE CABINET ASSEMBLY INSTRUCTIONS**

- 4. After the door panel is installed, if door is not aligned with the cabinet and falling lower, open the door and adjust lower door hinge. Next loosen the outer hinge screw, slightly pull out the door panel, and tighten screw again. Close door and check alignment. Continue to adjust until alignment is correct. (See illustration below)
- 5. If door is not aligned with the cabinet and raised higher, open the door and adjust the top door hinge. Next loosen the outer hinge screw, slightly pull out the door panel, and tighten screw again. Close door and check alignment. Continue to adjust until alignment is correct. (See illustration below)
- 6. Door panel tightness can be adjusted with the inner screw on the door hinge.

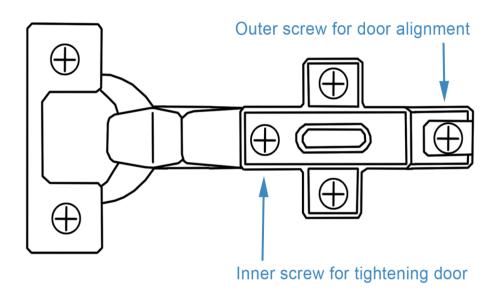

#### **CLEANING INSTRUCTIONS**

To maintain and protect the luster of all products, clean with a soft, damp cloth only.

MADE IN TAIWAN Page 4