

### I. Storage

- I. Keep marble top in it's crate until installation.
- 2. Store crate vertically in a place safe from being hit or knocked over
- 3. Do not stack anything on top of the crate.

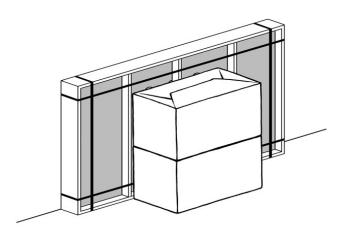

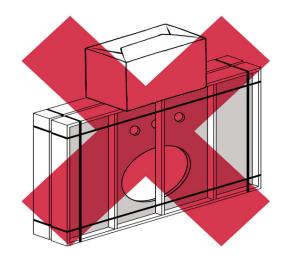


### 2. Opening crate

- I. Before unpacking make sure you have installation requirements present:
  - I.A professional two man crew
  - 2. Sink base installed according to instructions with plumb wall and floor.
  - 3. Ensure the marble top is the correct one for the base.
  - 4. Tools and materials required:
    - I. Flat, non-abrasive work surface, such as a blanket or smooth cardboard
    - 2. Carpenter's level
    - 3. Phillips head screwdriver
    - 4. Sealant
- 2. Carefully, without allowing any free fall,


rotate the crate from vertical to flat.

This is the only time the crate should be horizontal.

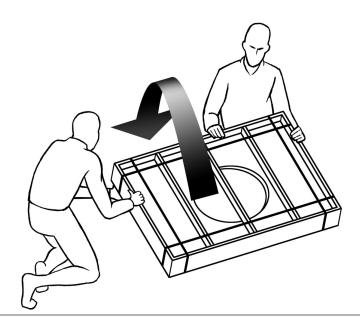

### STORAGE & INSTALLATION OF YOUR MARBLE TOP

- 3. Remove metal bands
- 4. Unscrew the slats or lid and remove.

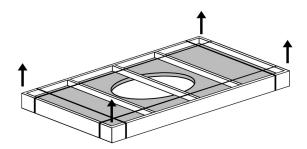


3. Examination of marble top

- I. Examine the marble top for cracks or defects.
- 2. If defects are detected, please call 877-777-7059, do not install.
- 3. To clean the marble top, wipe with a soft cloth.

### 4. Installation of marble top

I.Always use a two man crew, a single person crew is much more likley to break or chip the marble top.

Double tops might require a 3 man crew.

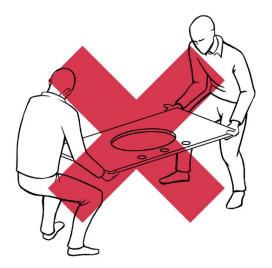



### STORAGE & INSTALLATION OF YOUR MARBLE TOP



Caution! Installation between two walls requires special care.

2. Specific Instructions for installation between two walls

- I. Set top on it's edge at back of counter.
- 2. Lower the front of the marble top to the sink base, making sure both ends come down at the same rate.
- 3. Do not shimmie, twist or turn the top as you lower it. risk of breakage!



If defects are detected please call 877-777-7059 - do not install.


### WEATHERED OAK EXTRA WIDE WASHSTAND SINK ASSEMBLY INSTRUCTIONS

### Before You Begin:

Professional installation by two-person crew is required for this fixture. Install water supply and drain piping according to local plumbing and building codes. Insure that wall and floor are square and plumb at site of installation.

### Tools and Materials Required:

- I. Flat, nonabrasive work surface such as a blanket or smooth cardboard
- 2. Sealant
- 3. Phillips head screwdriver

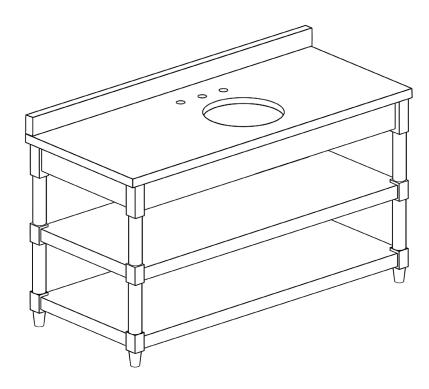


ASSEMBLED SINK


### WEATHERED OAK EXTRA WIDE WASHSTAND SINK ASSEMBLY INSTRUCTIONS

Parts List

A. Stone top (sold separately)




B. Backsplash (sold separately)



C. Lavatory basin




D. Washstand base

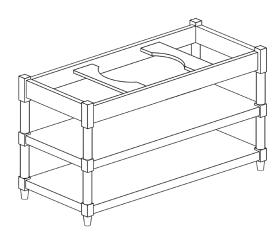


### WEATHERED OAK EXTRA WIDE WASHSTAND SINK ASSEMBLY INSTRUCTIONS

### **Assembly Instructions:**

1. Place the basins (C) on the support bars of washstand (D). (See Illustration). Overflow of Lavatory basin should be on the same side as pre-drilled faucet holes on the stone top.

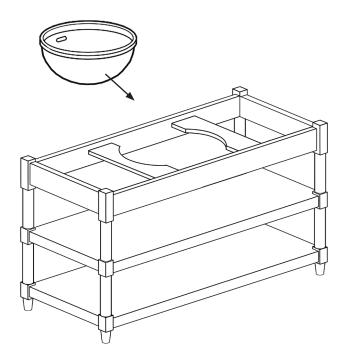

2. Note removable insert in middle shelf. If p-trap installation requires, the insert can be removed so shelf does not interfere with waste line. Remove four screws to take out the insert.

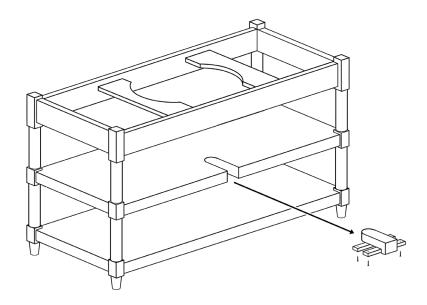

### WEATHERED OAK EXTRA WIDE WASHSTAND SINK ASSEMBLY INSTRUCTIONS

- 3. Apply a continuous bead of sealant to the top surface of rim of lavatory basin where it will contact underside of stone top.
- 4. Using two people, lift stone top (A), carefully place it in position on top of washstand base.
- 5. Apply silicone sealant to bottom and back of backsplash (B) and attach to wall and marble top.

### **Cleaning and Maintenance Instructions:**


Avoid abrasive and harsh chemical cleaners.

To maintain and protect luster of vanity sink components, Restoration Hardware Bathroom Cleaning Products are recommended.

Restoration Hardware natural stone tops have a honed finish and hand-polished edges. They are sealed twice before shipment with inert silicone sealant. For cleaning and maintenance, Restoration Hardware Stone Care Products are recommended. To maintain your natural stone top, reseal it once a year.

DRAWINGS REPRESENT ORIGINAL DESIGN SPECIFICATIONS. ACTUAL PRODUCT DIMENSIONS MY VARY SLIGHTLY. ALL DIMENSIONS ARE REPRESENTED IN INCHES. PROFESSIONAL INSTALLATION REQUIRED Unless otherwise noted, all design and content, images, artwork, graphics, photography, text, and the like are copyrights, trademarks, trade dress, and/or intellectual property that are owned, controlled, or licensed by Restoration Hardware.

## WEATHERED OAK WIDE VANITY

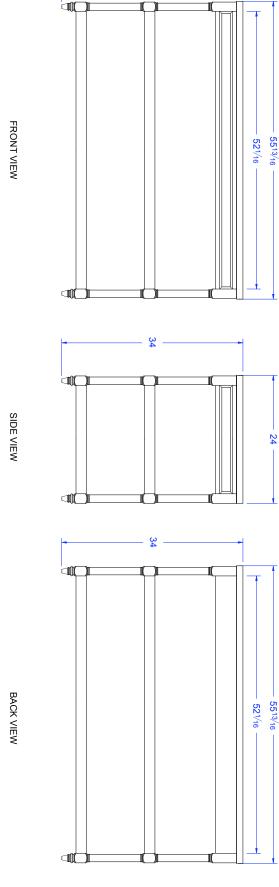


20

H

107/8


113/8

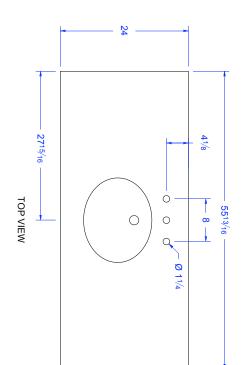

DRAWINGS REPRESENT ORIGINAL DESIGN SPECIFICATIONS. ACTUAL PRODUCT DIMENSIONS MY VARY SLIGHTLY. ALL DIMENSIONS ARE REPRESENTED IN INCHES. PROFESSIONAL INSTALLATION REQUIRED Unless otherwise noted, all design and content, images, artwork, graphics, photography, text, and the like are copyrights, trademarks, trade dress,and/or intellectual property that are owned, controlled, or licensed by Restoration Hardware.

# HUTTON SINGLE WIDE SINK TOP

Hutton Single Wide Note: Stone is 1 1/4" thick.

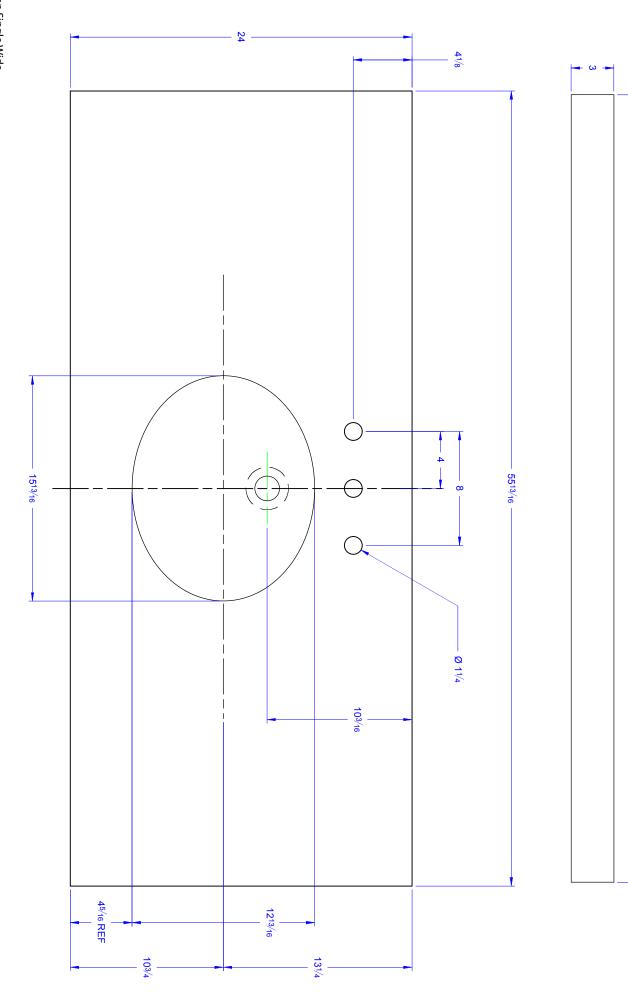

- 555/16

DRAWINGS REPRESENT ORIGINAL DESIGN SPECIFICATIONS. ACTUAL PRODUCT DIMENSIONS MY VARY SLIGHTLY. ALL DIMENSIONS ARE REPRESENTED IN INCHES. PROFESSIONAL INSTALLATION REQUIRED Unless otherwise noted, all design and content, images, artwork, graphics, photography, text, and the like are copyrights, trademarks, trade dress,and/or intellectual property that are owned, controlled, or licensed by Restoration Hardware.

### **HUTTON 17" BASIN**

