


RH

PESARO SCONCE

PARTS ENCLOSED

- (A) Plastic Anchors (4)
- (B) Mounting Plate (1)
- (C) Wood Screws (4)
- (D) Mounting Screws (2)
- (E) Fixture Base (1)
- (F) Set Screws (2)
- (G) Allen Wrench (1)
- (H) Shade (1)
- (I) Ball Nuts (2)
- (J) Bulbs (2)
- (K) Shade Holder (1)

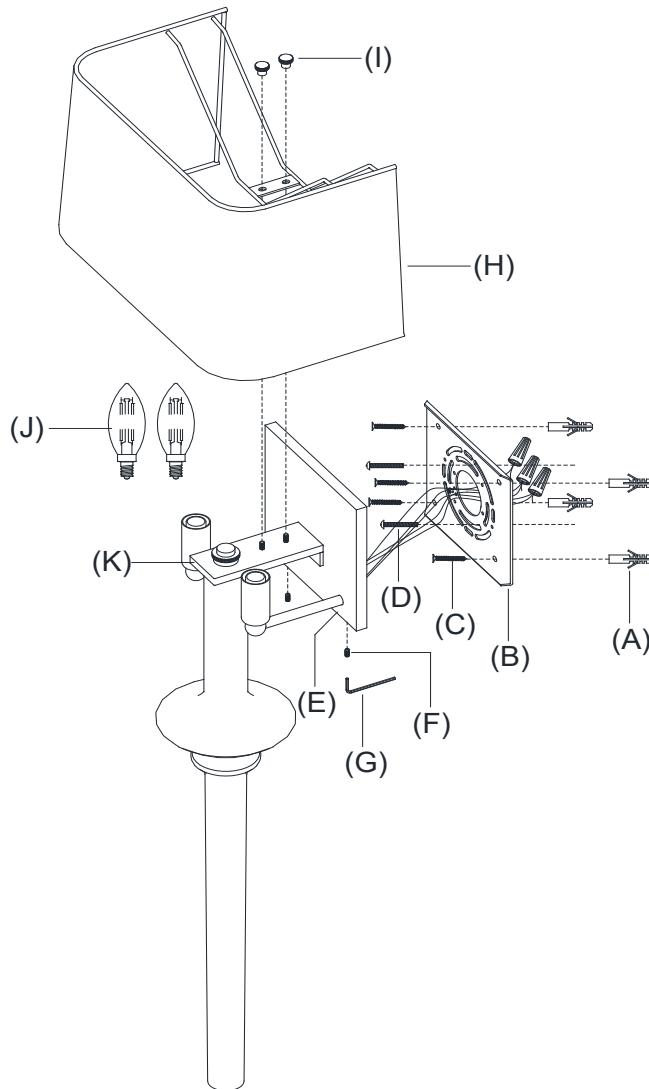

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to two (2) 40-Watt maximum Type B lightbulb (not included) or two (2) 9-Watt compact fluorescent lightbulbs (not included) or two (2) 5.5-Watt SBLED lightbulbs (J) (included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulbs. Do not touch or look directly at the bulbs when fixture is illuminated. Keep flammable materials away from lit bulbs.



WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

ASSEMBLY & INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box
2. Remove Mounting Plate (B) from Lamp Base (E) by unscrewing Set Screws (F) with Allen Wrench (G).
3. Place Mounting Plate (B) on the wall outlet and mark center point locations for the four mounting holes with a pencil. Then remove Mounting Plate (B).

ASSEMBLY & INSTALLATION CONT.

4. Drill small holes into each point location on the wall. Each hole should be large enough to accommodate Plastic Anchors (A). Push Plastic Anchors (A) into the holes on the wall.
5. Attach Mounting Plate (B) to the wall outlet by aligning the holes. Then secure by inserting Wall Screws (C) into the Plastic Anchors (A) and Mounting Screws (D) to the wall outlet box.
6. Attach the fixture ground wire (green) to the ground wire from the outlet box (usually green) with a metal wire connector and wrap the connection with electrical tape.
7. Connect the hot wire (black) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape.
8. Connect the neutral wire (white) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
9. Attach Lamp Base (E) to the affixed Mounting Plate (B) and secure with Set Screws (F). Tighten with Allen Wrench (G).
10. Remove Ball Nuts (I) from Shade Holder (K). Attach Shade (H) onto Shade Holder (K), letting the screws on Shade Holder (K) pass through the bracket of Shade (H). Then secure with Ball Nuts (I).
11. Insert Bulbs (J) into the sockets.
12. Restore power to outlet box and check operation of fixture.
13. Assembly is complete.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.