

RESTORATION HARDWARE

OVAL PEDESTAL SINK ASSEMBLY INSTRUCTIONS

Before You Begin:


Professional installation by two-person crew is required for this fixture. Install water supply and drain piping according to local plumbing and building codes. Ensure that wall and floor are square and plumb at site of installation. Drywall anchors are provided for mounting this washstand. If site requires mounting on a surface other than drywall, suitable fastening devices must be provided. Optional metal foot pins included in hardware packet may be recessed into the finished floor for increased stability of the fixture.

Cleaning Instructions:

To maintain and protect the luster of entire product, clean with a soft, damp cloth only.

Tools and Materials Required:

1. Flat, nonabrasive work surface such as a blanket or smooth cardboard
2. Carpenter's level
3. Drill
4. Pencil
5. Hammer
6. Wrench

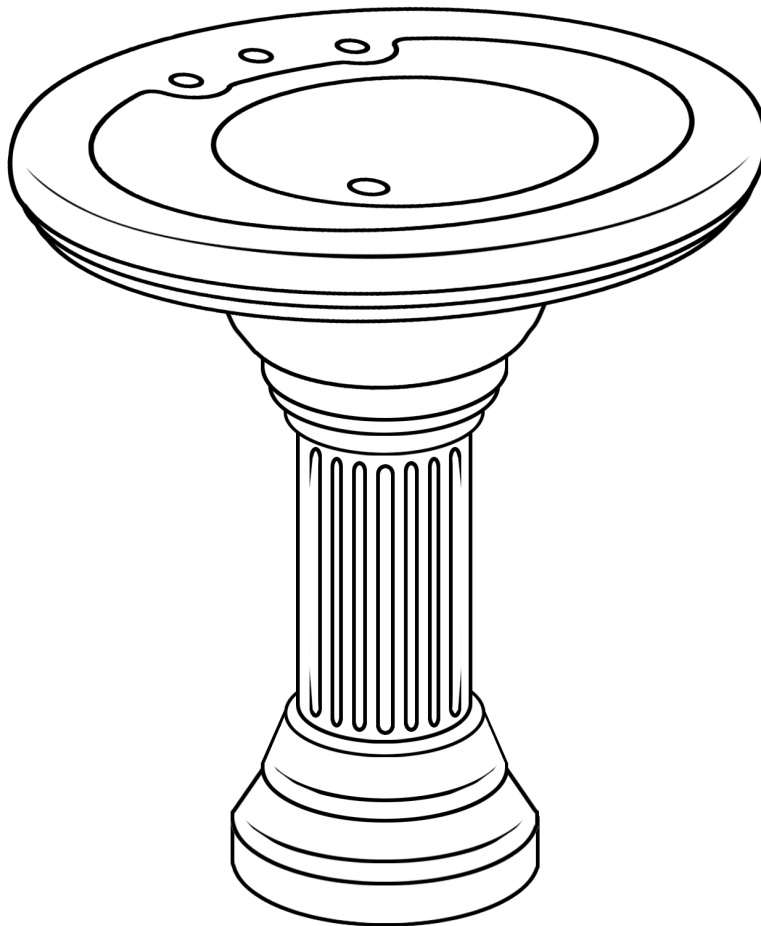


ASSEMBLED SINK

RESTORATION HARDWARE


OVAL PEDESTAL SINK ASSEMBLY INSTRUCTIONS

Parts List


A. Lavatory basin

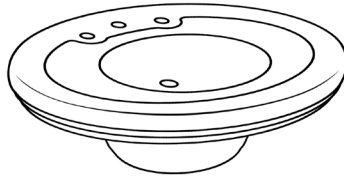

B. Lavatory pedestal

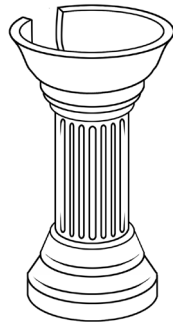


C. Nut (x2)



D. Plastic Washer (x2)




E. Bolt (x2)




F. Plastic anchor (x2)



G. Plastic cushion (x2)




H. Screw (x2)



I. Metal Cap (x2)




J. Metal Bracket (2)

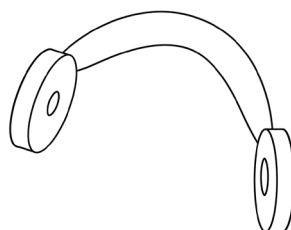


RESTORATION HARDWARE

OVAL PEDESTAL SINK ASSEMBLY INSTRUCTIONS

1. Remove the lavatory basin (A) from pedestal base (B) and carefully place on a flat, non-abrasive work surface.
2. Thread Bolt (E) through Metal Bracket (J) and hole in Pedestal base (B), slide plastic washer (D) over the Bolt (B) and screw metal nut (C) on Bolt (E). **Do not overtighten the nut, overtightening can crack the porcelain.**
3. Repeat Metal Bracket attachment for the other side.

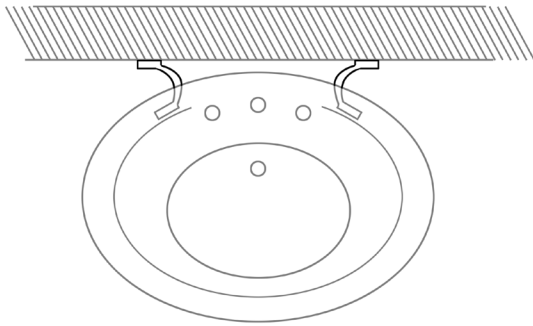


TOP VIEW BRACKET ALIGNMENT

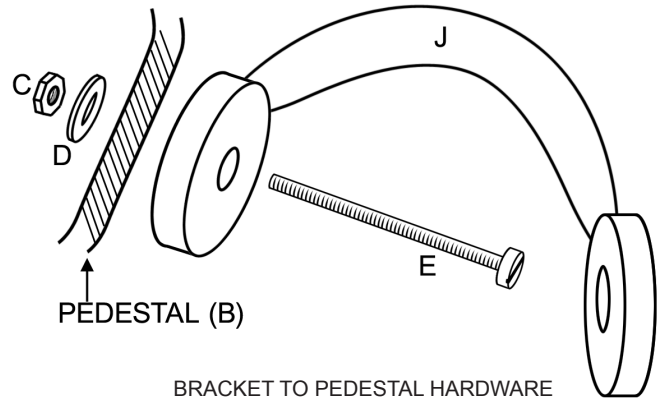

BRACKET TO PEDESTAL HARDWARE

4. Place Sink (A) on Pedestal base (B).
5. Place sink into desired position so that the metal brackets (J) lay flat against the wall. Mark locations for screws (H) and anchors (F) on the wall in pencil.
6. Remove sink and pedestal and drill 12mm holes where marked. Insert Anchors (F).
7. Place sink and pedestal back in desired position against wall, insert plastic cushion (G), insert screw (H) and tighten. Place metal cap (I) over screw and plastic cushion and push in place.
8. Repeat step 7 for the other side.

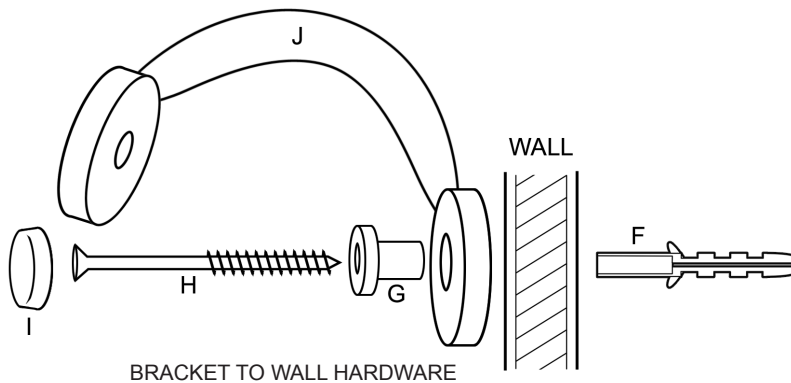


BRACKET TO WALL HARDWARE

Cleaning and Maintenance Instructions:


Avoid abrasive and harsh chemical cleaners.

To maintain and protect luster of console sink components, Restoration Hardware Bathroom Cleaning Products are recommended.


RESTORATION HARDWARE
OVAL PEDESTAL SINK ASSEMBLY INSTRUCTIONS

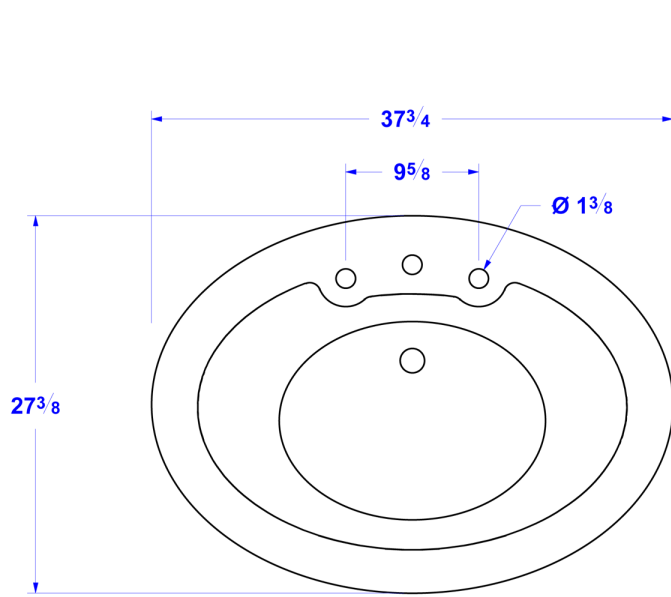


TOP VIEW

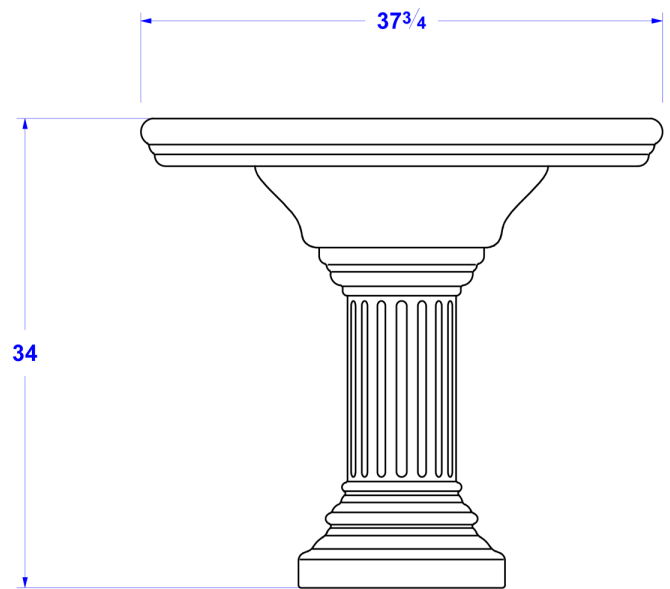

FRONT VIEW

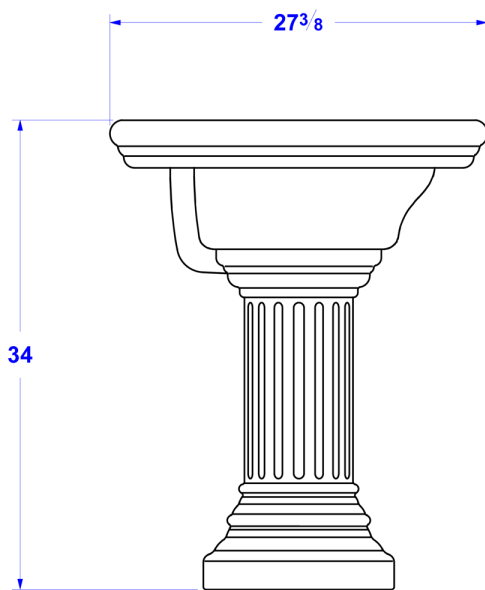

SIDE VIEW

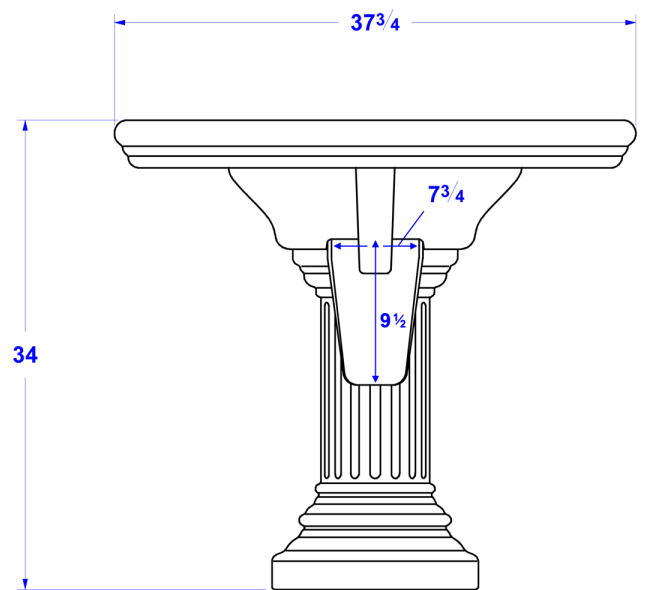

BACK VIEW