

RESTORATION HARDWARE

WALL HANGERS FOR PALLADIAN TRELLIS

NOTE: BEFORE ASSEMBLY, MAKE SURE YOU HAVE ALL PARTS LISTED BELOW.

Parts:

A. Wall Hanger (4)


Hardware:

B. Lag Screws (4) - not shown

C. Lag Shields (4) - not shown

Tools Required for Assembly

Allen wrench (included). Power drill with bits ($\frac{1}{2}$ " masonry bit for installing on stone or cement, or $\frac{1}{4}$ " standard bit for installing into wood). You will also need a level, pliers, crescent or socket wrench, and hammer.

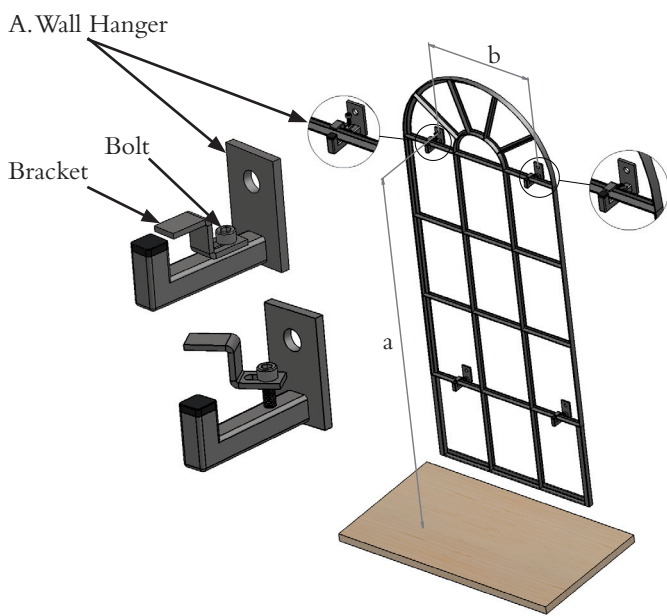

Parts:

A. Wall Hanger (4)

Hardware:

B. Lag Screws (4) - not shown

C. Lag Shields (4) - not shown

Wall Mounting your Palladian Trellis

If you want your trellis to be mounted on the wall use Wall Hangers (A). Select a site for your trellis. Use a level to make a straight horizontal line at the height (a) above ground of minimum

57" - for Small Trellis

70" - for Large Trellis

70" - for XL Trellis

This places the trellises 5" above ground.

Mark exactly where each mounting bracket should be installed. The distance between the two holes (b) should be

17" - for Small Trellis

17" - for Large Trellis

34" - for XL Trellis

To mount on wood, vinyl or aluminum siding:

A. Pre-drill a pilot hole for each Wall Hanger using a $\frac{1}{4}$ " standard bit. No Lag Shields (C) needed.

B. Install each Wall Hanger using the Lag Screws (B).

C. Loosen the bolts on the Wall Hanger Brackets using Allen wrench and hang the trellis into the hangers.

D. Mount the other two Wall Hangers on the second horizontal bar from bottom (17" or 34" apart) and mark where holes are to be drilled.

E. Take off the Trellis and install the bottom brackets same way as top hangers.

F. Loosen the bolts on all of the Wall Hangers and place the trellis onto the hangers.

G. Securely tighten the Hanger Brackets with Allen Wrench.

To mount on stucco, concrete, brick or stone

A. Mark exactly where each mounting hole should be drilled the same way as on wood wall mounting. Pre-drill pilot holes for each Wall Hanger using $\frac{1}{2}$ " masonry bit.

B. Insert Lag Shields (C) into the predrilled holes and tap with a hammer so they are flush with the surface. Then install the Wall Hangers.

C. Place the Trellis onto the hangers and securely tighten the Hanger Brackets with Allen Wrench.

Caring for your Trellis and Wall Hangers

This powder-coated steel garden structure is resistant to the effects of sun, rain, frost and snow. It may be left outdoors year-around. To clean, simply wipe with a damp cloth. If the powder-coat finish should chip or scratch, it may be touched up with rust-proof enamel (not included).