

Caring for your Trellis and Stands

This powder-coated steel garden structure is resistant to the effects of sun, rain, frost and snow. It may be left outdoors year-around. To clean, simply wipe with a damp cloth. If the powder-coat finish should chip or scratch, it may be touched up with rust-proof enamel (not included).

RESTORATION HARDWARE

FLEUR-DE-LYS TRELIS FEET AND WALL HANGERS FOR DECK MOUNTING AGAINST WALL OR FENCE

NOTE: BEFORE ASSEMBLY, MAKE SURE YOU HAVE ALL PARTS LISTED BELOW.

Parts:

- A. Feet - (2)
- B. Wall Hanger - (2)


Hardware:

- C. Lag Screws - (4) not shown
- D. Lag Shields - (4) not shown

Tools Required for Assembly

Power drill with bits ($\frac{1}{2}$ " for installing on stone or cement, or $\frac{1}{4}$ " standard bit for installing into wood). You will also need, pliers, crescent or socket wrench and hammer.

Against wall mounting your Fleur-de-Lys Trellis

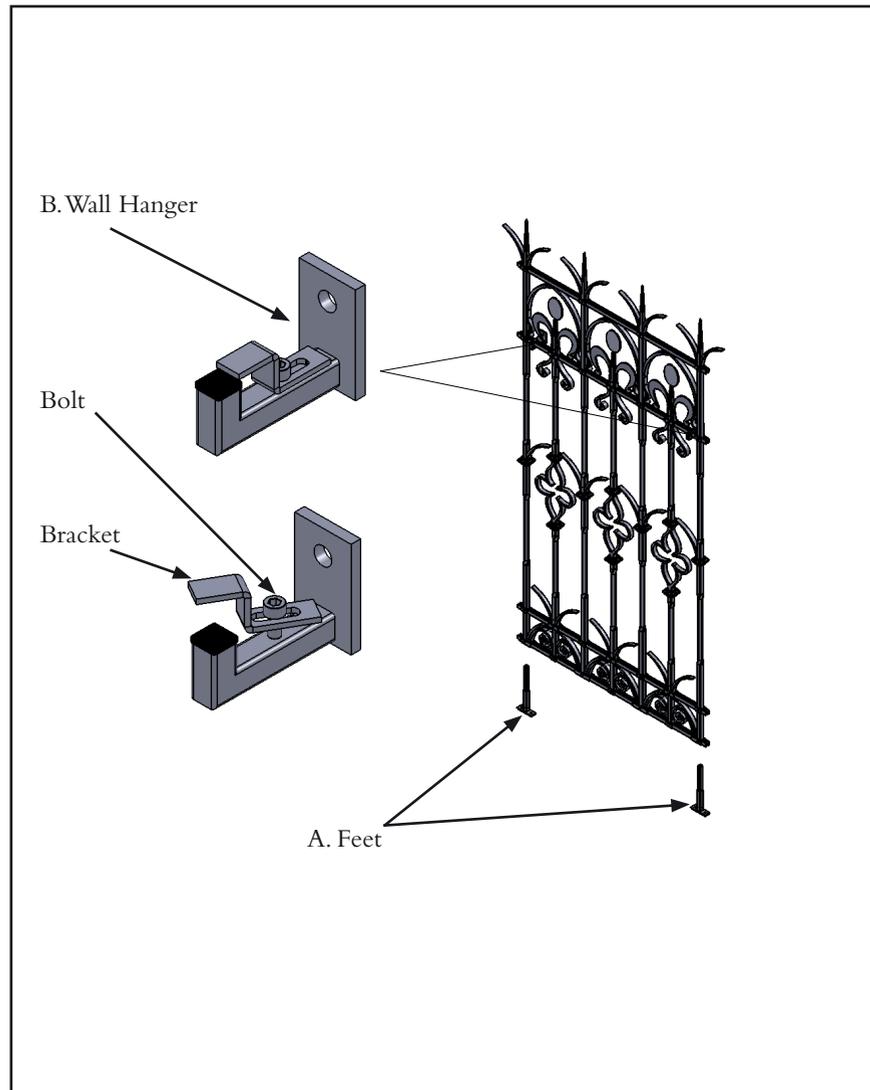

Parts:

- A. Feet - (2)
- B. Wall Hanger - (2)

Hardware:

- C. Lag Screws - (4) not shown
- D. Lag Shields - (4) not shown

If you want your trellis to be mounted against a wall or fence use Feet (A) and Wall Hangers (B).

Select a site for your trellis. Slide the Feet (A) into the vertical square tubes of the trellis.

Loosen the bolts on the Wall Hanger Brackets using Allen wrench and screw them to the top horizontal bar of the trellis at a distance of around 1 ½" from the inner edge of the vertical post.

Place the trellis against the wall at a distance of 2 ¼" and mark exactly where each mounting hole should be drilled.

You need 4 holes on the ground for the Feet (A) and 2 holes on the wall for Wall Hangers (B).

To mount Feet (A) on wood:

- A. Mark exactly where each mounting hole should be drilled. Pre-drill holes for each foot using a ¼" bit.
- B. Install each foot using the Lag Screws (B).

To mount Feet (A) on concrete, brick or stone:

- A. Mark exactly where each mounting hole should be drilled. Pre-drill pilot holes for each foot using ½" masonry bit.
- B. Insert Lag Shields (D) into the predrilled holes and tap with a hammer so they are flush with the ground surface. Then install the feet by inserting the Lag Screws (C) through the feet and into the shields.

To mount Wall Hangers (B) on wood, vinyl or aluminum siding:

- A. Pre-drill a pilot hole for each Wall Hanger using a ¼" standard bit. No Lag Shields (D) needed.
- B. Install each Wall Hanger previously mounted to the trellis using the Lag Screws (C).
- C. Secure by screwing with Allen wrench the hanger brackets tightly.

To mount Wall Hangers (B) on stucco, concrete, brick or stone:

- A. Mark exactly where each mounting hole should be drilled the same way as on wood wall mounting. Pre-drill pilot holes for each Wall Hanger using ½" masonry bit.
- B. Insert Lag Shields (C) into the predrilled holes and tap with a hammer so they are flush with the ground surface.
- C. Then install the Wall Hangers with Lag Screws (C).

Securely tighten all screws.