

# RH


## ROYAL NAVAL PORTHOLE MIRRORED MEDICINE CABINET


---

### PARTS ENCLOSED:

- (A) Cabinet
- (B) Toggle Screw
- (C) Toggle Anchor

[A]Cabinet

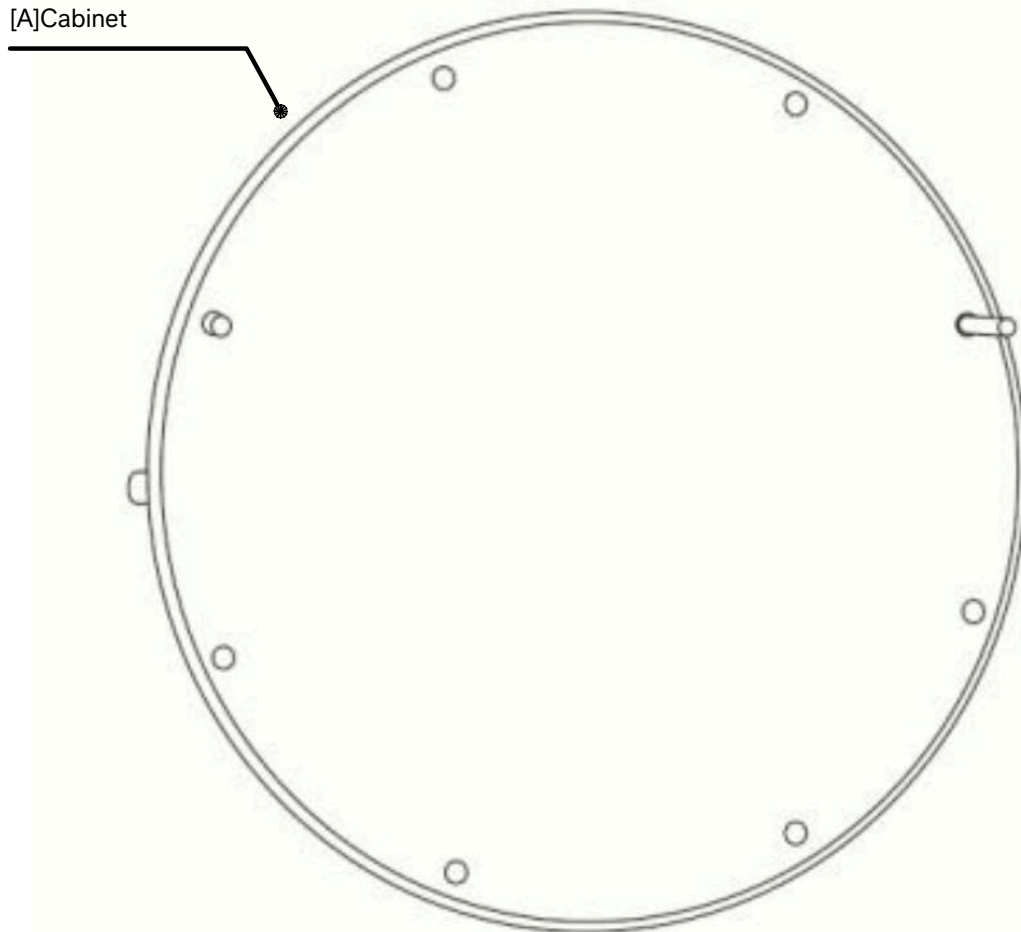

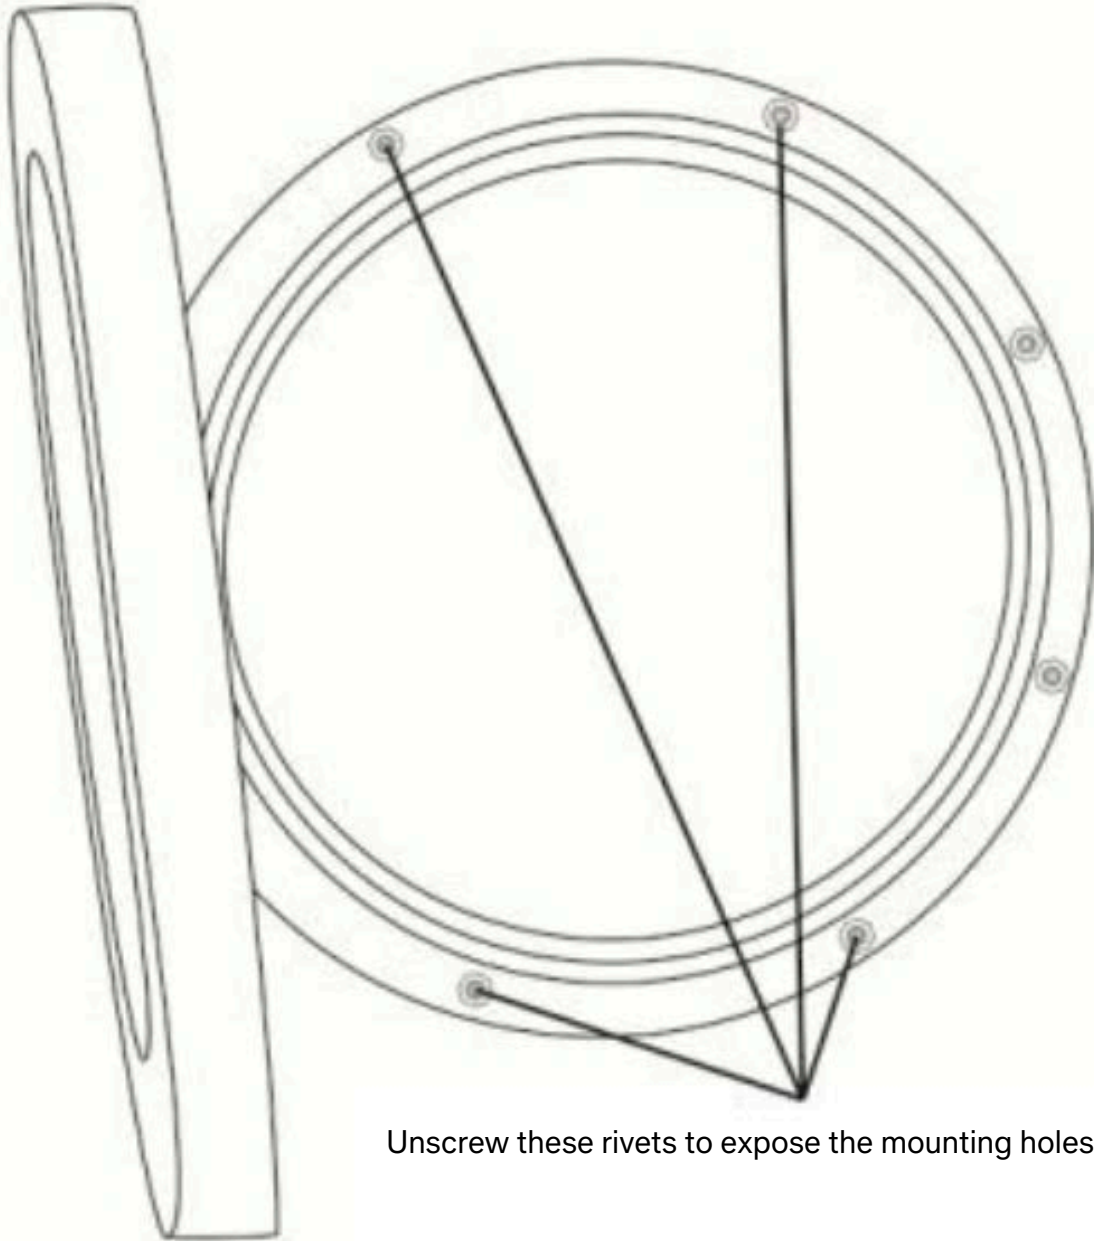

Unscrew these rivets to expose the mounting holes.

### IMPORTANT PLEASE READ

#### SAFETY INSTRUCTIONS:

1. The hardware supplied is intended for dry wall/stud mounting only.
2. If walls are concrete, brick, or plaster please consult your local hardware store for assistance.
3. For safety and ease of mounting, installation is recommended using two people.

#### CARE INSTRUCTIONS:

1. Dust with a clean, soft damp cloth and wipe dry immediately.
2. Avoid the use of chemicals and harsh cleaning agents.

#### ASSEMBLY & INSTALLATION:

1. Determine the desired placement on the wall for the cabinet (mounts with hinge at the very left hand). Within the desired mounting location, locate the studs and mark using a pencil
2. Determine which wall mount bracket hole or holes will be centered on a stud. The hole positions that are centered over the studs will be used to mount.
3. Remove the 2 center rivets on the top and bottom of Cabinet to expose mounting holes. As shown in diagram.
4. Holding the cabinet in your desired location, using a pencil, mark the mounting screw locations on the wall.
5. Remove the cabinet and using a #2 drill bit, drill holes in the four mounting hole locations. Insert the toggle anchor slightly into holes.
6. Carefully position cabinet over anchors on the wall, ensuring that the four mounting holes are aligned. Insert the Toggle Screws through the mounting holes and thread into the anchors.
7. Tighten the Toggle Screws (1) with #2 Phillips screwdriver until the cabinet is flush with the wall.
8. Installation is complete.