

WALL-MOUNT MEDICINE CABINET INSTRUCTIONS

PARTS INCLUDED

- A [1] MEDICINE CABINET
- B [2] PLASTIC ANCHOR
- C [2] SCREW

MOUNTING INSTRUCTIONS

1. Position Medicine Cabinet(A) in desired space on the wall and mark the location of Plastic Anchor(B) installation, within the keyhole with a pencil.
2. Press tip of Plastic Anchor(B) into the drywall using a screwdriver, or a screw gun. Drive Plastic Anchor(B) clockwise into drywall until it stops flush with the wall. (For dry wall. Appropriate anchors need to be purchased separately for mounting into other materials.) (Figure 1).
3. Insert Screw(C) and tighten, leaving 1/4" of threading exposed (Figure 2 & 3).
4. Place cabinet on wall, hanging on the exposed screw hooks(Figure 4).



Figure 1

Figure 2

Figure 3

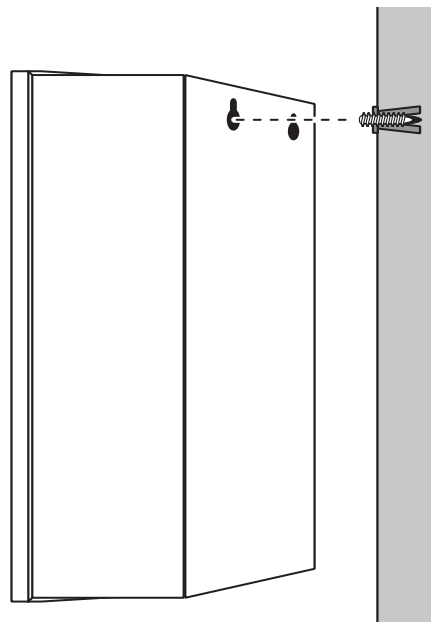


Figure 4

CARE INSTRUCTIONS

To maintain and protect the luster of all products, clean with a soft damp cloth only.