
1940S ARCHITECT'S BOOM SCONCE

RH

PARTS ENCLOSED

- (A) Base Plate (1)
- (B) Phillips Screws (2)
- (C) Swivel Base (1)
- (D) Wood Bolts (4)
- (E) Cord Cover (1)
- (F) Mounting Bracket (1)
- (G) Wood Screws (2)
- (H) Lamp Arm (1)
- (J) Balancing Ball (1)
- (K) Set Screw (1)
- (L) Lamp Arm (1)
- (M) Shade Holder (1)
- (N) Lamp Shade (1)
- (O) Washer (1)
- (P) Threaded Ring (1)
- (Q) LED Bulb (1)

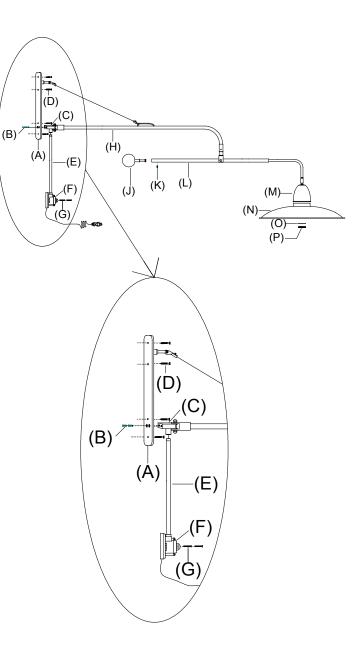

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to one (1) 100-Watt maximum Type A light bulb OR one (1) 9-Watt SBLED light bulb (Q) (included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.

WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.

\bigwedge warning: strangulation hazard

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

ASSEMBLY & INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

- Carefully remove all parts from the box and remove all plastic covering. DO NOT discard the outer carton.
- Locate wall stud at the location where you wish to mount the fixture.
- 3. Cut off the carton flap where the wall plate template is printed.
- Using the template as a guide, drill four pilot holes using a 1/8" drill bit, making sure they are perfectly vertical to each other.
- 5. Remove Phillips Screws (B) from Swivel Base (C).
- Attach Swivel Base (C) to Base Plate (A). Tighten by replacing Phillips Screws (B).
- Place Base Plate (A) with whole fixture on the wall over the previously drilled holes, and insert Wood Bolts (D) to secure Base Plate (A) on the wall.
- Insert Cord Cover (E) with Mounting Bracket (F) to bottom of Swivel Base (C), inserting Wood Screws (G) to secure Mounting Bracket (F) on the wall.
- Attach balancing Ball (J) into Lamp Arm (L) and secure with Set Screw (K).
- 10. Remove Threaded Ring (P) and Washer (O) from the socket.
- 11. Attach Lamp Shade (N) into Shade Holder (M) and secure by replacing Washer (O) and Threaded Ring (P).
- 12. Insert LED Bulb (Q) into socket.
- 13. Restore power to outlet box and check operation of fixture.
- 14. Assembly is complete.

ASSEMBLY & INSTALLATION

- 1. Adjust the lamp to desired position and hold the lamp steadily.
- Loosen Set Screw (K) and adjust the position of the Balancing Ball (J) to achieve perfect balance.
- 3. Tighten the Set Screw (K).

CARE INSTRUCTIONS

Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth.