
# RESTORATION HARDWARE

## EDISON PERFORATED METAL SHADE FLUSHMOUNT

#### PARTS ENCLOSED

- (A) Mounting plate (1)
- (B) Mounting screws (2)
- (C) Fixture base (1)
- (D) Cap nuts (2)
- (E) Thumbscrews (3)
- (F) Light bulb (1)
- (G) Metal shade (1)

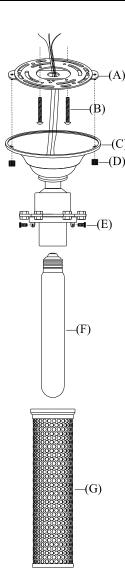

#### **IMPORTANT SAFETY INSTRUCTIONS:**

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to four (1) 40-watt maximum Type T standard bulb (F) OR (1) 13W Compact Fluorescent bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

#### **WARNINGS:**

- All wires are connected.
- 2. When unpacking, be careful not to pull with wires as a bad connection may result.
- 3. Do not connect electricity until your fixture is fully assembled.
- To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug fixture and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.
- 6. Keep flammable materials away from lit bulb.
- 7. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

#### TO ASSEMBLE:

- 1. Carefully remove all parts from the box and remove all plastic covering.
- 2. Turn OFF power to the junction box where the chandelier will be installed.
- 3. Remove mounting plate (A) from fixture base (C) by unscrewing cap nuts (D).
- 4. Attach mounting plate (A) to mounting outlet box and secure with mounting screws (B) provided.
- 5. Attach the fixture ground wire and house ground wire (green) to ceiling outlet box with the green grounding screw. Connect fixtures to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
- Connect the neutral wire (white) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
- Connect the hot wire (black) to the hot outlet box wire (usually black) with a plastic
  wire connector and wrap the connection with electrical tape. DO NOT REVERSE
  THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE
  COMPROMISED.
- 8. Tuck these wire connections neatly into the ceiling outlet box.
- 9. Attach fixture base (C) to mounting plate (A), letting the rods of mounting plate (A) pass through the holes of fixture base (C), and tighten by re-place cap nuts (D). (See left illustration)
- 10. Insert bulb (included) into threaded socket.
- 11. Remove thumbscrews (E) from shade holder, attach metal shade (G) to shade holder and secure with thumbscrews (E).
- 12. Restore power to the junction box and test the pendant fixture.
- 13. Assembly is complete.

### **CARE INSTRUCTIONS:**

Wipe all surfaces with a soft dry cloth. Clean glass with a mild soap and water mixture. Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.