

RESTORATION HARDWARE

Our lighting assortment is crafted from high quality materials such as cast brass and solid crystal. Each lamp is clad in one of our signature finish options and the surfaces sealed to eliminate the need for polishing. A full-range dimmer switch housed in a cast socket is included on most styles.

PARTS ENCLOSED:

- (A) MOUNTING PLATE
- (B) MOUNTING PLATE SCREWS (X2)
- (C) BACKPLATE
- (D) BACKPLATE SCREWS (X3)
- (E) SOCKET CUP SCREWS (X9)
- (F) SOCKET CUP
- (G) GLASS SHADE (X3)

IMPORTANT SAFETY INSTRUCTIONS:


*These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

*DIRECT WIRE FIXTURES: WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

WARNINGS:

Turn off power (unplug from the wall outlet) before replacing the bulb(s), making sure the bulb(s) had sufficient time to cool down. DO NOT subject the lamp to any shock while lit as shattering of lamp may result.

ASBURY TRIPLE SCONCE

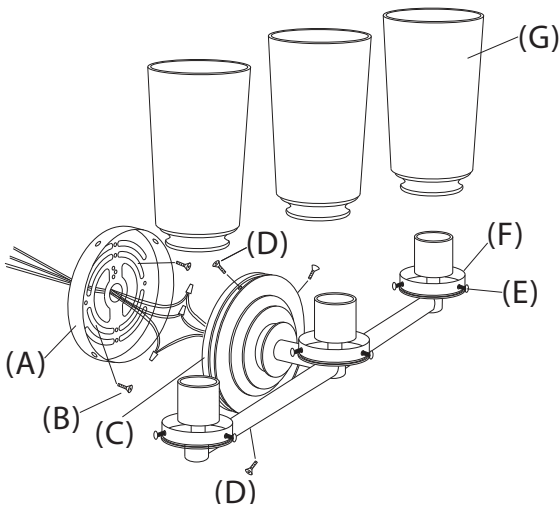

TO ASSEMBLE:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/ CIRCUIT BREAKER.
2. Remove backplate screws (D) from backplate (C). Remove mounting plate (A) from backplate (C).
3. Pull wiring from the outlet box and guide through the center hole of mounting plate (A). Affix mounting plate (A) to wall outlet box with screws (B) provided.
4. Make proper electrical connection. A licensed electrician is recommended.
5. Attach ground fixture wire (GREEN) to either the ground screw on mounting plate (A) or to the ground wire in the wall outlet box (usually GREEN or COPPER in color). If attaching to ground wire in outlet box, fasten together with a plastic wire connector and tightly wrap with electrical tape. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
6. Connect the neutral (WHITE or RIBBED BLACK) fixture wire to the neutral (usually WHITE) wire from the outlet box. Fasten wires together with a plastic wire connector and tightly wrap connector with electrical tape.
7. Connect the hot (BLACK or SMOOTH BLACK) fixture wire to the hot (BLACK) wire from the outlet box. Fasten wires together with a plastic wire connector and tightly wrap connector with electrical tape.
8. Align holes in backplate (C) with holes in mounting plate (A). Slide backplate (C) over mounting plate (A). Secure with screws (D) provided.
9. Loosen screws (E) on socket cup (F). Insert neck of shade (G) into socket cup (F). Tighten screws (E) to secure. Repeat step for each shade.
10. Install three (3) Type A, maximum 60 watts bulbs into the sockets.

CARE INSTRUCTIONS:

To clean, use a soft cloth only. DO NOT use any chemical or abrasive cleaners.