


LORRAINE ARCHITECTURAL RAILING SCNCE

PARTS ENCLOSED

- (A) Mounting Plate (1)
- (B) Mounting Screws (2)
- (C) Base Screws (2)
- (D) Fixture Base (1)
- (E) Metal Anchor (1)
- (F) Rod Part (1)
- (G) Set Screw (1)
- (H) Rod (1)
- (J) Threaded Socket (1)
- (K) Socket Ring (1)
- (L) Bulbs (2)

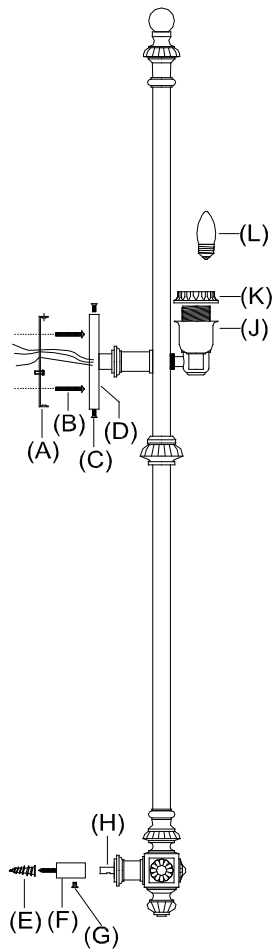

LORRAINE ARCHITECTURAL RAILING SCNCE

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to two (2) 25-Watt maximum Type B TORPEDO bulbs (included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.



WARNING: STRANGULATION HAZARD

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

ASSEMBLY & INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic covering.
2. Remove Mounting Plate (A) from Fixture Base (D) by removing Base Screws (C).
3. Affix Mounting Plate (A) to wall outlet box with Mounting Screws (B) provided.

ASSEMBLY & INSTALLATION CONT.

4. Place Fixture Base (D) onto the Mounting Plate (A). Make sure the whole fixture base is vertical; mark the screw location of Rod Part (F) on the wall. Remove Fixture Base (D).
5. Drill small holes on each point location on the wall. Each hole should be large enough to accommodate the Metal Anchor (E). Push Metal Anchor (E) into the holes on the wall.
6. Remove Rod Part (F) from Rod (H) by loosening Set Screw (G). Install Rod Part (F) into Metal Anchor (E).
7. Attach the fixture ground wire and house ground wire (usually green or bare wire) to mounting plate with the green grounding screw. Connect fixtures to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
8. Connect the neutral wire (WHITE) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
9. Repeat the procedure with the hot (BLACK) wire to hot (usually black) outlet wire. Always make sure that no wire strands are left outside of the connections. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS; OTHERWISE, SAFETY WILL BE COMPROMISED.**
10. Attach Fixture Base (D) to Mounting Plate (A) and tighten with Base Screws (C).
11. Insert "tongue" section of Rod (H) into Rod Part (F) and secure with Set Screw (G).
12. Remove Socket Ring (J) from top of Socket (I). Attach lamp shade (not included) to the threaded socket (I) and secure with Socket Ring (J).
13. Insert Bulbs (L) into sockets.
14. Restore power to outlet box and check operation of fixture.
15. Assembly is complete.

CARE INSTRUCTIONS

Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth.