


RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

PARTS ENCLOSED

- (A) Metal Anchor (2)
- (B) Fixture Base (1)
- (C) Mounting Screw (2)
- (D) Socket Housing (1)
- (E) Thumbscrews (3)
- (F) Glass Shade (1)

1950s FACTORY SCISSOR SCONCE

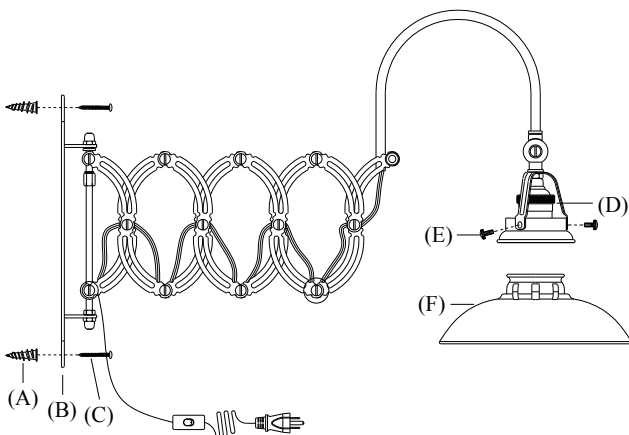

IMPORTANT SAFETY INSTRUCTIONS:

WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

This fixture has been rated for up to one (1) 40-watt maximum Type G light bulb. To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

1. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
2. Do not connect electricity until your lamp is fully assembled.
3. To reduce the risk of fire, electrical shock, or personal injury, always turn off lamp and allow it to cool prior to replacing light bulb.
4. Do not touch bulb when fixture is turned on or look directly at lit bulb.
5. Keep flammable materials away from lit bulb.
6. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

TO ASSEMBLE:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!
2. Carefully remove all parts from the box and remove all plastic covering.
3. Place fixture base (B) at desired location on wall. Using it as a template, mark center points for both mounting holes with a pencil. Remove fixture base (B).
4. Drill 1/16" holes on each point location on the wall. If you hit a wall stud, you will not need the enclosed wall anchors (A). Simply align the holes on fixture base (B) with the holes in the wall, and secure with mounting screws (C).
5. If you do not hit a wall stud, you will need to anchor the sconce for stability. Using a Phillips screwdriver, drive metal anchors (A) into the holes on the wall by turning clockwise until tight.
6. Attach fixture base (B) to the wall by aligning the holes with metal anchors (A) and secure by inserting mounting screws (C) into (A).
7. Loosen the thumbscrews (E) from socket housing (D).
8. Carefully place the glass shade (F) to the socket housing (D) and tighten the thumbscrews (E). **DO NOT OVER-TIGHTEN OTHERWISE THE SHADE WILL BREAK.**
9. Insert light bulb into socket.
10. Restore power to outlet box and check operation of fixture.
11. Assembly is complete.

CARE INSTRUCTIONS:

Wipe all surfaces with a soft dry cloth. Clean glass with a mild soap and water mixture. Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.