
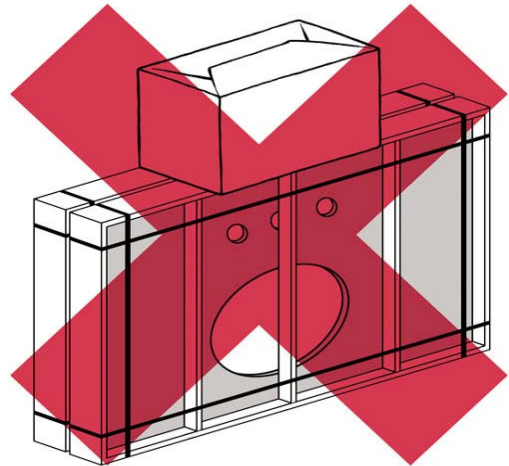


MONTEREY DECK MOUNT FLOATING DOUBLE EXTRA-WIDE VANITY ASSEMBLY INSTRUCTIONS

I. Storage


1. Keep marble top in its crate until installation.
2. Store crate vertically in a place safe from being hit or knocked over.
3. Do not stack anything on top of the crate.

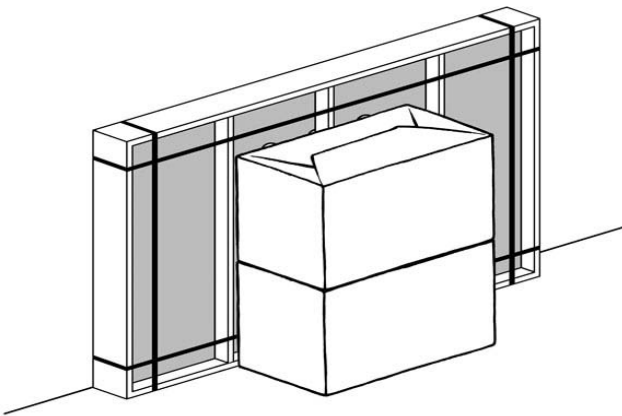

2. Opening crate

1. Before unpacking make sure you have installation requirements present:
 1. A professional two man crew
 2. Sink base installed according to instructions with plumb wall and floor
 3. Ensure the marble top is the correct one for the base.
4. Tools and materials required:
 1. Flat, non-abrasive work surface, such as a blanket or smooth cardboard
 2. Carpenter's level
 3. Phillips head screwdriver
 4. Sealant


2. Carefully, without allowing any free fall, rotate the crate from vertical to flat.
This is the only time the crate should be horizontal.

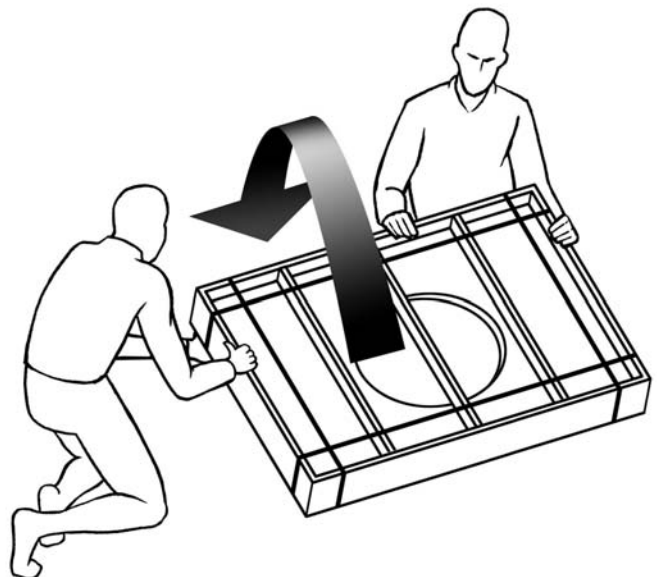

MONTEREY DECK MOUNT FLOATING DOUBLE EXTRA-WIDE VANITY ASSEMBLY INSTRUCTIONS

3. Remove metal bands.

4. Unscrew the slats or lid and remove.

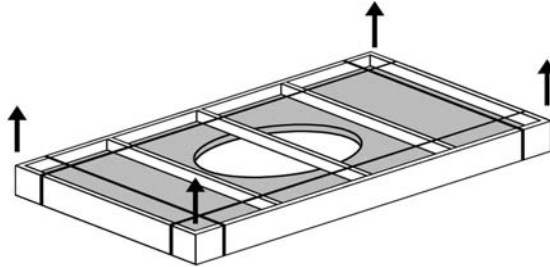

3. Examination of marble top

1. Examine the marble top for cracks or defects.



2. If defects are detected, please call 877-777-7059; do not install.

3. To clean the marble top, wipe with a soft cloth.

4. Installation of marble top

1. Always use a two man crew; a single person crew is much more likely to break or chip the marble top.

Double tops might require a 3 man crew.

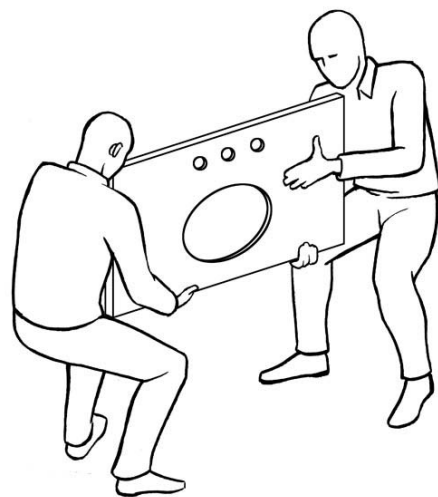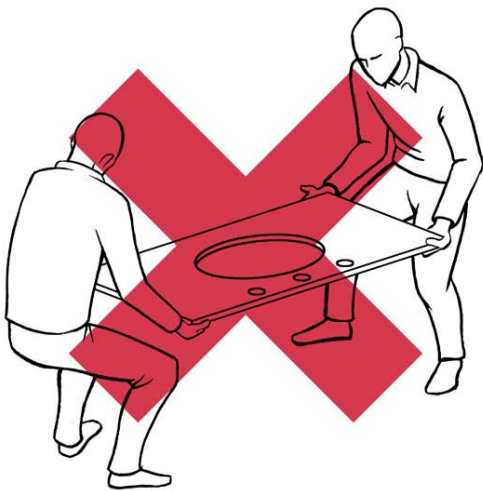

MONTEREY DECK MOUNT FLOATING DOUBLE EXTRA-WIDE VANITY ASSEMBLY INSTRUCTIONS



Caution! Installation between two walls requires special care.

2. Specific Instructions for installation between two walls

1. Set top on its edge at back of counter.
2. Lower the front of the marble top to the sink base, making sure both ends come down at the same rate.
3. Do not shimmy, twist or turn the top as you lower it. - risk of breakage!



If defects are detected please call 877-777-7059 - do not install.

MONTEREY DECK MOUNT FLOATING DOUBLE EXTRA-WIDE VANITY ASSEMBLY INSTRUCTIONS

Before You Begin:



Warning: This vanity must be installed into the wall's studs


Professional installation by two-person crew is required for this fixture. Install water supply and drain piping according to local plumbing and building codes. Insure that wall and floor are square and plumb at site of installation.

Materials Required:

1. Flat, nonabrasive work surface such as a blanket or smooth cardboard
2. Silicone

Weights:

Stone Top 280 lbs
 *Wood Top 50 lbs
 Base 190 lbs
 2 Sinks 31 lbs
 Total: *271-501 lbs

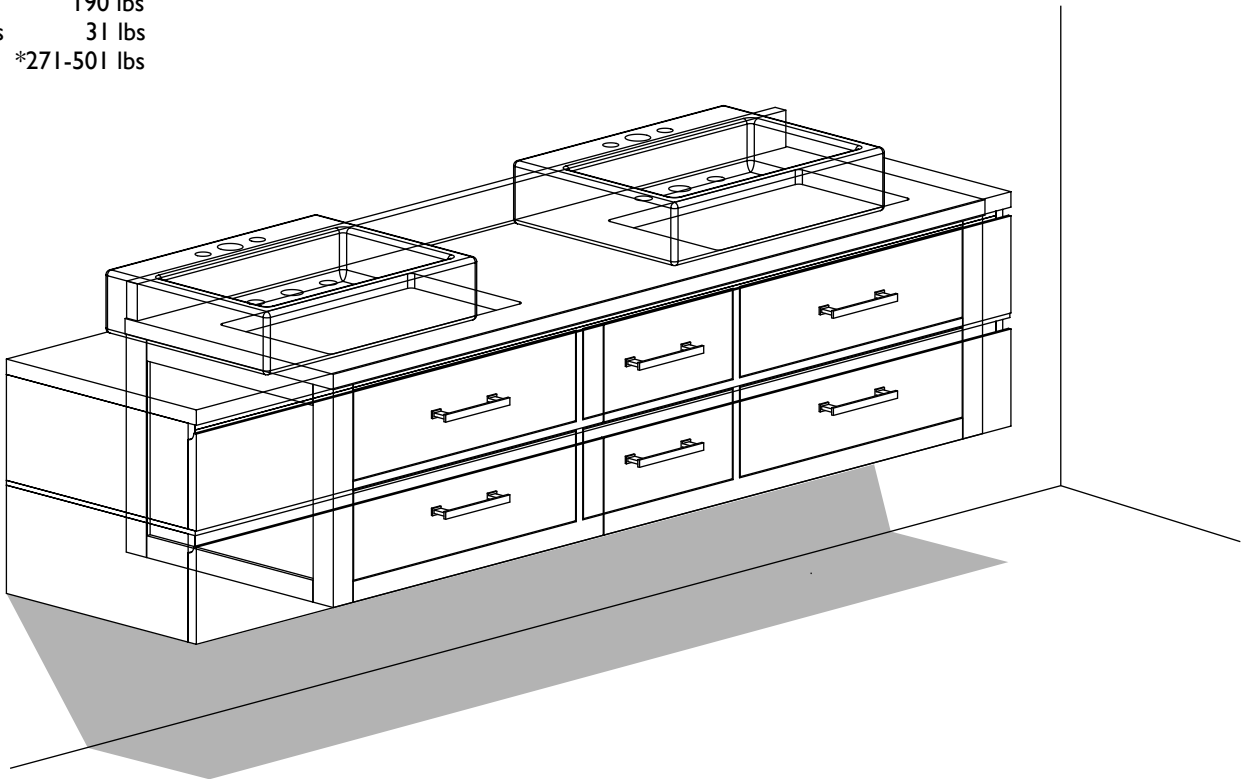

ASSEMBLED SINK


MONTEREY DECK MOUNT FLOATING DOUBLE EXTRA-WIDE VANITY ASSEMBLY INSTRUCTIONS

MONTEREY WALL MOUNT FLOATING DOUBLE VANITY SINK ASSEMBLY INSTRUCTIONS

Parts List:


A. ~~Parts List:~~ Lavatory basin (x2)

A. Lavatory basin (x2)

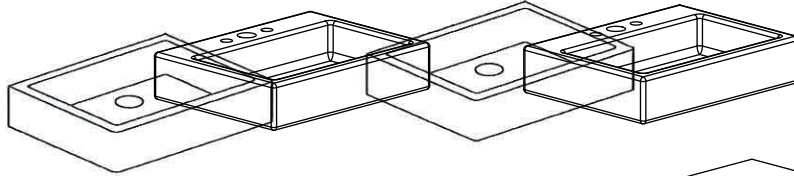


B. Stone top (sold separately)

B. Stone or wood top

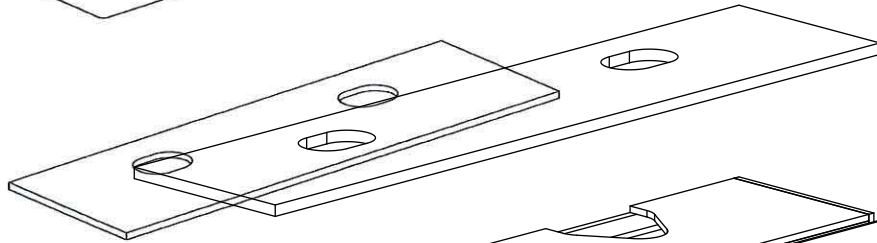


C. Vanity base

C. Vanity base

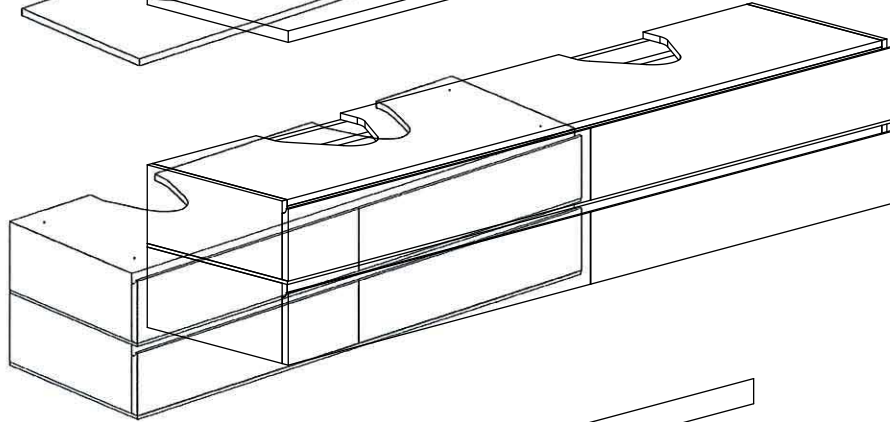

D. Hanger

D. Hanger

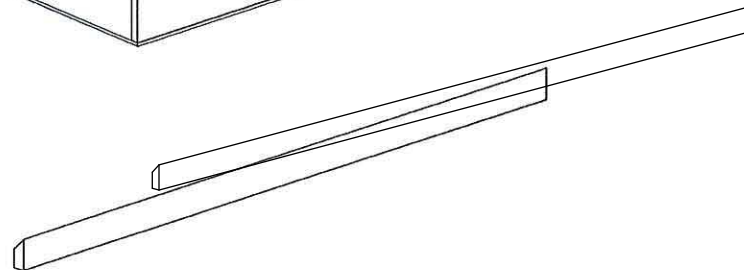

Parts Supplied for Wood Top Only:


E. Lag Screws (x12)




E. Lag screw (x12)




F. Washers (x12)




F. Flat washer (x12)




G. Allen Bolt (x4)



H. Lock Washer (x4)



I. Flat Washer (x4)
I. Flat Washer (x4)




J. Allen Wrench



MONTEREY DECK MOUNT FLOATING DOUBLE EXTRA-WIDE VANITY ASSEMBLY INSTRUCTIONS


Assembly Instructions:

1. Hold the wood hanger (E) against the wall. Adjust and mark the position using a pencil. The distance from bottom of the wood hanger to the floor is 23.75 inches. The wood hanger must cross four wall studs. The wood hanger must be level.
2. Mark the four screw holes on the wood hanger (E). Make sure the holes are in line with wall studs. Drill guide holes on each mark.
3. Use lag screws (F) and washers (G) to attach the wood hanger to the wall. Make sure the screws are secure in the studs.

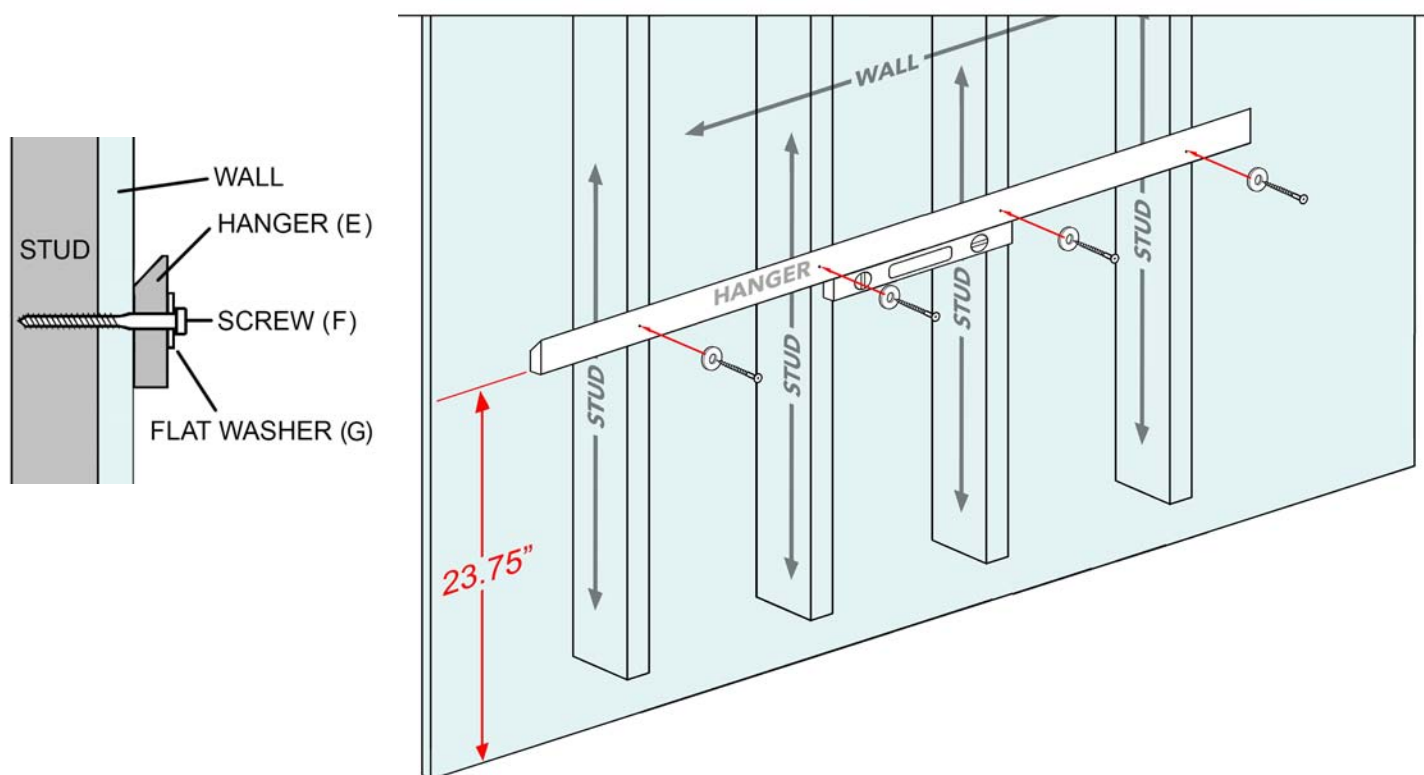


MONTEREY DECK MOUNT FLOATING DOUBLE EXTRA-WIDE VANITY ASSEMBLY INSTRUCTIONS

4. Remove drawers from vanity (D). Hang the vanity base on the wood hanger (E), holding the vanity in place with two people. Do not let the full weight of the vanity base sit on the wall hanger until the vanity base is also screwed into the studs.

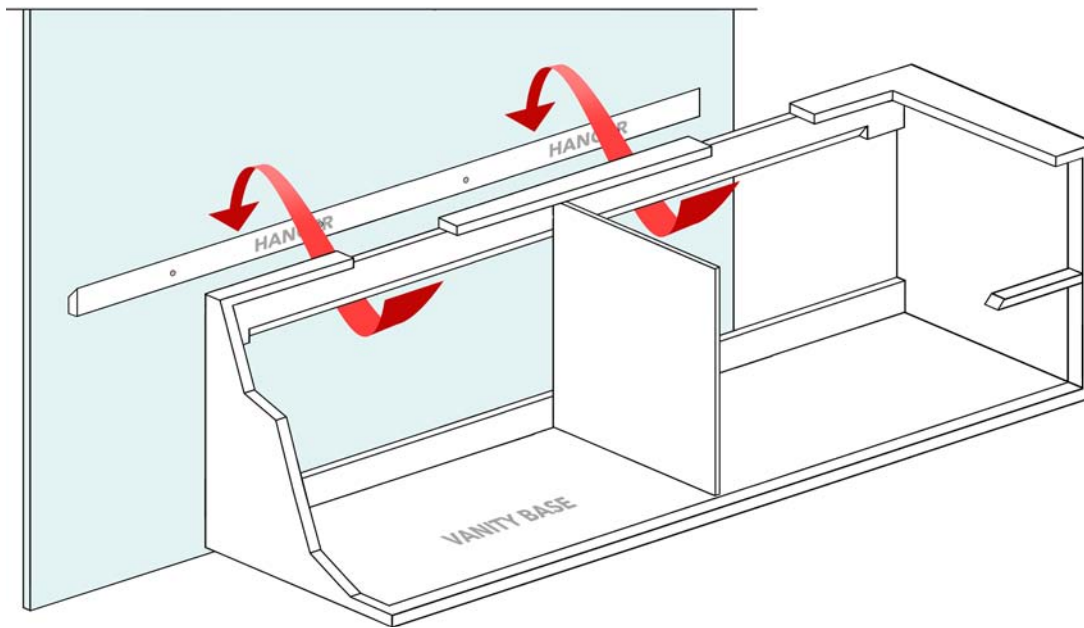


5. While two people hold the vanity base (D) in place, the third person marks screw placement in the top and bottom rails in the back of the vanity, making sure they are in line with the screws in the hanger and aligned with the studs. Then drill guide holes and secure vanity to the wall with lag screws (F) and washers (G).

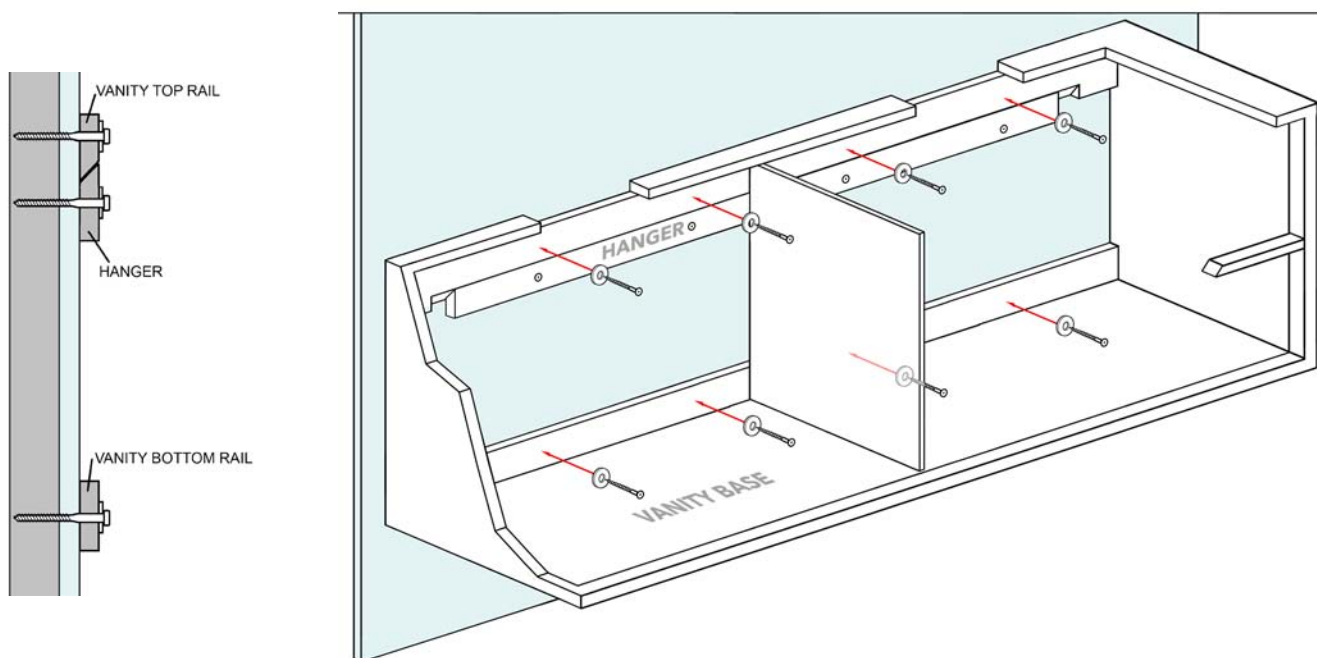

MONTEREY DECK MOUNT FLOATING DOUBLE EXTRA-WIDE VANITY ASSEMBLY INSTRUCTIONS

Assembly Instructions:

7. Apply a continuous bead of sealant to the bottom surface of lavatory basins (B) where they contact top.
8. Place the basins (B) on the top. (C). (See Illustration)

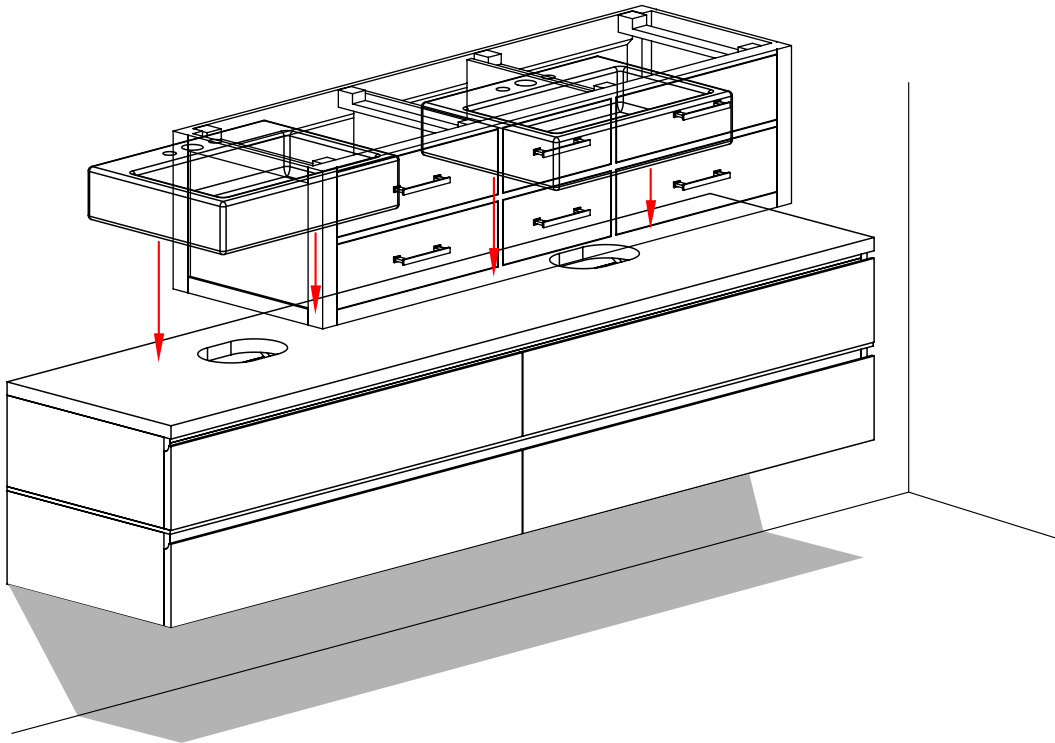

Cleaning and Maintenance Instructions:

Avoid abrasive and harsh chemical cleaners.

To maintain and protect luster of vanity sink components, Restoration Hardware Bathroom Cleaning Products are recommended.

Restoration Hardware natural stone tops have a honed finish and hand-polished edges. They are sealed twice before shipment with inert silicone sealant. For cleaning and maintenance, Restoration Hardware Stone Care Products are recommended. To maintain your natural stone top, reseal it once a year.

MONTEREY DECK MOUNT FLOATING DOUBLE EXTRA-WIDE VANITY ASSEMBLY INSTRUCTIONS

