
## MARIGNAN SCONCE

# PARTS ENCLOSED

- (A) Mounting Plate (1)
- (B) Mounting Screws (2)
- (C) Canopy (1)
- (D) Allen Wrench (1)
- (E) Canopy Screws (4)
- (F) Open Crystal Links (24) (+2 extra)
- (G) Closed Crystal Links (24) (+2 extra)
- (I) Light Bulb (1)

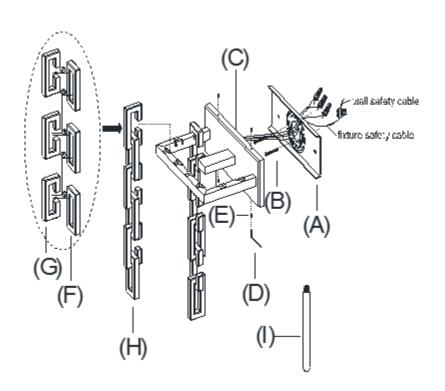



### MARIGNAN SCONCE

### IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture must be mounted to the wall independent of an outlet box. Your wall may require modification to allow the mounting plate to be secured to a structural member. This fixture MUST NOT be secured using any type of hollow ceiling anchor, such as a toggle bolt.

This fixture has been rated for up to one (1) 40-Watt maximum Type T bulb (I) (included) or one (1) 9-Watt compact fluorescent light bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

#### WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.

WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.



Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

#### **ASSEMBLY & INSTALLATION**

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

- Carefully remove all parts from the box and remove all plastic covering.
- 2. Remove Mounting Plate (A) from Canopy (C) by removing canopy screws with Allen Wrench (D) provided.
- **3.** Attach Mounting Plate (A) to wall outlet box and secure with Mounting Screws (B) provided.
- Gently pull the wiring from the wall outlet box and allow the wires to hang. Thread the wires through the center hole in the Mounting Plate (A).
- **5.** Connect the safety steel wire from the fixture and the safety cable from the wall. See illustration.
- 6. Attach the fixture ground wire and house ground wire (usually green insulation or bare wire) to wall outlet box with the green grounding screw. Connect fixtures to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
- 7. Connect the fixture neutral wires (WHITE) to the neutral outlet wire (usually white insulation) with a plastic wire connector and wrap the connection with electrical tape.
- 8. Connect the fixture hot wires (BLACK) to the hot outlet box wire (usually black insulation) with a plastic wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS; OTHERWISE, SAFETY WILL BE COMPROMISED.
- Attach Canopy (C) with light fixture to affixed Mounting Plate
  (A) secure with Canopy Screws (E). Tighten with Allen Wrench (D).
- 10. To prepare to hang the crystal links to the fixture body, connect three of the Closed Crystal Links (F) with three of the Opened Crystal Links (G). It is now called Crystal Links Kit (H); see Fig.1.
- 11. Hook the Crystal Links Kit (H) onto the light fixture in place.
- 12. Insert the recommended bulbs into sockets.
- 13. Assembly is complete.

## CARE INSTRUCTIONS

Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth.

## MARIGNAN SCONCE

### SAFETY CABLE ASSEMBLY

- 1. Remove Hex Nut from Cable Lock Nut and pull Cable Lock Nut from Safety Cable.
- 2. Join fixture safety cable with safety cable from ceiling and wrap both safety cables around the cable lock nut.
- 3. Secure by tightening both hex nuts until tight.

