

ASPEN FRENCH OAK SINGLE EXTRA-WIDE WASHSTAND

CRATE STORAGE

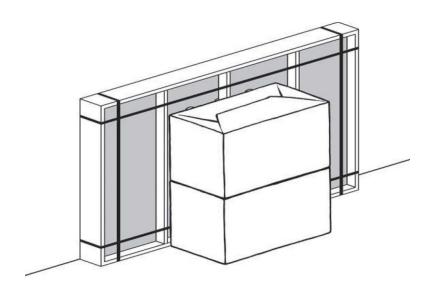

- Keep stone top in it's crate until installation
- Store crate vertically in a safe location

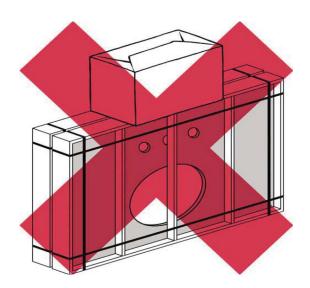

• Do not stack anything on top of crate


TOOL AND MATERIAL REQUIREMENTS

- Flat, non-abrasive work surface (blanket or smooth cardboard)
- Sealant
- Carpenter's level


ASPEN FRENCH OAK SINGLE EXTRA-WIDE WASHSTAND


PARTS LIST

A. Stone Top (Oval or Rectangular)

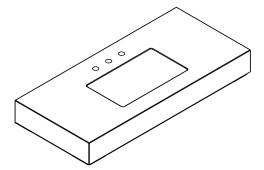


B. Basin (Oval or Rectangular)



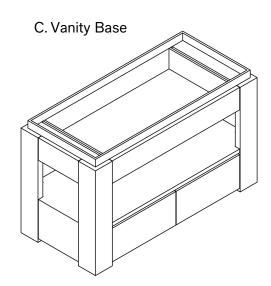


D. Mounting Bracket (x4)

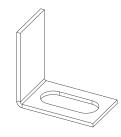

E. Lock Washer (x4)



F. Threaded Rod (x4)




G. Wing Nut (x4)




ASPEN FRENCH OAK SINGLE EXTRA-WIDE WASHSTAND

STONE TOP UN-PACKING AND TRANSPORT

WHEN MOVING STONE TOP, ALWAYS USE A TWO-MAN CREW

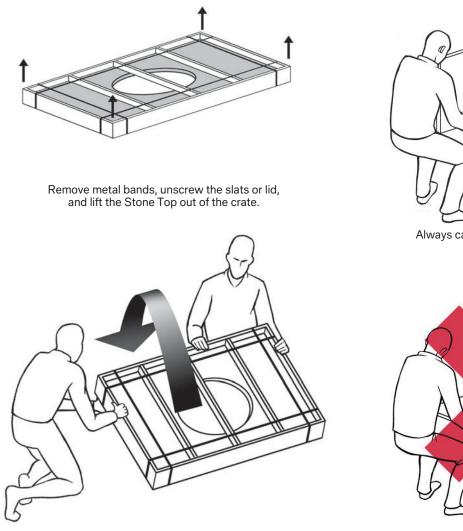

Carefully, without allowing any freefall, rotate the crate from vertical to flat.

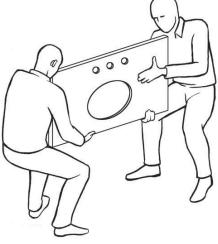

Always carry Stone Top vertically



Do not carry Stone Top horizontally as it increases the risk of breakage or cracking.

STONE TOP INSPECTION

Inspect the Stone Top for cracks or defects. If defects are detected, do not install and please call 877-777-7059. If no defects are detected; clean Stone Top with a soft cloth.

CLEANING AND MAINTENANCE INSTRUCTIONS

- Avoid abrasive and harsh chemical cleaners.
- RH Stone Tops have a honed finish, hand polished edges, and are sealed twice with inert silicone sealant
- Stone Tops should be re-sealed annually

ASPEN FRENCH OAK SINGLE EXTRA-WIDE WASHSTAND

STONE TOP INSTALLATION



Caution! Installation between two walls requires special care.

If installing Stone Top between two walls, stop here and follow the next set of instructions.


Standard Stone Top Installation Guidelines

- 1. Apply a continuous bead of sealant to the top face of the Sink Basin [B] rim where the Stone Top[A] makes contact with the basin.
- 2. Using a two-man crew, lift stone top and set in on top of the Vanity Base [C].

Stone Top Installation Between Two Walls

- 1. Apply a continuous bead of sealant to the top face of the Sink Basin [B] rim where the Stone Top [A] makes contact with the basin.
- 2. Using a two-man crew, lift stone top and set it's rear edge on the back of the Vanity Base [C] (closest to rear wall) -- see below illustration.
- 3. Lower front of Stone Top onto the vanity base, making sure both ends are lowered at the same rate.
- 4. Do not shimmy, twist, or turn the stone top while lowering as this increases the risk of breakage.



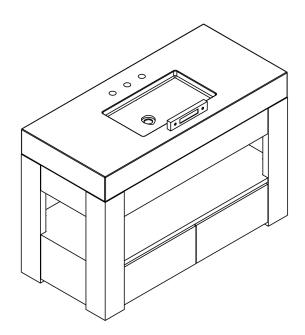


ASPEN FRENCH OAK SINGLE EXTRA-WIDE WASHSTAND

PRIMARY INSTALLATION REQUIREMENTS:

- Professional two-man crew.
- Water supply and drain piping installed according to local plumbing and building codes (sold separately).
- Wall and floor are square and plumb at installation site.
- Vanity Base installed square and plumb with wall and floor. Vanity Base also needs to be level.
- Ensure Stone Top is the correct size to match the Vanity Base.


BASIN INSTALLATION STEPS:


- 1. Apply a continuous bead of silicone sealant to the top surface of lavatory basin rim where it comes in contact with the underside of the Stone Top [A] (see illustration below).
- 2. Position Basin [B] in it's final location and make sure overflow of basin is located on the same side as the pre-drilled faucet holes in the Stone Top.
- 3. Align the Threaded Rod [F], Locking Washer [E], and Wing Nut [G] with pre-installed threaded insert in the stone top and secure on all 4 points with the Mounting Bracket [D].

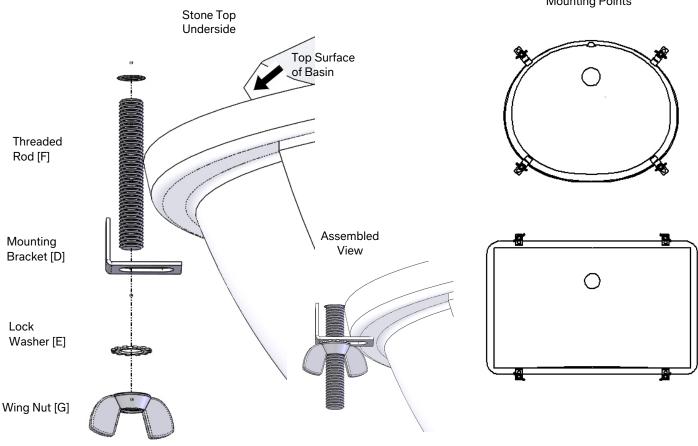



(x4) Basin Mounting Points

ASPEN FRENCH OAK SINGLE EXTRA-WIDE WASHSTAND

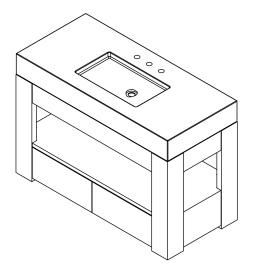


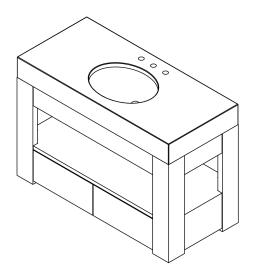

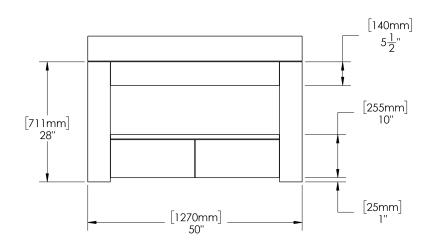


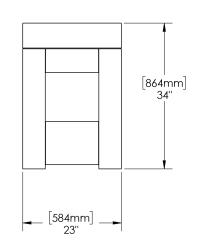


ASPEN FRENCH OAK SINGLE EXTRA-WIDE WASHSTAND



RECTANGULARSTONE TOP

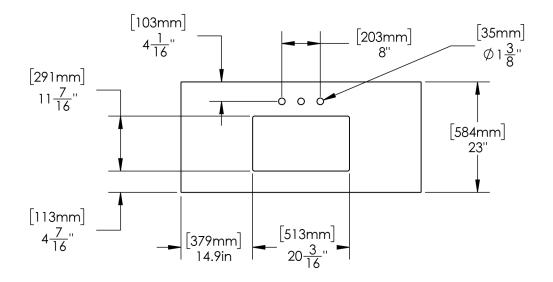



OVALSTONE TOP

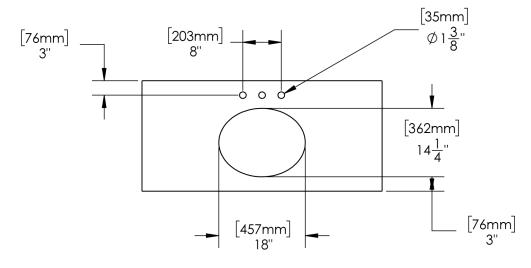

ASPEN FRENCH OAK SINGLE EXTRA-WIDE WASHSTAND


RECTANGULAR BASIN

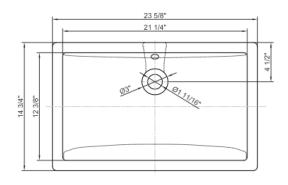

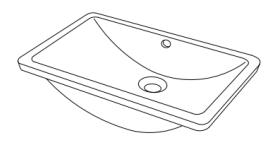


TOP VIEW

3D VIEW

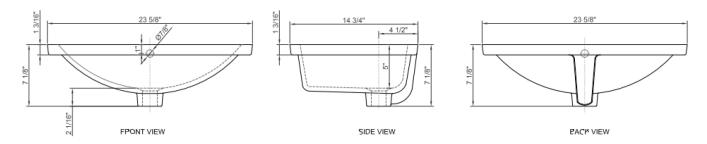


OVAL BASIN


17 1/4

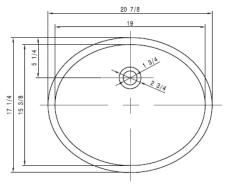






FRONT VIEW

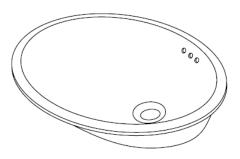

3D VIEW

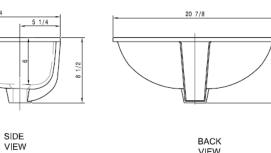

BACK VIEW

8 1/2